


**LOCATION OF CONTROLS**

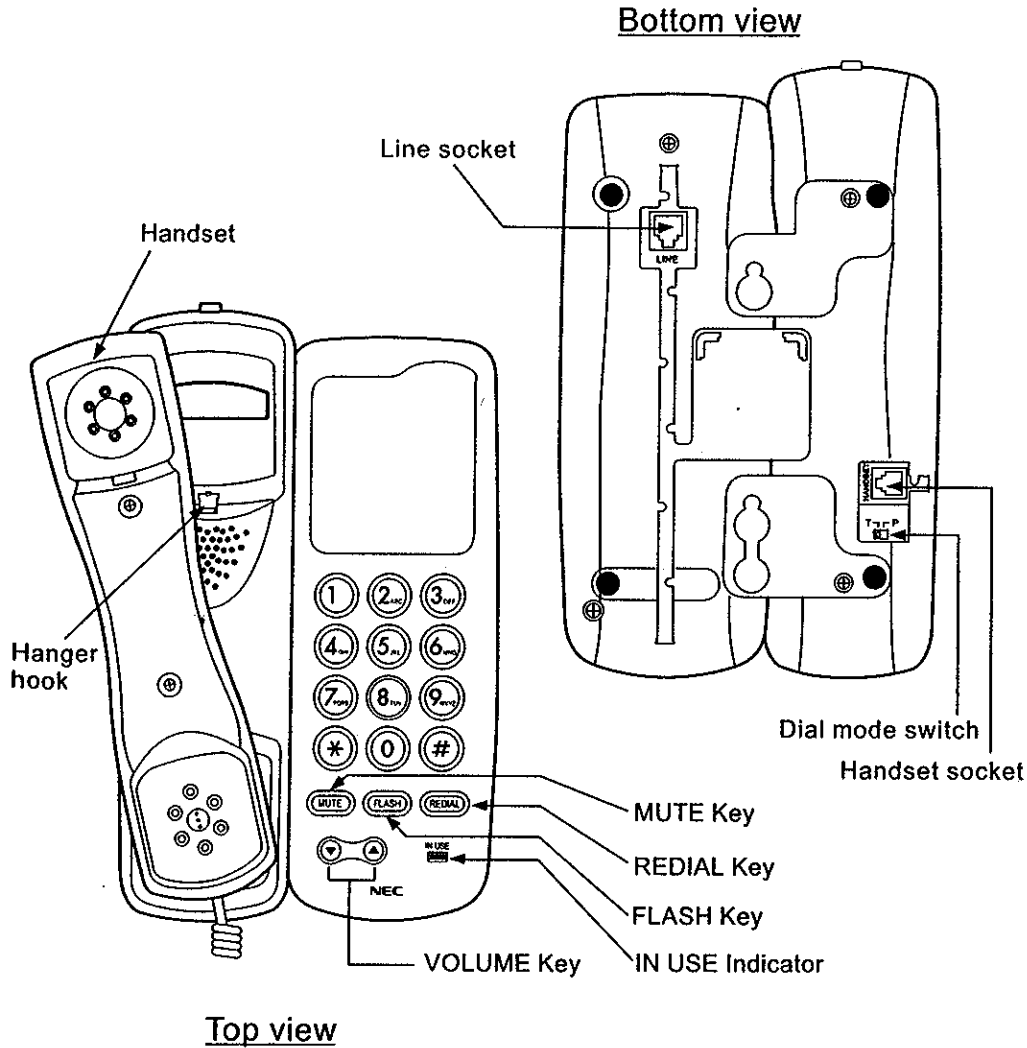

**CONNECTION TO THE TELEPHONE LINE**

Connect the line cord to the bottom of the AT-40 and to PABX/KTS Extension Socket.

*Note : Use the AT-40 TEL only behind a PBX or a KTS.*

**DIAL MODE**

Either "T (Tone/DTMF)" or "P (Pulse/DP)" mode is selected by Dial Mode switch which is located on the bottom side of AT-40.

*Note : Confirm PABX/KTS Supplier.*



**TELEPHONE RINGER SET UP**

There are three different ringers available and three different volumes for each ringer. One of ringers and volumes can be assigned by the following operation.

1. Lift Handset.
2. Press MUTE Key.
3. Dial "#"
4. Select a number 0-9 from the table.
5. Press MUTE Key.
6. Hang up to finish.

Dial	Ringer Type	Volume
1	A	Low
2	A	Mid
3	A	High
4	B	Low
5	B	Mid
6	B	High
7	C	Low
8	C	Mid
9	C	High
0	-	Off

*Note : If you disconnect the phone from the network, ringing tone assignment will be back to default in a few hours.*

**MAKING A CALL**

1. Lift Handset. The IN USE LED will illuminate.
2. Wait for the Dial Tone and then dial the telephone number.
3. Hang up to terminate the call.

*Note : Trunk Access Code dialling is necessary before dialling the telephone number in case AT-40 is connected to the PABX/KTS*

**FLASH**

1. While on a call, press FLASH Key.

*Note : In case AT-40 is connected to the PABX/KTS, you can send the "Flash" by pressing FLASH Key.*

**VOLUME CONTROL**

The handset earpiece volume can be adjusted in 5 stepped increments during a call.

Press ▲ to increase the volume, or ▼ to decrease the volume.

**MUTE**

1. While on a call, press MUTE Key to mute.
2. Press MUTE Key again to resume conversation.

**LAST NUMBER REDIAL**

1. Lift Handset.
2. Press REDIAL Key.

*Note : If you disconnect the phone from the network, redial memory will be erased in a few hours*

**WALL MOUNTING**

The AT-40 is suitable for wall mounting. Check for hidden cables, water pipes, etc. before drilling holes. Before you commence check that the intended mounting point is within reach of a Telephone Socket.

1. Use the template to mark the position of the two screws (not supplied) which will secure the AT-40 in position.
2. Drill the holes.
3. Fit the supplied screws to the wall, leaving 3.3 mm sticking out (use raw plugs is necessary, not supplied).
4. Place AT-40 in position and locate the two holes on the base of the telephone cover the screws, then slide into place.

*Note : When the AT-40 is wall mounted, the hanger hook (with serrated top) located on the base directly below the circular ear-piece resting point, must be removed, rotated 180 degrees (so that the lip protrudes) and replaced.*



**WALL MOUNTING TEMPLATE**

