

Digital Room
Thermostats fuse 6 A

INSTALLATION MANUAL

APPLICATION

DR is a serie of Digital Room Thermostats, provides a single stage, temperature control. Table 1 shows all the available models. All models can be provided with 24, 120, 220 Vac.

| Model | Operation | Cooling / Heating | Compressor delay |
|-------|--------------------------------|------------------------------|--------------------|
| 01 | cool + sweep | Compressor | yes |
| 02 | cool + sweep | Chilled water | no |
| 03 | cool - fan - dry | Compressor | yes |
| 04 | cool - fan - dry | Chilled water | no |
| 05 | cool - fan - dry - heat - auto | Compressor / Heat pump | yes |
| 06 | cool - fan - dry - heat - auto | Compressor / Electric heater | yes, only for cool |
| 07 | cool - fan - dry - heat - auto | Hot / Chilled water | no |

Table 1. Serie of Digital Room Thermostats.

These thermostats are mercury free and require no battery. All set points are kept permanently by non-volatile memory.

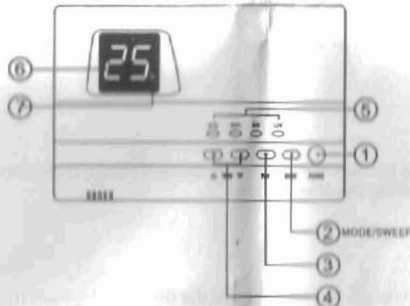


Fig. 1. Digital Room Thermostat.

Model No. Legend

When ordered, put all the information in the Model No. Legend.

DR - - VAC

Model No. Voltage

Voltage supply : 24, 120, 220 Vac.

DR - SERIE

SPECIFICATIONS

| POWER SUPPLY | |
|--|-------------------------|
| 24 VAC system | 18 – 30 VAC, 50/60 Hz |
| 120 VAC system | 96 – 144 VAC, 50/60 Hz |
| 220 VAC system | 198 – 250 VAC, 50/60 Hz |
| TEMPERATURE : | |
| Temperature accuracy | ± 1 °C |
| Storage temperature | 0 – 70 °C |
| Ambient temperature | 10 – 50 °C |
| Setting temperature range | 18 – 30 °C (64 – 88 °F) |
| FAN RELAY, HEAT and COOL RELAY : (P1-P5) | |
| Rating (inductive load) | 4 A 250 VAC |
| • <i>Maximum switching capacity</i> | |

INSTALLATION

Read these instructions thoroughly before installing product. Failure to follow these instructions could damage the product or cause a hazardous condition. Check the voltage and current ratings on the product to ensure that it is suitable for your application. Installer must be a trained, experienced service technician. Check product for proper operation after installation.



Damage to heating and cooling system may occur. Disconnect power from the equipment at the main breaker/fuse block while installing the thermostat.

Mounting Location

 
Mount the thermostat approximately 5 ft. (1.5m) above the floor in a location that is free from direct sunlight, heat from appliances, hot or cold air from ducts, concealed pipes and chimneys, and drafts or dead spots behind doors or in corners. Do not mount on exterior wall, if possible. Failure to locate thermostat mounting as indicated will result in poor temperature control.

Note : Level thermostat mounting is for appearance only and is not required for proper thermostat operation.

- Cool Mode : LED at ⑥ will show **CO** in blinking for 5 seconds
- Dry Mode : LED at ⑥ will show **dy** in blinking for 5 seconds
- Fan Mode : LED at ⑥ will show **FO** in blinking for 5 seconds
- Heat Mode : LED at ⑥ will show
 - **HP** in blinking for 5 seconds if the Heat Pump version is ordered.
 - **HE** in blinking for 5 seconds if the Electric Heater version is ordered.
 - **HO** in blinking for 5 seconds if the Hot water pipe version is ordered.
- Auto Mode : LED at ⑥ will show **RU** in blinking for 5 seconds. The system will automatically switch from Cool to Heat mode or vice versa.

Fan

Press FAN button to select the fan speed in the following sequence.

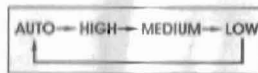

LED at ⑤ will show the status of the fan.

Auto mode

The speed will be adjusted according to the difference between the room and the setting temperature.

- If the difference is 3°C or more, the fan will run at high speed.
- If the difference is 2°C, the fan will run at medium speed.
- If the difference is 1°C, or lower, the fan will run at low speed.

Temperature setting

Press TEMP Δ or TEMP ∇ button for setting the temperature in a range of 18 - 30°C or 64 - 88 °F.

LED at ⑥ will show the new setting for 5 seconds.

Compressor delay

In a model with compressor delay feature, there will be 3 minute time delay before the compressor can restart.

Compressor status

LED at ⑦ shows the status of the compressor/valve/heater.

Sensor Error Alarm

If the room sensor is open/short circuit, the controller will stop the compressor or any heating equipment and dot on 7-segment will blink.

Auto Restart

All the setting parameters are kept in the non volatile memory. When there is a power failure and back to normal, the system will resume its operation with the same setting parameters.

Mount and Wire the Thermostat

Tighten two appropriately sized screws on the wall or on the 2x4 in. junction box. Keeping 1.50 mm distance from the wall. See Fig. 2.

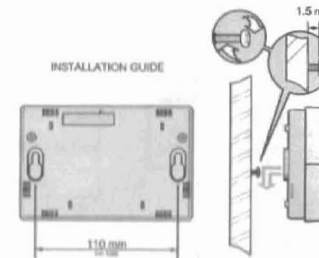


Fig. 2. Tighten screws on the wall.

Mount the thermostat on the wall by having it on the screws. See Fig. 3.



Fig. 3. Mount the thermostat.

Lift and open the cover, pull it up to remove. See Fig. 4.

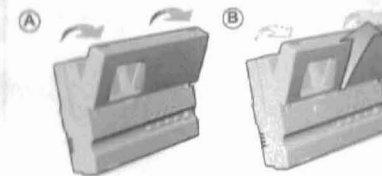


Fig. 4. Remove the cover.

Use cable size 0.5-1 sq. mm connect the wires from heating /cooling equipment to the terminals on the thermostat. See wiring diagram (Fig. 8 & 9) for location of thermostat terminals.

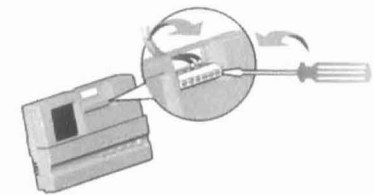


Fig. 5. Connect system wires to thermostat terminals (strip 5/6 inch).

Put the cover back. See Fig. 6.

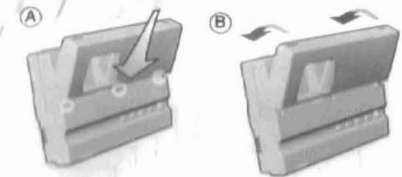


Fig. 6. Put the cover back.

Tighten screw to secure the cover. See Fig. 7.



Fig. 7. Tighten the screw.

WIRING DIAGRAM

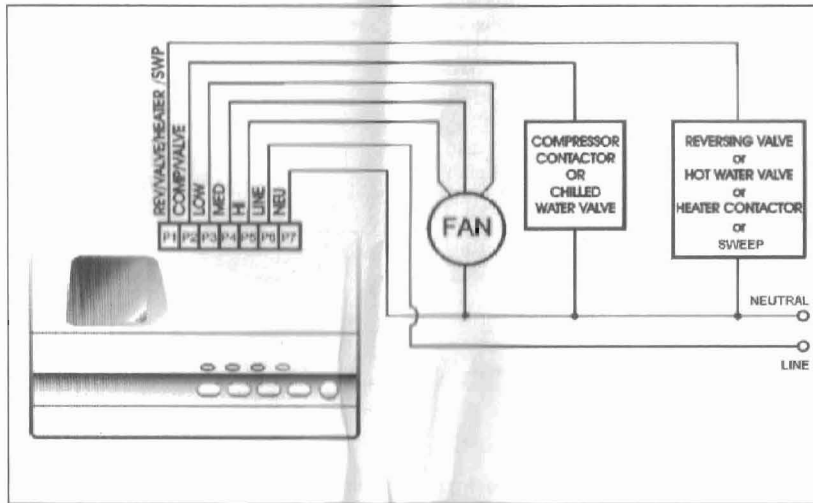


Fig. 8. For 120 or 220 Vac system.

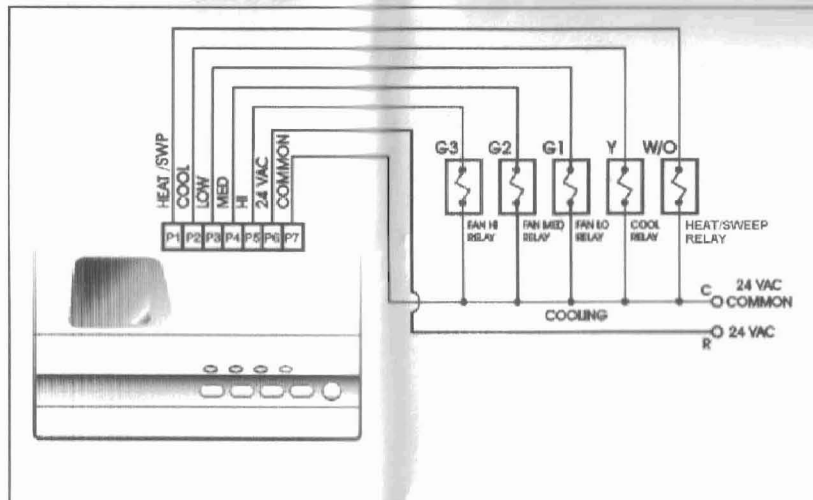


Fig. 9. For 24 Vac system.

SET UP

All thermostats are factory set up according to the Model No. Legend listed on the back side of the plastic casing. However it can be alternated by the programming.



WARNING

Failure to set up according to the application may damage the heating and cooling system.

Set up mode

Press and hold TEMP Δ and TEMP ∇ and FAN buttons at the same time for 3 seconds, the display will show the existing set up as per Table 2.

| Display | Not blinking | Blinking |
|---------|---------------------|---|
| P1 | Heat /Cool | Cool |
| P2 | Electric heater | No electric heater |
| P3 | $^{\circ}\text{F}$ | $^{\circ}\text{C}$ |
| P4 | No compressor delay | Compressor delay |
| P5 | Sweep | No sweep |
| P6 | No offset | Room temp offset -2°C (default) |

Table 2. Set up table.

Example 1 : the display shows P1 without blinking means the set up is now for Heat / Cool version.

Change the set up

- While in set up mode, press TEMP Δ or TEMP ∇ button to the required set up program.
- To change the set up to the other version as listed in Table 2, press FAN button.
- Repeat (a) & (b) for the next set up.
- Press MODE or SWEEP button to exit from the set up mode.

Note : If POWER button is pressed before exiting from the set up mode (Section d above), the system will exit from the existing mode without changing the setup program.

OPERATION

Power

Press POWER to turn on/off the air conditioner. When turn on, it will operate according to the last program setting.

 
Mode/Sweep

For Cool + Sweep version, button ② is a SWEEP button used to turn on/off the sweep motor.

For other versions, this is a MODE button used to select the operation mode.



Cool only model.

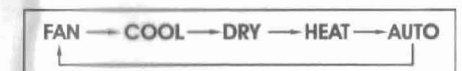

Heat/Cool mode.