

7. Operation procedure

7.1 Inspection before Operation

Please check any damage of products and accessories, any blockage of filter and nozzle, any abnormal for assemble or connection before your operation.

7.2 Correct usage

1. put the inlet pipe into the bucket with clean water inside.
As shown on the below picture.

Inlet Hose



Make sure inlet hose is in the bucket, start the machine in "COOL" mode to avoid machine in dry running and get in dry burning protection. "STEAM" MODE must be used with clean water.

2. Plug in correct AC power, then make the leakage testing. Start the operation after LCD display lights and Voice prompts
3. Put the spray nozzle towards the bucket, then select your cleaning function-mode (COOL, HOT, STEAM, DISINFECT, PULSE) through touching keys on LCD or Multi-function Spray Gun, adjust the pressure and temperature according your requirement.
4. 220°spinning gun should be just used in "HOT" and "COOL" mode. Direction can be adjusted by left or right turning, water shape (columnar or mist) can be adjusted by nozzle switching.
5. Please switch to "COOL" mode and last for 10seconds after use "STEAM" or "HOT" mode, to cool down the inner heater quickly.
6. 140°C-150°C is in big "STEAM" mode, 130°C-140°C is in small "STEAM" mode.
7. Press "RESET" key on the PLUG for short-time shutdown.


8. Troubleshooting

Problem	Cause	Action
No lighting when plug in	Plug loose or switch plug "OFF".	Plug loose or switch plug "ON".
Stop working during operation	Circuit or Socket's overloading	Use the high-loading circuit or socket
Low pressure of nozzle	Air in the pipe	Disassemble the spray gun and fit again after the machine start working.
	Blockage in the filter	Clean the filter
	Dirt inside the nozzle	Clean the nozzle.
No water coming during the operation	Blockage inside the water pump	Fill with water into pipe and pump until outlet overflows, then it will resume normal working.
	Inlet filter blockage	Clean filter
No steam or big and small in sudden.	Inlet pipe are not in the water	Put the inlet pipe into water and start working with "COOL" mode
	Inlet filter blockage	Clean filter
	Overheat protection	Re-start after 20m shutdown cooling
	Dirt water	Use the clean water
Water Leakage	1. loose connection 2. sealing losing	1. fasten the connection 2. change sealing
	1. Air inside in the machine 2. Inner spare parts damaged	1. check the water level or pipe's damage 2. disassemble and repair

⚠ Attention: if "high temp" warning occur frequently, please contact with manufacturer and solve the problem timely.

STEAM CLEANING MACHINE PCW OPERATION MANU

- 30 seconds of heat up time
- Kills 99.99% of viruses and bacteria
- High-pressure & strong power steam
- Pure physical sterilization

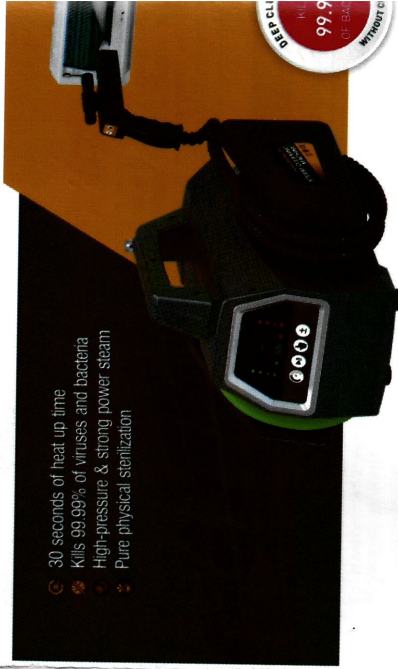

Please read this instruction carefully before using this product and keep this manual carefully for future reference.