


# Operating Instruction

# Honeywell

Model. WFS-1001-H, WFS-1002-H, WFS-1003-H

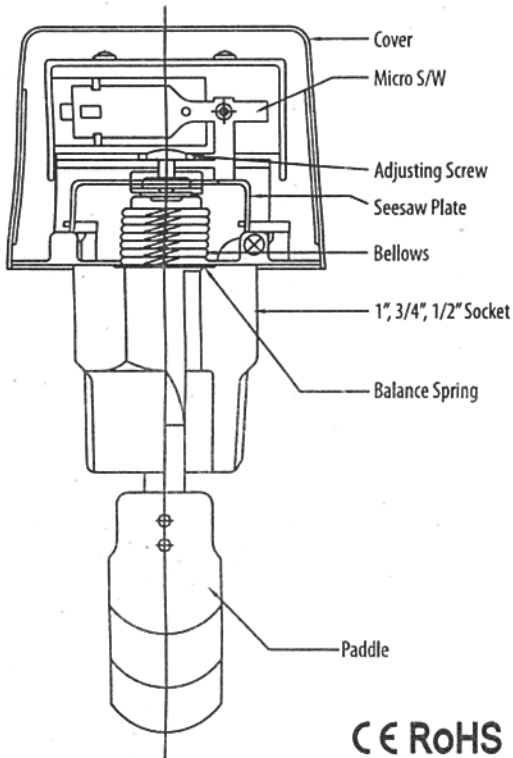


CE RoHS

## Installation

Flow control of paddle type should be installation in horizontal pipe line on red cover upright position only. and should be use the pipe tee or coupling on the horizontal -pipe line with right side typical install picture.

### Typical Installation

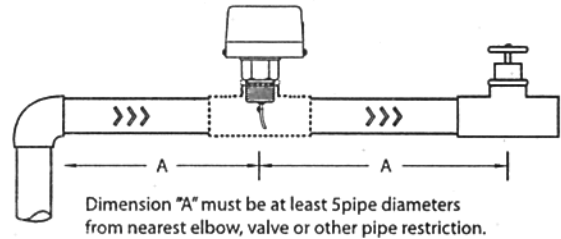

### Electric Connection



The word as "FLOW" means that microswitch's contact will COM. with N.C closed position and "NO FLOW" means that micro switch contact will COM with N.O closed position.