

# MAGNUN

# A/C

UNIVERSAL  
REMOTE CONTROL  
MN-B02

MN-B02 Brand Code Table

Brand	Model Code
AUCMA	0288-0296, 0462, 0801
AUX	0297-0300, 0451, 0474, 0475
BOERKA	0383, 0434, 0436, 0437
CARRIER	0203-0209, 0456-0458, 0482-0486
CHANGHONG	0301-0308, 0814, 0820
CHIGO	0379-0382, 0489, 0516, 0890, 0893
CHOFU	0184-0187
CHUNLAN	0345-0350, 0450, 0453, 0965
CONROWA	0377, 0879, 0889
DAEWOO	0203-0209, 0406, 0466, 0717
DAIKIN	0171-0183, 0566, 0683, 0692, 0978
DOCTOR	0211, 0449, 0713
DONGBAO	0355-0361, 0868
DONGXINBAO	0413, 0925
Electrolux	0107, 0216-0220, 0560, 0728, 0732
FRESTECH	0277, 0519, 0520, 0789
FUJITSU	0127-0137, 0464, 0647, 0976
GALANZ	0371-0372, 0521, 0884
GUQIAO	0244, 0291, 0782
GOLDSTAR	0201, 0466-0469, 0981
GREE	0309-0316, 0482, 0512, 0513
HAIER	0266-0272, 0453-0455, 0966
HISENSE	0332-0335, 0517, 0845
HITACHI	0118-0126, 0630, 0637
HUABAO	0336-0344, 0849, 0858
HUAKE	0408, 0920
HUAMEI	0402, 0460-0465, 0705, 0977
HUAKLING	0317-0325, 0452, 0605, 0964
HUIFENG	0370, 0882, 0996
HUIKANG	0368, 0441-0443, 0953
HYUNDAI	0202, 0433, 0480, 0992
JDC	0373, 0440, 0952
JIANGNAN	0432, 0693
KINTAR	0414, 0506
JINSONG	0389-0391, 0446-0448, 0901
KANGLI	0374-0375
KELON	0282-0287, 0473, 0485-0488
KONKA	0397, 0457-0459, 0971
LG	0197-0200, 0514, 0711
LINGYU	0233, 0451
LITTLE DUCK	0015-0020, 0528

Brand	Model Code
MIDEA	0260-0265, 0526, 0653, 0775
mitsubishi	0001-0045, 0476-0479, 0522, 0523, 0568, 0582, 0990
NORITZ	0431
National panasonic	0138-0154, 0483, 0490-0492, 0652, 0736, 0995
PANDA	0378, 0890
PHILCO	0210-0211, 0487, 0488, 0723, 1000
PROTON	0421-0423
RAYBO	0362-0367, 0877
ROWA	0369, 0438, 0439, 0527, 0531, 0587, 0950
SAMPO	0424-0426, 0960
SAMSUNG	0188-0195, 0515, 0516, 0700, 0707
SANYO	0046-0095, 0529, 0530, 0568, 0606
SHANGLING	0384-0388, 0444, 0445, 0897, 0957
SHANXING	0392, 0449, 0689
SHARP	0096-0106, 0525, 0608, 0617, 0893
SHENG FENG	0376, 0480, 0713, 0992
SHINCO	0351-0354, 0454-0456, 0985
SHUANGLI	0376, 0404-0407, 0480, 0992
SHUAIKANG	0288
SOVA	0409, 0410, 0719
SUMMER	0257, 0505, 0769
SWAN	0434, 0477, 0515, 0524, 0946
TADIRAN	0419, 0420, 0883
TCL	0273-0281, 0476, 0493, 0785, 0793
TECO	0256, 0473-0475, 0986
TIANDI	0415, 0883
TOSHIBA	0107-0117, 0489, 1001
TRANE	0227-0232, 0743
WEILI	0393-0396, 0907
WHIRLPOOL	0164-0170, 0502, 0682
XINLENG	0411, 0412, 0652, 0923
XINLE	0400, 0401, 0685, 0913
YANGZI (YAR)	0403, 0915
YINYAN	0258, 0259, 0326-0331, 0478, 0843
YORK	0238-0243, 0573, 0752



CE

1Pcs

# MAGNUN

# A/C

UNIVERSAL  
REMOTE CONTROL  
MN-B02



PRODUCT NO.  
12033



# MAGNUN

## MN-B02 universal A/C remote control user's Guide

### Product Description

MN-B02 is the latest product, it is a brand universal remote with several patent technologies which is invented by our engineers: select brands by double key and patent code setting. Place batteries, it can work for almost all brands all of the world without setting. It has clock accurate, timer on and off, setting easy. It is the best choice for you to replace the remote. Thanks you for choosing our remote, it is honored that we can provide conveniences for your life.

Please read this manual carefully before using, which will be a great help for you to use the remote control.

### Setting

#### Brand searching

Put 2 AAA (UM-4, R03) batteries as per polar indicated on battery cabin. Choose one of the setting methods as below.

Press "select" and brand button at the same time, screen displays "—" and blinking three times, setting complete.

For example,

If your air conditioner brand is "DAIKIN", press "select" and "DAIKIN" for 1 second, and release, then it can work for your air conditioner.

If it cannot work, please turn on your air conditioner, and put the remote aim to the air conditioner, press and hold the brand button, when air conditioner sends a sound as feedback, release the button. Check whether every button works, if not, repeat above steps until it works.

For example,

If your air conditioner brand is "DAIKIN", put our remote aim to the air conditioner, press and hold DAIKIN button, when air conditioner send a sound as feedback, release the button then it can work.

#### Brand code setting

1、Find out the codes from code table, there are many groups codes of each brand. Please try the first group, if it does not work, try the second, and do it like this until the codes can operate your equipment. Ex: AUCMA, you can choose 0288, if it does not work, please try the 0289.

2、Press "select" key, the code on LCD flashes. Press code "+" or "-" key until required brand code appears, then press "ENTER" key, the brand code stops flashing. Aim at air conditioner by pressing ON/OFF key, you can control your air conditioner.

#### Automatic search

If you do not know the brand of your air conditioner, or if your brand is not listed in the code table, please operate as per following steps:

1、Put the remote control aim at your air conditioner, press the "SELECT" key for 5 seconds and then release, remote control is entering the auto-search status, emit the signal continuously, the code flashes and increases. While the air conditioner receives the signal, and send one buzzer, press any key to confirm.

2、Turn on the air conditioner, try other keys whether they work or not, if it works, setting succeeds, if it does not work; repeat these steps until it can use for your equipment.

### Clock set up

- 1、Press the "clock" button, it is blinking.
- 2、Press the "+" "-" of the "time" button, setting to the current time.
- 3、Press the "clock" button again, stop blinking, the time setting is complete. (If you did not press the "time" button, it can be setting automatically after 5 seconds)

### TIMER ON AND OFF

You can set timer off, only after turning on your air conditioner.

- 1、Press the "TMR off" button, the LCD displays the clock signal and time blinking.
- 2、Press the "TIME/CODE" "+" or "-" button; adjust the time when you want to make the air conditioner turn off automatically.
- 3、Time blinking and it will stop after 5 seconds. The LCD displays current time and clock signal. Now setting is complete.

### Attention

- 1、If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.
- 2、As usual the LCD only display the time when pressing model codes "Enter" button, you can find the code and it is showed on LCD. After 5 seconds it returns time.
- 3、Check carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
- 4、The manufacturer keeps the right to change the parameter and function of product.

### Technical Parameters

**Controllable distance:** Large than 8 meters **Power supply voltage:** DC3V  
**Battery model:** Battery AAA(UM-4, R03)×2  
**Dimension:** L133mm×W45mm×D25mm  
**Weight:** Approx52g (excl.the batteries)

★ The final explanatory right is reserved this company. Any alteration on the design and model will not be further notified.