

## MAINTENANCE

Before maintenance must disconnect the unit from power source.

screwdriver, then insert new brushes and tum brush covers to tighten. brushes when it's shorter than 6mm. Remove brush covers and brushes by Check the carbon brushes at regular intervals. It's must be replaced with new

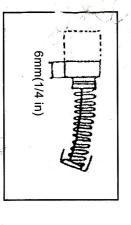

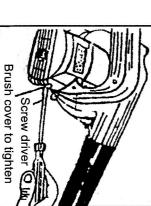

# ELECTRIC BLOWER

## **NSTRUCTION MANUAL**





Read through carefully and understand these instructions before use.

## FOR SAFE OPERATION

- When the unit is not to be used, place it in room. Never expose it to rain
- As the unit is operated the operator must wear a providing cap, eyeglass and cover mouth.
- Before connecting the unit to a wall outlet, check that the marked voltage on name plate of the unit is same with local power source. If not, the unit may be damaged.
- Do not use the unit in the places where there is any inflammable liquid or
- Do not suck up burned tobacco end and just cutted shred of metal.
- Do not direct the nozzle to nearby anybody.
- To prevent the fan is damaged due to increased speed of the motor, do not obstruct the suction port and outlet of wind.
- Do not pull on the power cord to disconnect the unit from the mains outlet or to move it.
- Keep the power cord away from high temperature substance, such as shred of metal and grease.

#### **FEATURES**

No operator fatigue from long use because it's small in size and light in weight. Powerful motor produces great wind pressure and volume to double work efficiency.

Double insulated for safety and convenience.

The unit is used for cleaning or coldshouldering machines and instruments of various industries.

### HOW TO USE

When use for blowing with nozzle attached to outlet of wind by c.w.tum the nozzle.

When use for suction, with nozzie attached to suction port and dust bag attached to outlet of wind.

Pressing the switch button, the unit is started. Loosing the switch button, the unit is stoped. When lock butto is pressed after unit is started, the unit can continually work and the unit can be stoped if press the switch button again.

