


CULMI Vacuum Pump Component Exploded View

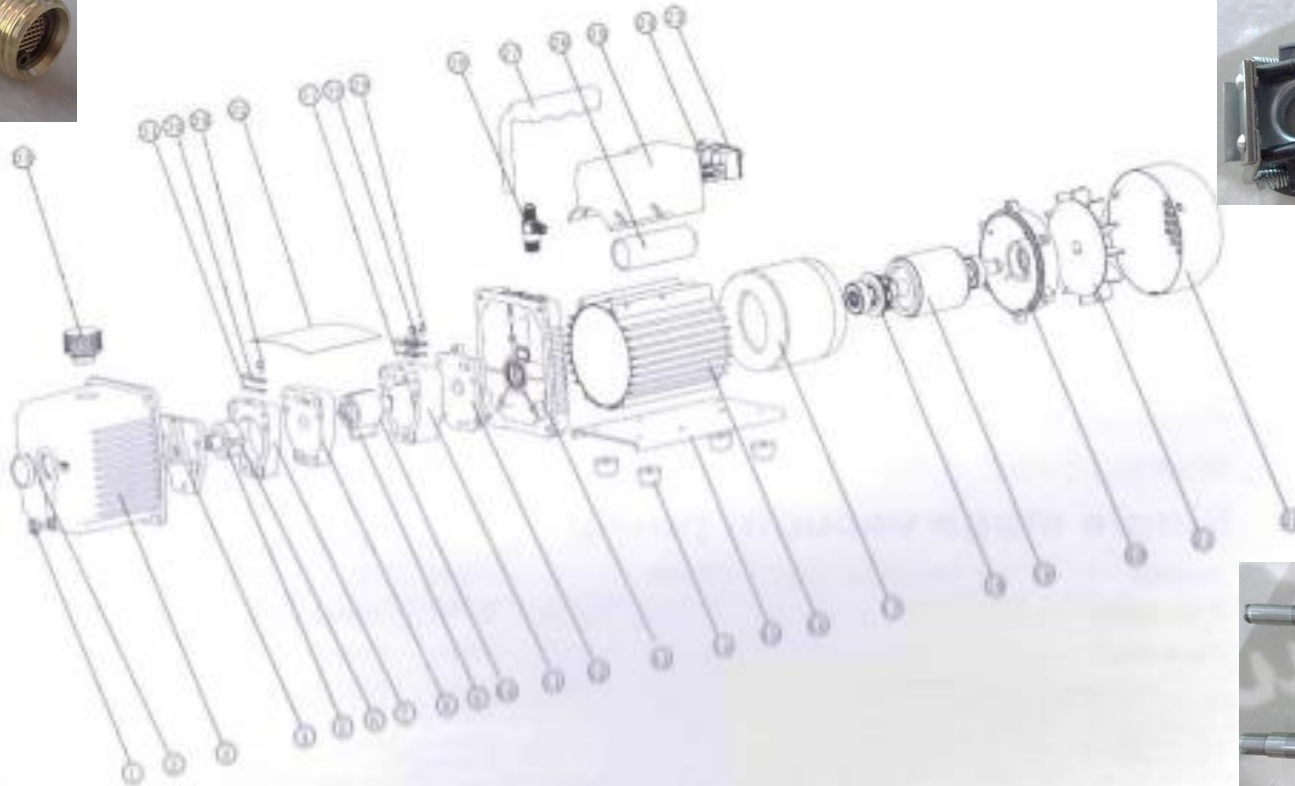

1. OIL DRAIN VALVE	12. PUMP FRONT COVER	23. POWER SWITCH
2. SIGHT GLASS	13. TRESTLE	24. SOCKET
3. HOUSING	14. RUBBER FOOT	25. CAPACITOR
4. PUMP BACK COVER	15. BASE	26. CAPACITOR BOX
5. PUMP BACK ROTOR	16. MOTOR HULL	27. HANDLE
6. BACK ROTARY VANE	17. MOTOR STATOR	28. INLET FITTING
7. PUMP BACK STATOR	18. BEARING	29. SCREW
8. MIDDLE FENCE	19. MOTOR ROTOR	30. RETAINER
9. FRONT ROTARY VANE	20. MOTOR COVER	31. VALVE PLATE
10. PUMP FRONT ROTOR	21. FAN	32. CAP BOARD
11. PUMP FRONT STATOR	22. FAN COVER	33. EXHAUST FITTING

