

# instruction manual

**CEILING FAN** 

For model: Heritage

## **TABLE OF CONTENT**

Itei	Item Pag	
1.	Safety Precaution	1
2.	Parts & Accessories	2
3.	Installation Instruction	3 <b>-</b> 5
4.	Circuit Diagram	5
5.	Transmitter Assembly & Operation	6
5.	Maintenance and Technical Specifications	7
6.	Customer Service Centre	8

# SAFETY PRECAUTION

### IMPORTANT: PLEASE READ BEFORE INSTALLATION.

- 1. Installation must be carried out by a qualified wiring installer.
- 2. Turn off the electrical mains at the circuit breaker fuse box.
- 3. Do not use power supply other than 240V 50Hz.
- 4. This appliance must be earthed.
- 5. When mounting the fan, ensure that the safety wire is loop across the ceiling mounting hook.
- 6. The ceiling mounting hook must be able to withhold a min. weight of 35 pounds.
- 7. The ceiling fan must be mounted at a min. height of 8.2 feet / 2.5m of clearance from the floor.
- 8. Do not place any objects in the path of the blades.
- 9. When all electrical connections are done, store all wires neatly.
- 10. Make sure that all screws and connection are tightly screwed and secured.

### **Important**

This product is solely for sale, distribution and use in Malaysia only.

### Warning


This product is designed to use only those parts supplied with this product and/or accessories designated specifically for use with this product. Using parts and/or accessories not designated for use with this product could result in personal injury or property damage.

### Note


The illustrations in this manual are for explanation purposes only and may differ from the actual unit. It is subjected to change without prior notice for further improvements.

# **PARTS & ACCESSORIES**

Item	
1. Canopy	1
2. Downrod Assembly with Rubber Pulley	1
3. Coupling Cover	1
4. Blade	3
5. Motor Assembly	1
6. Assembly Kit	1
7. Balancing Kit	1

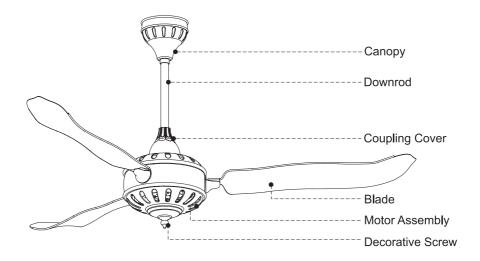

### Assembly Kit

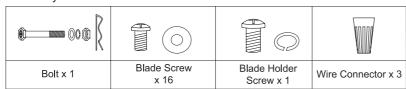

### Balancing Kit




### Receiver & Transmitter Kit



# INSTALLATION INSTRUCTION


### Step 1

Remove the bolt and clevis pin on the downrod and assemble the canopy and coupling cover through the downrod.

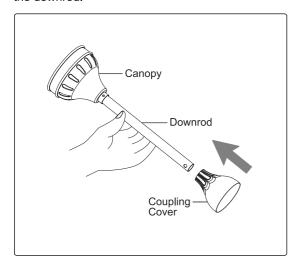


### Step 2

- a) Route the safety wire, blue, brown and orange wires from the motor through the downrod.
- b) Fix the downrod to the shaft and insert the bolt and tighten secure with the clevis pin.

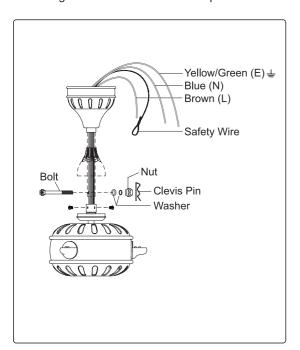

### Step 3


- a) Remove the bolt, clevis, nut, washer and rubber pulley from the downrod. Place the rubber pulley onto the ceiling hook and fix back the bolt, clevis, nut and washer.
- b) Tie the safety wire across the hook and insert into the bolt and secure with washer, nut and clevis pin.

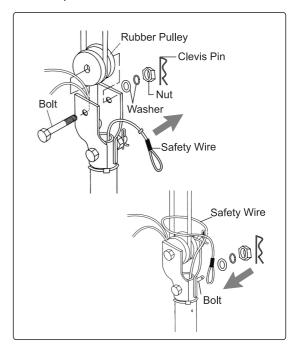

### Step 4


Match the codes on the receiver and transmitter to be the same mode.

- a) To change the code, push the code switch up or down
- b) To control 2 or more fans using 1 transmitter, set all receiver's code at the same mode with transmitter.

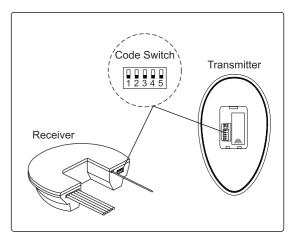


# **INSTALLATION INSTRUCTION**

**Step 5**Connect the brown, blue and orange wires from the receiver to the fan. Connect the red, white and green wires to the house's supply wire.

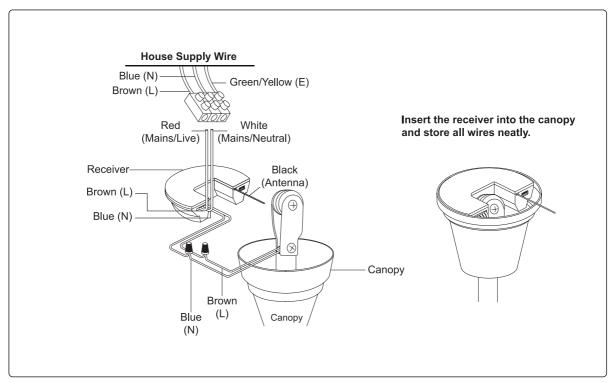


Step 6
Remove the screws at the motor and fix the blades to the motor using these screws.
Important: Assemble the blades only after the ceiling fan is mounted on the hook.

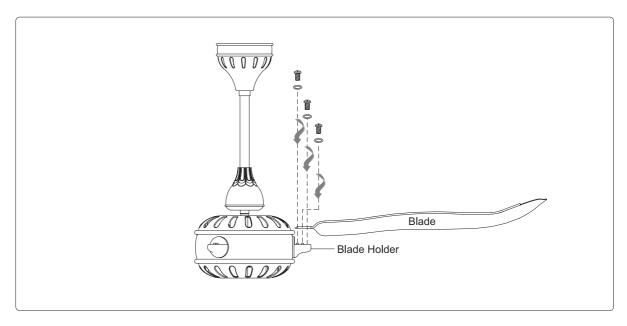


# **INSTALLATION INSTRUCTION**

Step 7
Install the decorative screw to the fan.

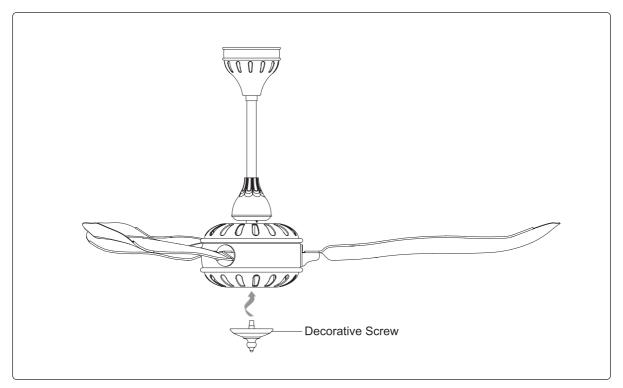


# **CIRCUIT DIAGRAM**

# IMPORTANT: DO NOT CONNECT THIS REMOTE CONTROL CEILING FAN TO DIMMER SWITCH OR WALL REGULATOR.

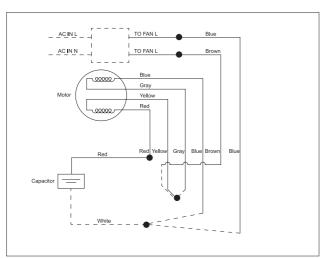


# TRANSMITTER ASSEMBLY

Insert the 1 pcs 12V battery (provided) into the transmitter.

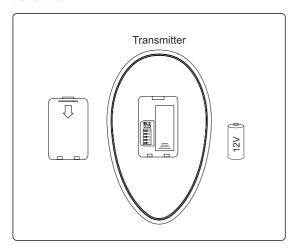

Mount the transmitter holder on the wall with the screws provided.

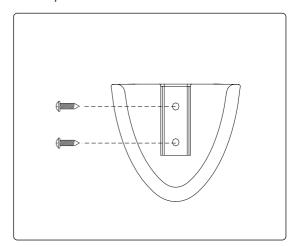

# TRANSMITTER OPERATION

I - Speed 1

II - Speed 2

III - Speed 3

IV - Speed 4

V - Speed 5

O - Turn off the fan



# **MAINTENANCE**

Due to the fan's natural movement, connections may get loose after a period of usage. To ensure a proper and safety usage, inspect the suspension system and tighten all connections every 6 months.

### IMPORTANT: SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

### Cleaning

Cleaning your fan periodically will prolong its new appearance. Basic cleaning procedures are as follows:

- 1. Use only lukewarm water. Do not use detegent, corrosive or acidic solution.
- 2. Damp the cloth lightly. Use only soft or lint-free cloth to clean the fan. Rough fabric will scratch the fan surface.
- 3. To cover small scratches, apply a light coat of shoe polish over it.
- 4. There is no need to oil the fan.

# **TECHNICAL SPECIFICATIONS**

Model	Heritage
No. of blades	3
Fan width	56"
Motor RPM	88 - 215
Voltage	240V 50Hz
Wattage	20W - 100W

