

Instruction Manual

CEILING FAN MODEL: 218/3B HG

Tables of Contents

Item	Page No.
1. Safety Precautions	. 1
2. Parts & Accessories	2
3. Installation Instruction	
a. Fan mounting	3 - 4
b. Assembly of blades	. 4
c. Regulator circuit diagram	. 5
e. Regulator assembly & operation	. 5
4. Maintenance	. 6
5. Technical Specifications	6
6. Customer Service Centre ····	. 7

Safety Precaution

IMPORTANT: PLEASE READ BEFORE INSTALLATION


- 1. Installation must be carried out by a qualified wiring installer.
- 2. Turn off the electrical mains at the circuit breaker fuse box.
- 3. Do not use power supply other than 240V 50Hz.
- 4. When mounting the fan, ensure that the safety wire is loop across the ceiling mounting hook.
- 5. The ceiling mounting hook must be able to withhold a min. of 35 pounds.
- 6. The ceiling fan must be mounted at a min. height of 8.2feet / 2.5m of clearance from the floor.
- 7. Do not place any objects in the path of the blades.
- 8. When all electrical connections are done, store all wires neatly.
- 9. Make sure that all screws and connection are tighten till snug.

Warning


This product is designed to use only those parts supplied with this product and/or accessories designated specifically for use with this product. Using parts and/or accessories not designated for use with this product could result in personal injury or property damage.

Parts & Accessories


Item	Qty
1. Flush Mount Canopy	1
2. Blade	3
3. Motor Assembly	1
4. Assembly Kit	1
5. Balancing Kit	1

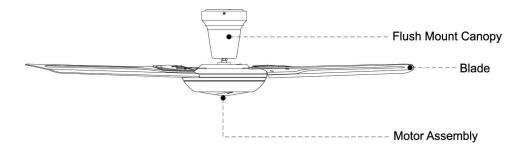

Assembly Kit

 

Balancing Kit

 

Note:


The illustrations in this manual are for explanation purposes only and may differ from the actual unit. It is subjected to change without prior notice for further improvements.

Fan Mounting


IMPORTANT: SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

Step 1 - Drill the 4 expansion screws provided to the concrete ceiling. Align the slotted holes in the mounting bracket with the expansion screws and secure with the washers and nuts.

IMPORTANT: The expansion screws and nut must be tightened until snug.

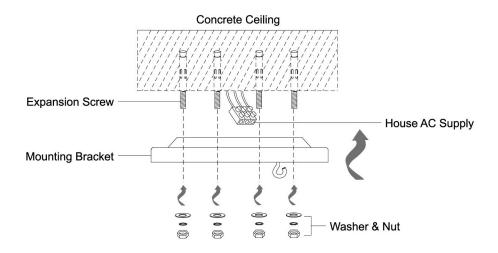


Step 2 - Hook the safety wire from the fan to the 'J' hook on mounting bracket.

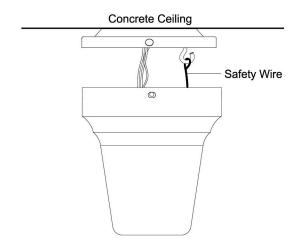

Fan Mounting

Step 3 - Fix the flush mount canopy to the mounting bracket using the 4 screws provided.

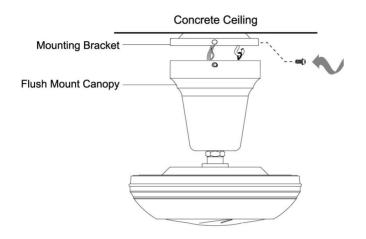


Assembly of Blades

Step 4 - Remove the screws at the motor and fix the blade to the motor using these screws.


Important : Assemble the blades only after the ceiling fan is mounted.



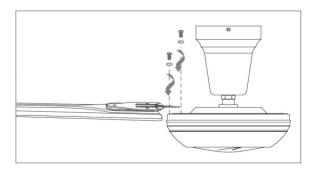


Circuit Diagram

Regulator wire connection diagram

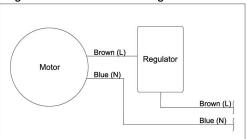

Top View of Motor Terminal

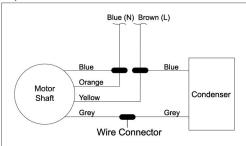


Regulator Assembly & Operation


Step 1 - Remove the regulator cover using a test pen and push the button shown below.



Step 2 - Mount the regulator base on the wall with the screws provided.

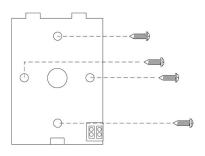


Step 3 - Connect the live and earth wire from the house supply to the terminal.

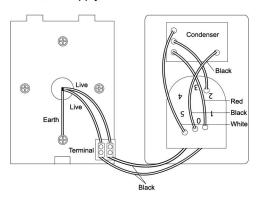

Function of the Regulator

Turn the dial knob to select the fan speed.

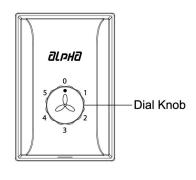

Maintenance

IMPORTANT: SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

Due to the fan's natural movement, connections may get loose after a period of usage. To ensure a proper and safety usage, inspect the suspension system and tighten all connections every 6 months.


Cleaning

Cleaning your fan periodically will prolong its new appearance. Basic cleaning procedures are as follows:

- 1. Use only lukewarm water. Do not use detegent, corrosive or acidic solution.
- Damp the cloth lightly. Use only soft or lint-free cloth to clean the fan. Rough fabric will scratch the surface.
- 3. To cover small scratches, apply a light coat of shoe polish over it.
- 4. There is no need to oil the fan.

Technical Specifications

Model	218/3B-HG
No. of blades	3
Fan width	52" / 1320mm
Motor RPM	95 - 225
Voltage	240V 50Hz
Wattage	15W - 85W

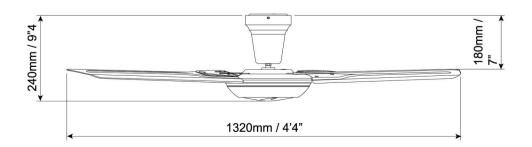

Customer Service Centre

If you need any technical assistance or faulty report, please contact our customer service centre at :

Alpha Home Appliances Sdn. Bhd. (390258-H)

Head Office: 6, Jalan Sungai Kayu 32/37, Berjaya Park, Sect 32, 40460 Shah Alam,

Selangor.

Tel : 03-5740 6666 Fax : 03-5740 8220

Johor Bahru: 73, Jalan Molek 3/10, Taman Molek, 81100 Johor Bahru.
Tel: 07-353 4833 / 4933 Fax: 07-355 4233

Melaka : G-8, Jalan PM3, Plaza Mahkota, 75000 Melaka.

Tel : 06-292 2398 / 2399 Fax : 06-292 2392

lpoh : 16, Jalan Tasek Timur, Taman Tasek Indra, 31400 lpoh, Perak.

Tel : 05-545 2282 / 547 2282 Fax : 05-547 6282

Penang : 2748, Ground Floor, Jalan Chain Ferry, Taman Inderawasih, 13600 Prai.

Tel : 04-397 9923 / 9920 Fax : 04-397 9690

Information is correct at the time of printing and may subject to change without prior notice.