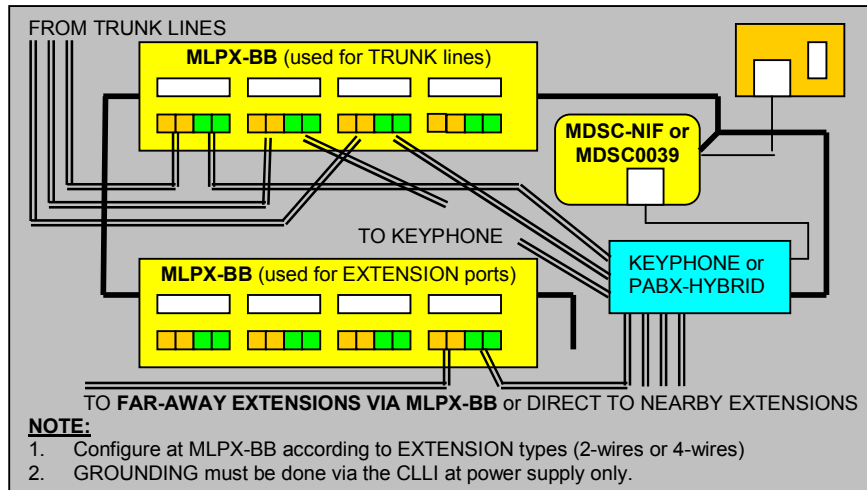


**CLLI**

LIGHTNING ISOLATORS

**SKPX-series**

For KEYPHONE-PABX Systems

**Typical Installation for SKPX in MLPX set-up:**

PCB edge-connectors

**SKPX-versions:**

- SKPX-ARD – Auto-reset (ANALOG)
- SKPX-ARDcu – Analog-Caller ID
- SKPX-DSL – DSL trunk line
- SKPX-EXD – Extension (24V)  
Package Must include:
- MLPX-BB – Base-Board for SKPX
- MLPX-BX – Box (optional)

**Specifications:**

Versions	AR / D	DSL	EXD24V
Connector	Customized	Customized	Customized
Clamping Voltage	~150V	~230V	~68V
Potential Limit	~470V to Earth	350~600V to Earth	~470V to Earth
Isolate By	Current & Voltage	Voltage	Current & Voltage
Mounting	Base Board / Box	Base Board / Box	Base Board / Box

**Note:**

- CLLI are sold with Lifetime Service Warranty – see LLSWA
- Correct installation is vital for equipment & USER safeties!
- Terms & Conditions in WARRANTY CARD & Thank-you note.
- Technical Assistance / Important Info in: [www.cal-lab.com](http://www.cal-lab.com)

SPECS, Prices & CONDITIONS subject to change. Refer to: [www.cal-lab.com](http://www.cal-lab.com)For help, call / FAX: 06-9517680 Email: [callab@callab.com.my](mailto:callab@callab.com.my)

Service centre: HQ – 30 Lrg. Kurau 9, Tmn Sg Abong, 84000 Muar, Johor, Malaysia.


Non-tampered &amp; lightning-damaged CLLI can be exchanged @ RM25 or less!

**SKPX series****CLLI**

LIGHTNING ISOLATORS

**SL-AR series**

At Power line with Auto-Reset

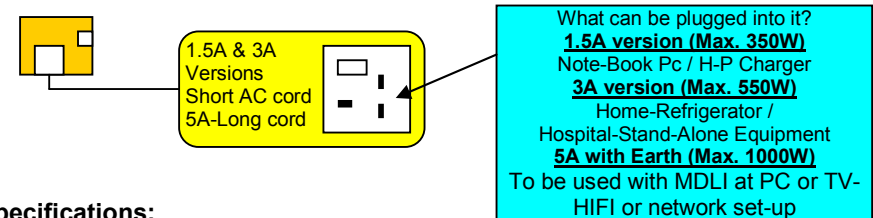**Typical Installation for STAND-ALONE appliances****Specifications:**

Working Voltage	220~250Vac	
Let Through Voltage	275Vrms	
Static Potential Limit	275Vrms	
Over-current Cut-off	Auto switch-OFF (at LIVE)	Self-destruct (at L & N)
Versions	Auto-Reset in ~1-minute (std)	Manual-Reset (by request)
<b>By version</b>	<b>Power-hold at 20°C</b>	<b>Power –trip after 10S</b>
0.5A	115W	300W
1.5A	350W	800W
3A	550W	1300W
(1.5M cord + EARTH) 5A	900W	1600W

**Product Operating Guide:**

1. **Over-current** – cut-off depends on current x duration. Higher current = faster cut-off.
2. **Over-voltage** will almost immediately cut-off power supply.
3. **Auto-Reset** – The output will self-reset after a preset time. To instant (manually) reset, switch off the incoming power supply for a few seconds to reset SL-AR unit.
4. **Damaged by severe lightning-surges** – It is rare but possible to occur, once in a blue-moon! If no output after auto or manual reset at the SL-AR, please get help or follow LLSWA & send unit for restoration

**Note:**

- CLLI are sold with Lifetime Service Warranty – see LLSWA
- Correct installation is vital for equipment & USER safeties!
- Terms & Conditions in WARRANTY CARD & Thank-you note.
- Technical Assistance / Important Info in: [www.cal-lab.com](http://www.cal-lab.com)

SPECS, Prices & CONDITIONS subject to change. Refer to: [www.cal-lab.com](http://www.cal-lab.com)For help, call / FAX: 06-9517680 Email: [callab@callab.com.my](mailto:callab@callab.com.my)

Service centre: HQ – 30 Lrg. Kurau 9, Tmn Sg Abong, 84000 Muar, Johor, Malaysia.

For immediate exchange-replacement: Go to S2 CENTREPOINT, Bandar Utama, 47800

PJ. Phone-fax: 03-77268680 / 012-7038225 / 012-7718225

Non-tampered &amp; lightning-damaged CLLI can be exchanged @ RM25 or less!

**SL-AR**