# DATA SHEET TECHNICAL

## ZONECHECK<sup>450</sup>**ADDRESSABLE**















\*Extinguishing System Attachment - Life Safety, UL 346 & 864 (58, 59 & 65) Approved

- ✓ Automatic Testing & Record Keeping
- ✓ 100% Water Saving
- ✓ Life Safety Code Compliant

#### Overview

Zonecheck Addressable is a system designed to effectively manage a buildings flow-switch alarm testing routine. Automatic testing and recorded logs are managed by a series of intelligent monitoring modules (IMM) all interconnected to one central controller.

The controller has the capability to initiate a simultaneous flow-switch test for every Zonecheck in the building at the push of a button or as part of an automatic, on-going routine.


#### Specification


Controller		Pump	
Dimensions (w x h x d)288		Operating Voltage	240v 50Hz
Mains power supply120	0 - 240 VAC 50/60 Hz- 250w max	Full Load Current	0.88
Internal PSU36 v	v D.C. nominal	Power Rating	
PCB voltage rating36 v	v D.C. nominal	IP Rating	IP43
Supply & battery charger status		WP Rating	175 psi
monitored for failureYes	5		
Batteries monitored for		Flow-switch	
disconnection or failureYes	5		
Maximum battery size & type7 A	Nhr, 2 x Yuasa NP7-12 1 x NP7-6	Triggering flow-rate	30-57 litres/minute
		Enclosure rating	IP54
IMM		Conduit entrances	Ø22.2 mm
		Contact ratings	10 A @ 125/250V AC
Dimensions (w x h x d)301	1 x 198 x 78 mm		2.5 A @24V DC
Mains power supply120	0-240 VAC 50/60 Hz- 250w max	Operating temperature range	. 0-68°C (32-155°F)
PCB Voltage rating120	0-240 VAC 50/60 Hz- 250w max		
		Wiring	
Printer			
		Type	FP200 (or equivalent)
ModelTP-		Requirements	Life-safety compliant,
Power supplyAC	230V ±10% , 50/60Hz,		fire resistant screened
0.37	A / AC 120V ±10% , 60Hz, 0.4A		cable
	n power cable)		
ConnectorRJ4	45 8-pin modular type connector	Zonecheck	
	RS845 with no LED lamp.		
Cable1m	n Ethernet cable	Working pressure rating	. max 15 bar (water)
Dimensions 165	5 x 247 x 135 mm	Compatible pipe	2", 2½", 3", 4", 6"
Weight (without paper)2.2	! Kg	Connections	. Roll groove (both ends)


#### Installation

Installation must be carried out by a suitably qualified engineer using the *Installation & Operating Instructions* (ZC-ADD-IB). Every Zonecheck® comes with its own IMM which should be installed on a nearby wall or next to the Zonecheck® on the pipe. The circulating pump, flow-switch and zone valve (optional) are wired to the IMM. Every IMM is wired (as part of a looped system) back to the addressable controller. The controller allows the user to test every Zonecheck® and to monitor the status of every zone valve incorporated into the system. You only need one controller to monitor up to 1000 IMMs.

#### **Dimensions**

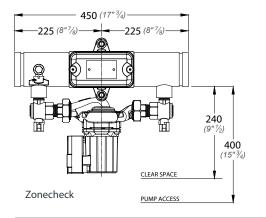


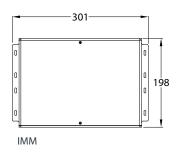


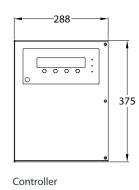

#### **Basic Overview**

### Ordering information

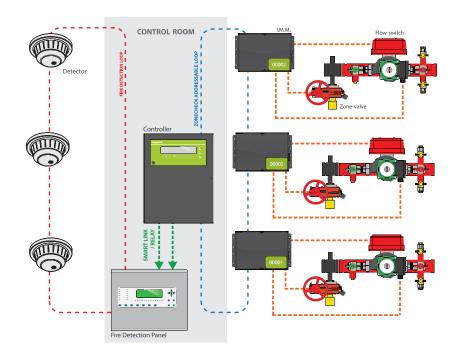

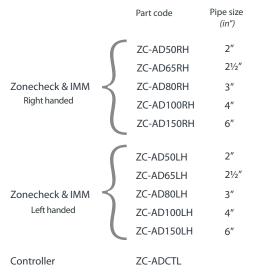



Scan **QR** barcode using your smart phone (red laser app) to learn more about Zonecheck Addressable.

Project Fire. Pasturefields Industrial Estate. Pasturefields Lane. Hixon. ST18 0PH.