Signal/ Warning Light and Alarm Sounder Combinations

S125D series


















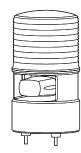

Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

▲ Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.


- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

▲ Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, and or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

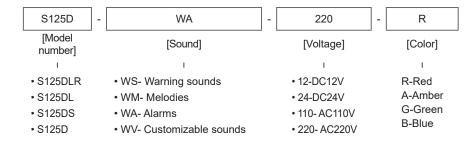



Please scan the QR code for more detailed product information.

www.qlight.com

Specifications

Model number	Voltage	Current	Bulb specifications			Cound nottern and values	Certificates	Moight	Color
			Volts/Watts	Configuration	Part#	Sound pattern and volume	Ceruncates	Weight	COIOI
S125D	DC12V	1.266A	12V10W	T16x35 15S	9	WS- 5 Waming Sounds: Max. 105dB WM- 5 Melodies: Max.105B WA- 5 Alarms: Max.103dB WV- 5 Customizable sounds : Max.95dB	C€	1.00Kg	R-Red A-Amber G-Green B-Blue
	DC24V	0.766A	24V10W	T16x35 15S	10				
	AC110V	0.187A	12V10W	T16x35 15S	9			I I	
	AC220V	0.094A	12V10W	T16x35 15S	9				

** CE compliant : DC24V, AC110V/220V

Model number	Voltage	Current	Sound pattern and volume	Certificates	Weight	Color
S125DL	DC12V~24V	Max. 0.520A		C€	0.76Kg	R-Red A-Amber G-Green B-Blue
	AC110V	0.125A			1.16Kg	
	AC220V	0.065A				
S125DLR	DC12V	0.483A	WS- 5 Warning Sounds : Max. 105dB		0.92Kg	
	DC24V	0.327A	• WM- 5 Melodies : Max.105B			
	AC110V	0.120A	• WA- 5 Alarms : Max.103dB		1.29Kg	
	AC220V	0.060A	WV- 5 Customizable sounds : Max.95dB			
S125DS	DC12V~24V	Max. 1.330A			0.78Kg	
	AC110V	0.230A			1.23Kg	
	AC220V	0.155A				


** CE compliant : DC24V, AC110V/220V


• Protection rating :IP54


Ambient operating temperature : -20°C to +50°C (S125D, S125DLR)
 -30°C to +50°C (S125DL, S125DS)

Dimensions (Units: mm)

S125D/ S125DL/ S125DLR/ S125DS

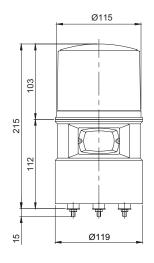

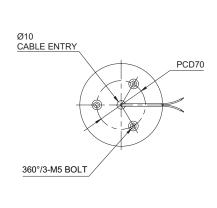

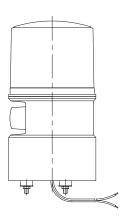

Wiring Instructions

S125D/ S125DL/ S125DLR/ S125DS-DC/AC S125DL-DC/AC S125D/S125DLR-AC compatible type EXTERNAL CONTACT EXTERNAL TRANSISTOR-NPN Red(R) Red(R) Red(R) ~ ih Ch 1 Ch 1 Amber(A) Amber(A) ~~H Ch 2 Ch 2 Green(G Green(G) Ch 3 Green(G) ⊙ H Ch 3 Ch 3 Blue(B) Blue(B) Blue(B) **~**oi Ch 4 Ch 4 Ch 4 White(W) White(W) White(W) Ch 5 0 0+ Ch 5 Ch 5 Black(BK) Common Black(BK) Black(BK) Common Red(R) Common White(W) White(W) White(W) Power Power Power Black(BK) Fuse Fuse Black(BK) Black(BK)

- External power line UL1015 AWG18(0.75sq) x 2C 400mm
- External signal line UL1007 AWG22(0.3sq) 400mm
- AC compatible type shall be connected the black and white wires when using AC110V, and the black and red wires when using AC220V.

Sound Tone Combination of Standard Product


Category	Sound pattern	Channel	Sound tone	Volume (Max.)	
WS		Ch1	Fire	105dB	
	5 Warning sounds	Ch2	Emergency		
		Ch3	Ambulance		
		Ch4	Machinery Fault		
		Ch5	High Expansion		
WM		Ch1	Sweet Home	105dB	
	5 Melodies	Ch2	For Elise		
		Ch3	Cuckoo's Waltz		
		Ch4	Piano Sonata		
		Ch5	Turkish March		
WA		Ch1	Beep Intermittent	103dB	
	5 Alarms	Ch2	Door Chime		
	5 Alainis	Ch3	Phone Ring		
		Ch4	PI.PI.PI Short		
		Ch5	Tripping Beat		
WV	5 Customizable sounds	Ch1- Ch5	Available upon request(customized voice type)	95dB	

Volume Adjustment



- The volume output of this product is adjustable.
- Turn the volume dial clockwise to increase the volume, and turn counter clockwise to decrease the volume
- There will be no sound when the dial is put at MIN.

Parts Definition/Installation

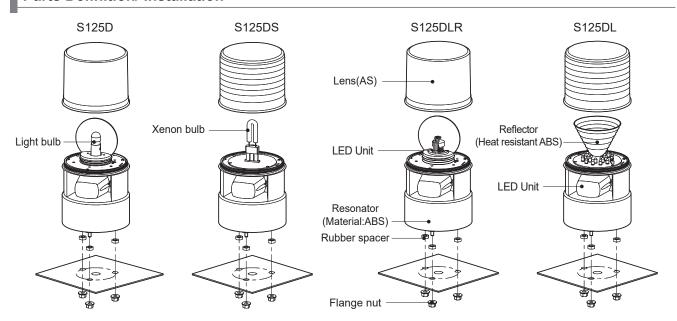



- First, remove the flange nuts from bolts and place the product through the mounting surface holes.
- Fasten the flange nuts on the opposite side of the mounting surface until the product is tightened securely.

Light Function Selection/ Mounting Hole Specification

■ Light Function Selection(125DL only)

• Please refer to the chart below to use light function selection switch located inside the product.

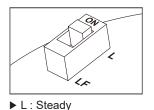


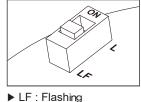

 Default function is set at steady LED. Select the desired function for your application during installation.


■ Mounting Hole Specifications

 Machine holes on the mounting surface referring to the diagram below.

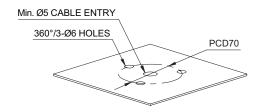


Light bulb/ Xenon Bulb Replacement Instructions

■ Bulb Replacement Instructions(S125D model only)

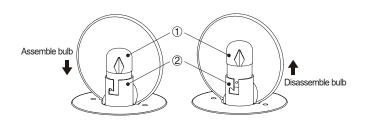

- Please wait at least 1 minute after turning off the power before replacing the bulb.
- In order to dissemble the bulb, please push down the bulb(①) lightly and screw it counterclockwise.
- In order to put the bulb in to the unit, please place the bulb(①)
 in the socket(②) and screw it clockwise while lightly pushing
 down the bulb

■ Xenon Bulb Replacement instructions(S125DS only)

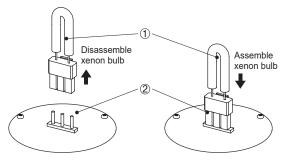

- Please wait at least 30 mimutes after turning off the power before replacing the xenon bulb.
- Please pull out the entire xenon bulb structure ① to disassemble.
- For xenon bulb assembly, please ensure the connector portion of the xenon bulb structure matches the pin location②.

Installation Environment and Protection Rating

- This product is designed for use with protection rating of IP54.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP54), it may cause malfunction or damage to the product.
- In case of outdoor applications, install the product in the upright position. Do not install the product horizontal or upside-down positions where water can potentially penetrate into the product and impact it's operation.
- For further information, please visit our website (www.qlight.com).


Product installation direction

■ Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.

· BEACON/SIGNALING LIGHT

* For products with a protection rating of less than IPX4, please install it vertically.


Power cord inlet part shall not be facing the sky.

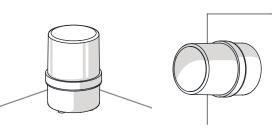




· ELECTRONIC SOUNDER/SIGNAL HORN

Sounder part shall not be facing the sky.

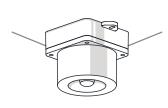

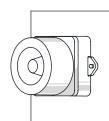












· HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS

Sounder part shall not be facing the sky.

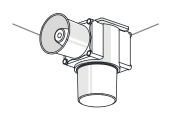

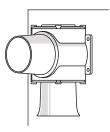


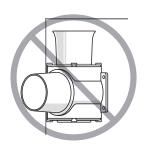


· SIGNAL TOWER LIGHTS

* For products with a protection rating of less than IPX4, please install it vertically.

Power cord inlet part shall not be facing the sky.

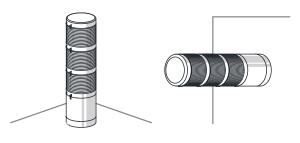



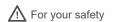

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com)

Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea

Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111)

Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel: +82-51-620-4100

Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.glight.com www.glightusa.com | sales@glightusa.com

3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

$SHANGHAI\ Qlight\ Electronic\ Co.,\ Ltd.\ www.qlight.com\ \ www.qlightcn.com\ |\ qlightcn@qlight.com$

China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Product Operation Inquiry / Customer Support +82-51-620-4100

You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.

**ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE

RELIABILITY FUNCTION OR DESIGN OR OTHERWISE

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Head office: Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code: 08507)

Factory: 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code: 50805)

www.qlight.com