
## Explosion Proof Warning Light/ Signal Light and Electric Horn Combinations SESA/ SESAS/ SESAL/ SESALR

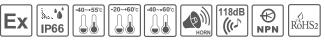

Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

## Safety Precautions for Explosion Proof Products

Please follow the instruction below to ensure safe and correct use of explosion proof products.

- 1. Explosion proof products should be managed according to explosion proof regulations. Do not disassemble, assemble, alter or repair the product arbitrarily.
- 2. The temperature rating of the product is the temperature the product will experience at the applied rated voltage and ambient temperature indicated.
- 3. Use cable glands that satisfy the product's explosion proof grade and temperature grade.
- 4. Unused cable entries must be filled with material that meets the explosion proof grade and temperature rating.
- 5. Before installing the product, please make sure all cautions indicated on the labels, packaging, and operation manual of the product are fully understood.
- 6. Installation, maintenance and repair of the product must be performed by experts in the explosion proof field, or persons who have received relevant training.
- 7. For safety, the product should be installed and operated in environments that avoid high temperature and high pressure.
- 8. Please follow general safety precautions and avoid installing the product in locations that may generate excessive heat.
- 9. When installing the product in places where chemicals are located, please make sure that the environment does not have two or more incompatible chemicals mixed. For safety, please read the instruction manual carefully and be mindful of the chemical compositions where the product is used.
- 10. This product requires grounding.
- 11. Please note that special conditions shall be applied if the sign "X" is placed after the certificate number.
  - 1) For safe use, regular overpressure test must be carried out in accordance with EN 60079-1, clause 15.2.3.
  - 2) For safe use, tempered glass must be protected from strong impact
- 12. When using NPT cable glands (plugs), it is recommended to use them after applying non-hardening grease to maintain protective performance.

## A Precaution for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- 1. During wiring or maintenance, please completely turn off the Power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device.
- (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

## A Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.


- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the Power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.



Please scan the QR code for more detailed product information.

www.qlight.com

## **Ordering Specifications**

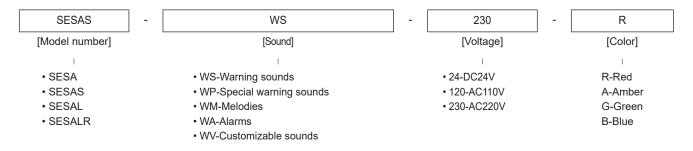

## **Product Specifications**

#### Explosion Proof Specifications

	SESA	Zone	Zone 1	High risk gas/vapour
Model number	SESAL	definitions(Gas)	Zone 2	Medium risk gas/vapour
	SESALR	LondZone 2Medium risk gas/vapourdefinitions(Gas)Zone 2Medium risk gas/vapourGroup definitions(Gas)GROUP II AAcetone, Petrol, Methanol, ProparGROUP II BEthylene, City gasGROUP II CHydrogen, Acetylene, Carbon sulpMaximum surface temperature of electrical equipmentT1450°CT3T4135°CT5100°CT685°CZone definitions(Dust)Zone 21Group definitions(Dust)GROUP II AIgnutber fibers/flyings(mzore than 0 GROUP II BGroup definitions(Dust)GROUP II AIgnutber fibers/flyings(mzore than 0 GROUP II BGROUP II BNon-conductive dusts		
	SESAS		Acelone, Petrol, Methanol, Propane, Toldene	
Range of operating voltage	DC 24V		GROUP II B	Ethylene, City gas
	AC120V or 230V	( -       )	GROUP II C	Hydrogen, Acetylene, Carbon sulphide
Ex mark	IECEx - Ex db IIC T6 Gb, IP66		T1	450°C
	ATEX - 🚯 II 2G Ex db IIC T6 Gb, IP66 NEPSI, CCC - Ex db IIC T6 Gb, Ex tb IIIC 80°C Db KCs - Ex d IIB+H2 IP66 T6(SESA) Ex d IIC T6 IP66, Ex tD A21 T85°C IP66(SESAKC)	surface temperature of electrical	T2	300°C
			Т3	200°C
			T4	135°C
			T5	100°C
			T6	85°C
	TS - Ex db IIC T6 IP66 Gb(SESAL)	Zone	Zone 21	High risk powder/dust
Ambient operating	-20°C ≤ Tamb ≤ +60°C(TS) -40°C ≤ Tamb ≤ +55°C(KCs)	definitions(Dust)	Zone 22	Medium risk powder/dust
emperature	$-40^{\circ}C \le Tamb \le +60^{\circ}C$		GROUP II A	Ignitible fibers/flyings(mzore than 0.5mm)
Explosion proof	Zone1, Zone2, Zone21, Zone22		GROUP II B	Non-conductive dusts
Zone Protection		( )	GROUP II C	Conductive dusts
ating	IP66			

#### General Product Specification


Model		/oltage Current	Bulb specifications		าร				
number	Voltage		Volts/ Watts	Configuration	Part#	Sound pattern and volume	Certificate	Weight	Color
	DC24V	1.788A	24V15W	G23 15S	18	Max.118dB     Max.118dB     WP-5 Special warning     ()		8.57kg	
SESA AC120	AC120V	0.422A	12V15W	G23 15S	17			9.27kg	R-Red
	AC230V	0.211A	12V15W	G23 15S	17			9.27kg	A-Amber
	DC24V	1.411A		EUB0641		• WM-5 Melodies: Max.118dB • WA-5 Alarms: Max.116dB	ax.116dB (Ex) (Cs 0.43kg B-Blue		
	AC120V	0.360A	200V -550V	-1A(G) U type	48	• WV-5 Customizable voices : 110-115dB		8.86kg	Б-blue
	AC230V	0.220A						8.86kg	

Model number	Voltage	Current	Sound pattern and volume	Certificate	Weight	Color
	DC24V	1.222A	WS-5 Warning sounds		8.42kg	
SESAL	AC120V	0.286A	: Max.118dB		9.02kg	R-Red A-Amber
	AC230V	0.143 A	<ul> <li>WP-5 Special warning sounds: Max.118dB</li> </ul>		9.02kg	
	DC24V	1.288A	WM-5 Melodies: Max.118dB     WA-5 Alarms: Max.116dB		8.31kg	G-Green
SESALR	AC120V	0.308A	• WA-3 Alarins, Max, Hodb • WV-5 Customizable voices : 110-115dB		7.92kg	B-Blue
	AC230V	0.154A		CCS	7.92kg	


\* Voltage AC120V: AC110V-120V, AC230V: AC220V-230V

\* CCC(F) compliant: DC24V(SESAL)

#### SESA/ SESAL/ SESALR/ SESAS

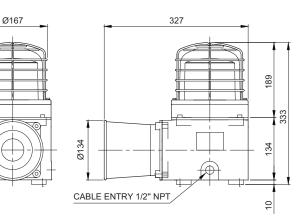

# Sound Setting - Select using the switch inside of the unit.

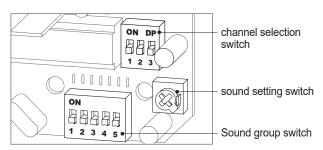


- Standard unit has 5 built-in sound tones. Select different built-in sounds using the sound setting switch.
- For standard type, once the unit is powered on, light and sound are working simultaneously.
- For tone group settings, refer to the website [Customer Support] -[Technical Data] - [Types of Tone and Combination of General Tone products].

#### Sound Type by Group

		-				
Category	Sound pattern	Channel	Sound Tone	Volume (Max.)		
WS		Ch1	Fire.A-ANG	- Max. - 118dB		
	5 Warning sounds	Ch2	Emergency WA-U			
		Ch3	Ambulance PI-PO			
		Ch4	Machinery Fault			
		Ch5	High Expansion	1		
		Ch1	Fire.A-ANG			
	5 Special	Ch2	Abandon Alarm			
WP	warning	Ch3	Machinery Fault	Max. 118dB		
	sounds	Ch4	High Expansion			
		Ch5	7 Short PI. / 1 Long	1		
	5 Melodies	Ch1	Sweet Home			
		Ch2	For Elise	Maria		
WM		Ch3	Cuckoo's Waltz	Max. 118dB		
		Ch4	Piano Sonata	TIOUD		
		Ch5	Turkish March	1		
WA		Ch1	Beep Intermittent			
	5 Alarms	Ch2	Door Chime	Max		
		Ch3	Phone Ring	116dB		
		Ch4	PI.PI.PI Short	TIOUD		
		Ch5	Tripping Beat	]		
WV	5 Customizable sounds	Ch1- Ch5	Available upon request(customized voice type)	110- 115dB		


In case of customized WV 5 tone type, there may be difference of volume depending on user's audio file type.

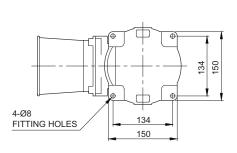


# Sound Setting - Select using External contact(LC).

 LC type product with exposed sound selection signal line is available upon request. Please refer to the diagram below for wiring.

#### SESA/ SESAL/ SESALR/ SESAS

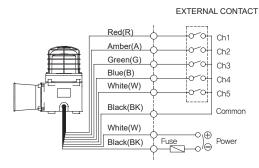

#### EXTERNAL TRANSISTOR-NPN

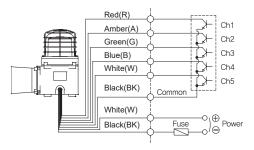


- External Power line UL1015 AWG18(0.75sq) x 2C 400mm
- External signal line UL1007 AWG22(0.3sq) 400mm

## Volume Adjustment



- The volume output of this product is adjustable.
- Turn the volume dial clockwise to increase the volume, and turn counter clockwise to decrease the volume.
- There will be no sound when the dial is put at MIN.


## **Terminal Box Wiring Instructions**

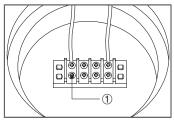

- Terminal block is located inside of the product. Unscrew the 4 bolts located in the upper body to get rid of the upper lighting element of the unit.
- Please apply fork (U-type) or ring (O-type) locking spade terminal at naked tip of the wire for secure connection.
- $\bullet$  Please wire the Power line to terminal (1).
- For AC type products, wire regardless of polarity.
- For DC type products, wire terminal of black line to (-) polarity.
  - For standard type, once the unit is Powered on, light and sound are working simultaneously.
  - \* Applicable cable range : AWG16-AWG22


## Parts Definition/ Installation/ Light Function Selection


#### Parts Definition

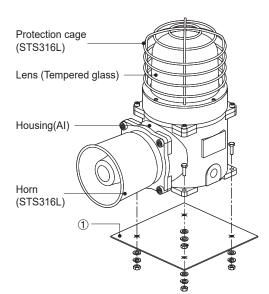

#### Light Function Selection(SESAL only)

• Please refer to the chart below to use light function selection switch located inside the product.

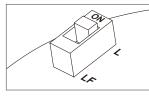

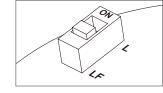

►L: Steady

- ►LF: Flashing
- Default function is set at steady LED. Select the desired function for your application during installation.


#### Installation


- First, machine holes on the mounting surface ①.
- The mounting hole of this product is 8mm in diameter.
- · When machining taps, fasten the bolt through the mounting hole of the bracket.
- When machining holes, insert the bolt through the hole of the product, and tighten the nut from the opposite side of the mounting surface.

## **Mounting Hole Specifications**

## Grounding Instructions

• Machine holes on the mounting surface referring to the diagram below.

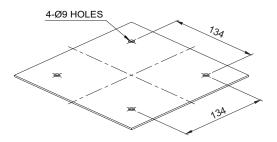


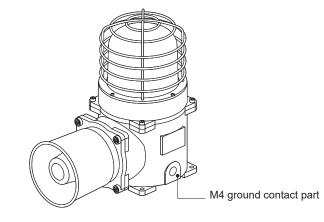

- Please use an M4 bolt at the location marked in the diagram above to ground the product.
- When connecting the grounding cable, please use a ring terminal.
- Please use a grounding cable with a diameter greater than 4mm.

#### **Bulb/ Xenon Bulb Replacement Instructions**

#### Bulb Replacement Instructions(SESA only)

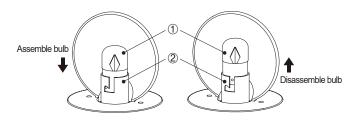


- Please wait at least 1 minute after turning off the Power before replacing the bulb.
- In order to dissemble the bulb, please push down the bulb(①) lightly and screw it counterclockwise.
- In order to put the bulb in to the unit, please place the bulb(①) in the socket(②) and screw it clockwise while lightly pushing down the bulb.

## Precautions for installation


and impact it's operation.

 In case of outdoor applications, install the product in the upright position. Do not install the product horizontal or upside-down positions where water can potentially penetrate into the product

#### Xenon Bulb Replacement Instructions(SESAS only)

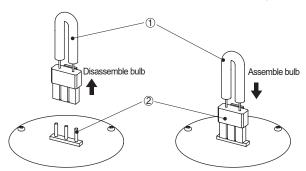

- Please wait at least 30 minutes after turning off the Power before replacing the xenon bulb.
- Please pull out the entire xenon bulb structure ① to disassemble while pushing the hook down.
- For xenon bulb assembly, please push down the connector portion of the xenon bulb structure to the connector pin location ② until it makes "clark" sound.

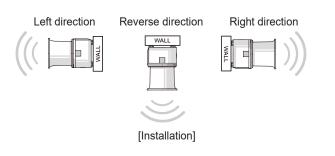

## Installation Environment and Protection Rating


- · This product is designed to be explosion proof.
- Please make sure to use the product in an environment that meets the specified explosion proof rating and regulations.
- For further information, please visit our website (www.qlight.com).

## Product installation direction

#### Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.


· BEACON/SIGNALING LIGHT


\* For products with a protection rating of less than IPX4, please install it vertically.

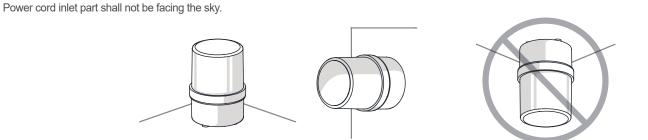

· ELECTRONIC SOUNDER/SIGNAL HORN

Sounder part shall not be facing the sky.

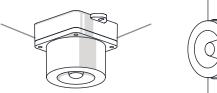

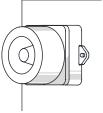










#### · HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS

Sounder part shall not be facing the sky.



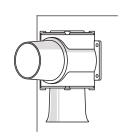




· SIGNAL TOWER LIGHTS

Power cord inlet part shall not be facing the sky.

\* For products with a protection rating of less than IPX4, please install it vertically.

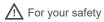

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com) Please read the instruction manual attached to the product carefully before installation and use.

#### Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111) Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel : +82-51-620-4100 Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.glight.com www.glightusa.com | sales@glightusa.com 3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Sightec Solution such as model name, symptom, telephone number and address. \*ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY FUNCTION OR DESIGN OR OTHERWISE

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE. Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507) Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)