Brass Housing Explosion Proof Warning Light

SE/ SEL/ SE-S



Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

Safety Precautions for Explosion Proof Products

Please follow the instruction below to ensure safe and correct use of explosion proof products.

- 1. Explosion proof products should be managed according to explosion proof regulations. Do not disassemble, assemble, alter or repair the product arbitrarily.
- 2. The temperature rating of the product is the temperature the product will experience at the applied rated voltage and ambient temperature indicated.
- 3. Use cable glands that satisfy the product's explosion proof grade and temperature grade.
- 4. Unused cable entries must be filled with material that meets the explosion proof grade and temperature rating.
- 5. Before installing the product, please make sure all cautions indicated on the labels, packaging, and operation manual of the product are fully understood.
- 6. Installation, maintenance and repair of the product must be performed by experts in the explosion proof field, or persons who have received relevant training.
- 7. For safety, the product should be installed and operated in environments that avoid high temperature and high pressure.
- 8. Please follow general safety precautions and avoid installing the product in locations that may generate excessive heat.
- 9. When installing the product in places where chemicals are located, please make sure that the environment does not have two or more incompatible chemicals mixed. For safety, please read the instruction manual carefully and be mindful of the chemical compositions where the product is used.
- 10. This product requires grounding.
- 11. When using NPT cable glands (plugs), it is recommended to use them after applying non-hardening grease to maintain protective performance.

Precaution for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.


- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.


Ordering Specifications

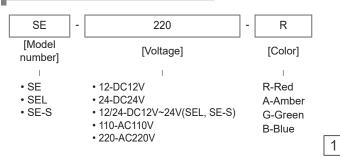



Please scan the QR code for more detailed product information.

 www.qlight.com



Product Specifications

Explosion Proof Specifications

SE SEL SE-S
DC 12V or 24V AC 110V or 220V
Ex dIIC T6
–40°C ≤ Ta ≤ 60°C
Zone1, Zone2
IP66

Zone	Zone 1	High risk gas/vapour(Gas)		
definitions(Gas)	Zone 2	Medium risk gas/vapour(Gas)		
Group definitions(Gas)	GROUP II A	Acetone, Petrol, Methanol, Propane, Toluene		
	GROUP II B	Ethylene, City gas		
	GROUP II C	Hydrogen, Acetylene, Carbon sulphide		
Maximum surface temperature of electrical Equipment	T1	450°C		
	T2	300°C		
	Т3	200°C		
Zone definitions(Dust)	T4	135°C		
	T5	100°C		
Oneur	T6	85°C		
Group definitions(Dust)	Zone 21 High risk powder/dust(Dust)			
delinitions(Dust)	Zone 22	Medium risk powder/dust(Dust)		
Group definitions(Dust)	GROUP II A	Ignitible fibers/flyings(more than 0.5mm)		
	GROUP II B	Non-conductive dusts		
	GROUP II C	Conductive dusts		


General Product Specifications


Model number	\/_lt	O	Bulb specifications		O - +ifi +		Oslan	
	Voltage	Current	Volts/Watts	Configuration	Part#	Certificates	Weight	Color
SE	DC12V	1.545A	645A 12V10W G	G23 15S	17	- 13.35kg	10.05km	
	DC24V	0.766A	24V10W	G23 15S	18			
	AC110V	0.204A	12V10W	G23 15S	G23 15S 17	KIMM	10.041	R-Red
	AC220V	0.102A	12V10W	G23 15S	17		KIMM	13.91kg
SE-S	DC12V- 24V	0.4254	220V -350V	BGA2120	47		13.53kg	G-Green B-Blue
	AC110V	0.075A		-350V	-BBC U type	47		10 E4km
	AC220V	0.060A		0 type			13.51kg	

Model number	Voltage	Current	Certificates	Weight	Color
SEL	DC12V-24V	Max.0.125A		13.29kg	R-Red
	AC110V	0.035A	KIMM	44.001	A-Amber G-Green
	AC220V	0.020A	14.26kg	B-Blue	

Dimensions


SE/ SEL/ SE-S

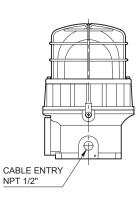

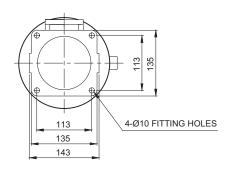

(Units : mm)

 
Terminal Box Wiring Instructions



- Terminal block is located inside of the product. Unscrew the 4 bolts located in the upper body to get rid of the upper lighting element of the unit.
- Please apply fork (U-type) or ring (O-type) locking spade terminal at naked tip of the wire for secure connection.
- Please wire the power line to terminal ①
- For AC type products, wire regardless of polarity.
- For DC type products, wire terminal of black line to (-) polarity.

Parts Definition/ Installation/ Mounting Hole Specifications

Parts Definition/ Installation

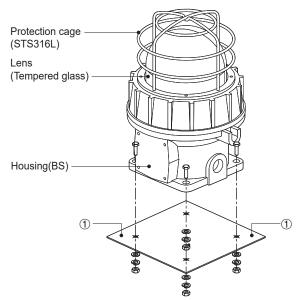


• First, machine taps or holes on the mounting surface ①.

- The mounting hole of this product is 10mm in diameter(hole).
- When machining taps, fasten the bolt through the mounting hole of the product.
- When machining holes, insert the bolt through the hole of the product, and tighten the nut from the opposite side of the mounting surface.


(When assembling using bolt and nut, please make sure to use flat washer and spring washer.)

Grounding Instructions

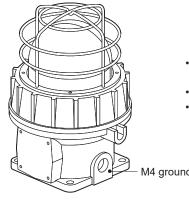

Mounting Hole Specifications

· Machine holes on the mounting surface referring to the diagram below.

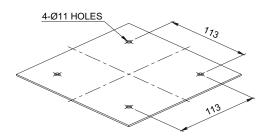


- · Please use an M4 bolt at the location marked in the diagram above to ground the product.
- When connecting the grounding cable, please use a ring terminal.
- Please use a grounding cable with a diameter greater than 4mm.

M4 ground contact part


Bulb Replacement Instructions/ Xenon Bulb Replacement Instructions

Bulb Replacement Instructions(SE only)

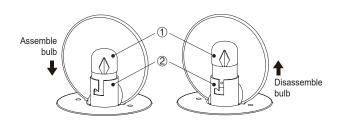

- Please wait at least 1 minute after turning off the power before replacing the bulb.
- In order to dissemble the bulb, please push down the bulb(①) lightly and screw it counterclockwise.
- In order to put the bulb in to the unit, please place the bulb(①) in the socket(②) and screw it clockwise while lightly pushing down the bulb.

Xenon Bulb Replacement Instructions(SE-S only)

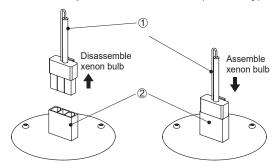

- Please wait at least 30 mimutes after turning off the power before replacing the xenon bulb.
- \cdot Please pull out the entire xenon bulb structure (1) to disassemble.
- For xenon bulb assembly, please ensure the connector portion of the xenon bulb structure matches the pin location⁽²⁾.

Installation Environment and Protection Rating


- This product is designed to be explosion proof.
- Please make sure to use the product in an environment that meets the specified explosion proof rating and regulations.
- · For further information, please visit our website (www.qlight.com).

Product installation direction

Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.


· BEACON/SIGNALING LIGHT


* For products with a protection rating of less than IPX4, please install it vertically.

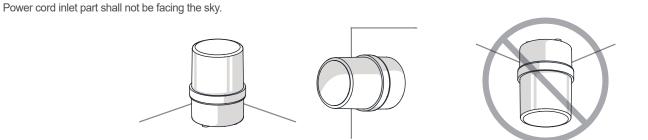

· ELECTRONIC SOUNDER/SIGNAL HORN

Sounder part shall not be facing the sky.

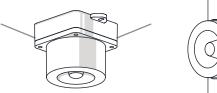

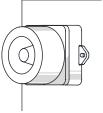










· HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS

Sounder part shall not be facing the sky.



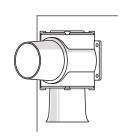



· SIGNAL TOWER LIGHTS

Power cord inlet part shall not be facing the sky.

* For products with a protection rating of less than IPX4, please install it vertically.



Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com) Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111) Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel : +82-51-620-4100 Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.glight.com www.glightusa.com | sales@glightusa.com 3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Sightec Solution such as model name, symptom, telephone number and address. *ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY FUNCTION OR DESIGN OR OTHERWISE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE. Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507) Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)

www.qlight.com EN - SE - 2305A