Explosion Proof Electric Horn(Telephone Initiated)

SPNA-TI














Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

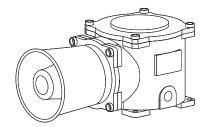

Safety Precautions for Explosion Proof Products

Please follow the instruction below to ensure safe and correct use of explosion proof products.

- 1. Explosion proof products should be managed according to explosion proof regulations. Do not disassemble, assemble, alter or repair the product arbitrarily.
- The temperature rating of the product is the temperature the product will experience at the applied rated voltage and ambient temperature indicated.
- 3. Use cable glands that satisfy the product's explosion proof grade and temperature grade.
- 4. Unused cable entries must be filled with material that meets the explosion proof grade and temperature rating.
- 5. Before installing the product, please make sure all cautions indicated on the labels, packaging, and operation manual of the product are fully understood.
- 6. Installation, maintenance and repair of the product must be performed by experts in the explosion proof field, or persons who have received relevant training.
- 7. For safety, the product should be installed and operated in environments that avoid high temperature and high pressure.
- 8. Please follow general safety precautions and avoid installing the product in locations that may generate excessive heat.
- When installing the product in places where chemicals are located, please make sure that the environment does not have two or more incompatible chemicals mixed. For safety, please read the instruction manual carefully and be mindful of the chemical compositions where the product is used.
- 10. This product requires grounding.
- 11. Please note that special conditions shall be applied if the sign "X" is placed after the certificate number.
 - 1) For safe use, regular overpressure test must be carried out in accordance with EN 60079-1, clause 15.2.3.
 - 2) For safe use, tempered glass must be protected from strong impact
- 12. When using NPT cable glands (plugs), it is recommended to use them after applying non-hardening grease to maintain protective performance.

▲ Precaution for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.



Please scan the QR code for more detailed product information.

www.qlight.com

Ordering Specifications

230 **SPNA** WM [Telephone Initiated] [Model number] [Sound] [Voltage] • SPNA • WS-Warning sounds • 24-DC24V TI-Telephone Initiated • WP-Special warning sounds • 120-AC120V • WM-Melodies • 230-AC230V • WA-Alarms

• WV-Customizable sounds

Product Specifications

■ Explosion Proof Specifications

Model number	SPNA-TI	
Range of	DC 24V	
operating voltage	AC 120V or 230V	
Ex mark	IECEX - Ex db IIC T6 Gb ATEX - (2) II2G Ex db IIC T6 Gb	
Ambient operating temperature	-40°C ≤ Ta ≤ 60°C	
Explosion proof Zone	Zone1, Zone2	
Protection rating	IP66	

Zone	Zone 1	High risk gas/vapour(Gas)		
definitions(Gas)	Zone 2	Medium risk gas/vapour(Gas)		
Group definitions(Gas)	GROUP II A	Acetone, Petrol, Methanol, Propane, Toluene		
	GROUP II B	Ethylene, City gas		
	GROUP II C	Hydrogen, Acetylene, Carbon sulphide		
Maximum surface temperature of electrical Equipment	T1	450°C		
	T2	300°C		
	Т3	200°C		
	T4	135°C		
	T5	100°C		
	T6	85°C		
Group	Zone 21	High risk powder/dust(Dust)		
definitions(Dust)	Zone 22	Medium risk powder/dust(Dust)		
Group definitions(Dust)	GROUP II A	Ignitible fibers/flyings(more than 0.5mm)		
	GROUP II B	Non-conductive dusts		
	GROUP II C	Conductive dusts		


■ General Specifications

Model number	Voltage	Power consumption	Current	Sound pattern and volume	Certificates	Weight
SPNA-TI	DC24V	29.9W	0.950A	WS-5 Warning sounds: Max.118dB WP-5 Special warning sounds: Max.118dB WM-5 Melodies: Max.118dB WA-5 Alarms: Max.116dB WV-5 Customizable sounds: 110-115dB		6.09kg
	AC120V		0.220A		IEĈEX EX	6.44kg
	AC230V		0.130A		ATEX	6.44kg


■ Telephone lines rated power


- Rated power when telephone lines are not in use: 45VDC 55VDC
- Rated power when telephone rings : 95VDC 130VDC(Ring Ring signal sound)

 Dimensions (Units : mm)




SPNA-TI

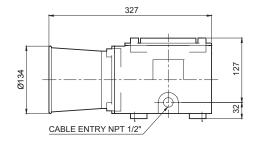

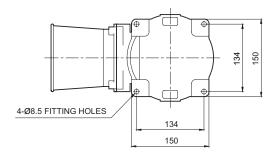

Sound Setting - Select using the switch inside of the unit

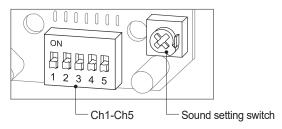

• Standard unit has 5 built-in sound tones.


Select different built-in sounds using the sound setting switch.

■ Sound Type by Group

Category	Sound pattern	Channel	Sound tone	Volume (Max.)	
WS	5 Warning sounds	Ch1	Fire.A-ANG		
		Ch2	Emergency WA-U		
VVS		Ch3	Ambulance PI-PO	118dB	
		Ch4	Machinery Fault		
		Ch5	High Expansion		
		Ch1	Fire.A-ANG		
	5 Special	Ch2	Abandon Alarm		
WP	Warning	Ch3	Machinery Fault	118dB	
	sounds	Ch4	High Expansion		
		Ch5	7 Short Pl. / 1 Long		
	5 Melodies	Ch1	Sweet Home		
		Ch2	For Elise		
WM		Ch3	Cuckoo's Waltz	118dB	
		Ch4	Piano Sonata		
		Ch5	Turkish March		
	5 Alarms	Ch1	Beep Intermittent		
WA		Ch2	Door Chime		
		Ch3	Phone Ring	115dB	
		Ch4	PI.PI.PI Short		
		Ch5	Tripping Beat		
WV	5 Customizable sounds	Ch1- Ch5	Available upon request (customized voice type)	113dB	

Wiring Instructions

 SPNA-TI




External power line - UL1015 AWG18(0.75sq) x 2C 400mm
 External telephone lines - UL1007 AWG22(0.3sq) 400mm

Volume Adjustment



- The volume output of this product is adjustable.
- Turn the volume dial clockwise to increase the volume, and turn counter clockwise to decrease the volume.
- There will be no sound when the dial is put at MIN.


Terminal Box Wiring Instructions

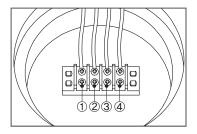


- Terminal block is located inside of the product. Unscrew the 4 bolts located in the upper body to get rid of the upper lighting element of the unit.
- Please apply fork (U-type) or ring (O-type) locking spade terminal at naked tip of the wire for secure connection.
- Connect the power line to the terminal ① and ②.
- Connect the telephone signal cable to the terminal 3 and 4.
- For AC type products, wire regardless of polarity.
- For DC type products, wire terminal of black line to (-) polarity.
- * Applicable cable range : AWG16-AWG22

Wiring method

- Supply power to the product, and connect the telephone line (2 LINE) to the PSTN telephone line (connected in parallel with the telephone)
- When the phone rings, a telephone controller recognizes a signal that activates a relay. Once the relay is activated, the sounder PCB is powered on and sounder will be operated.
- · Sounder will be stopped when an operator receives a phone call.

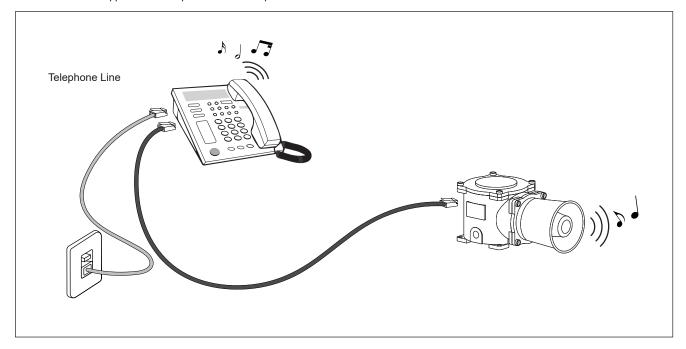


■ Parts Definition

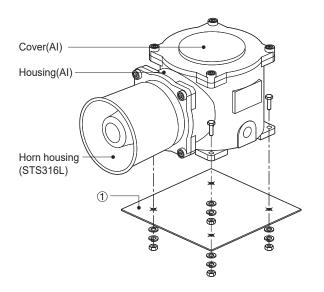

■ Installation

- First, machine holes on the mounting surface 1
- The mounting hole of this product is 8.5mm in diameter.
- When machining taps, fasten the bolt through the mounting hole of the bracket.
- When machining holes, insert the bolt through the hole of the product, and tighten the nut from the opposite side of the mounting surface.


Grounding Instructions

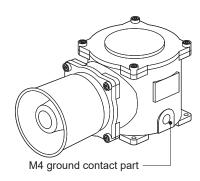

- Please use an M4 bolt at the location marked in the diagram above to ground the product.
- When connecting the grounding cable, please use a ring terminal.
- Please use a grounding cable with a diameter greater than 4mm.


Mounting Hole Specifications

 Machine holes on the mounting surface referring to the diagram below.

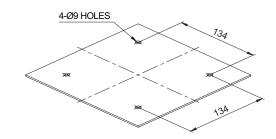

Precautions for installation

 In case of outdoor applications, install the product in the upright position. Do not install the product horizontal or upside-down positions where water can potentially penetrate into the product and impact it's operation.

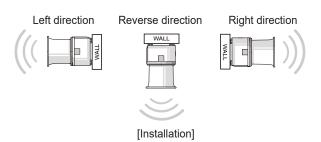

Installation Environment and Protection Rating

- This product is designed to be explosion proof.
- Please make sure to use the product in an environment that meets the specified explosion proof rating and regulations.
- For further information, please visit our website (www.qlight.com).


Product installation direction

■ Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.

· BEACON/SIGNALING LIGHT

* For products with a protection rating of less than IPX4, please install it vertically.


Power cord inlet part shall not be facing the sky.

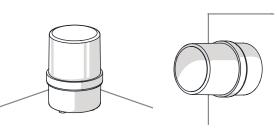




· ELECTRONIC SOUNDER/SIGNAL HORN

Sounder part shall not be facing the sky.

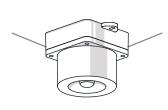

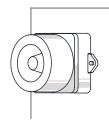











· HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS

Sounder part shall not be facing the sky.

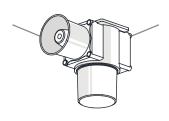

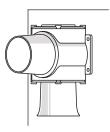





· SIGNAL TOWER LIGHTS

* For products with a protection rating of less than IPX4, please install it vertically.

Power cord inlet part shall not be facing the sky.

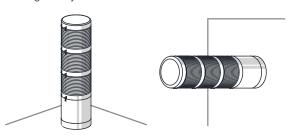



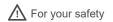

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com)

Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea

Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111)

Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel: +82-51-620-4100

Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.qlight.com www.qlightusa.com | sales@qlightusa.com

3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com

China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Product Operation Inquiry / Customer Support +82-51-620-4100

You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.

**ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE

RELIABILITY FUNCTION OR DESIGN OR OTHERWISE

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Head office: Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code: 08507)

Factory: 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code: 50805)

www.qlight.com