Items		Pre-ride	Pre-ride Frequency *1								Amminal	Describer	D ()
		Check ▶ P. 37	× 1,000 km	1	6	6 12	18	24	30	36	Annual Check	Regular Replace	Refer to page
			× 1,000 mi	0.6	4	8	12	16	20	24			page
Fuel Line	3/1/2				1	1	1	1	1	1	-		-
Fuel Level													-
Throttle Operation	1	1			1	1		1	1	1			68
Air Cleaner *2	3/18						B			0			47
Spark Plug					1	ß	1	B	1	B			52
Valve Clearance	1												-
Engine Oil		1		B	B	0	0	B	B	0	®		54
Engine Oil Strainer Screen	*					С		С		С			-
Engine Oil Centrifugal filter	*					С		С		С			-
Engine Idle Speed	3												-
Drive Chain		1	Eve	ery 50	00 km	(300	mi)	I L					64

Maintenance Level

: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.

: Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- : Clean
- : Lubricate

Maintenance Schedule

Items		Pre-ride	Frequency *1										D ()	
		Check ▶ P. 37	Check × 1,000 kr	× 1,000 km	1 6	6	12	18	24	30	36	Annual Check	Regular Replace	Refer to
			× 1,000 mi	0.6	4	8	12	16	20	24	CHECK	Replace	page	
Brake Fluid*3		1			1	1	1	1	1	_	1	2 years	57	
Brake Pads Wear (AFS125MCR)													58	
Brake Shoes/Pads Wear (AFS125MCS)		1			1	1	1	1	1	1	1		58, 61	
Brake System (AFS125MCR)									П				57	
Brake System (AFS125MCS)		1		1	1	1	1	1	1	1	1		57	
Brakelight Switch						1							62	
Headlight Aim					1	1	1	1	1	1	1		69	
Lights/Horn													-	
Clutch System	1			1	1	1	1	1	1	1	1		-	
Side Stand													63	
Suspension	1				1	1	1	1	1	1	1		-	
Nuts, Bolts, Fasteners	1												-	
Wheels/Tyres	*	1			1	1	1	1	1	1	1		44	
Steering Head Bearings	*												-	

Notes:

- ${}^{\star}1$: At higher odometer reading, repeat at the frequency interval established here.
- *2 : Service more frequently when riding in unusually wet or dusty areas.
- *3: Replacement requires mechanical skill.