



# how to use MD-326S

MADIN CHEFMASTER  
FOOD PREPARATION BLENDER

The most important of cooking is  
the ingredients

The texture, mixture of ingredients  
will effect the taste of the dish

Chefmaster makes chef's work  
easier and more convenience!



# how to use MD-326S

MADIN CHEFMASTER  
FOOD PREPARATION BLENDER



Identification of parts



How to operate

 


Safety Instructions



Troubleshooting



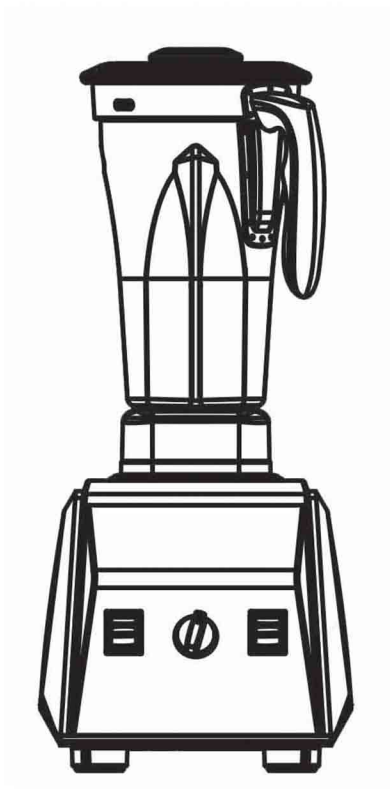

# Identification of parts MD-326S

MADIN CHEFMASTER



Identification of parts



How to operate



Safety Instructions

 


Troubleshooting



condiment cover




blender jar  
cover

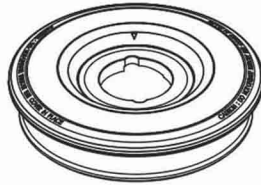

stainless steel jar  
Capacity: 1800cc

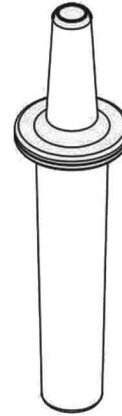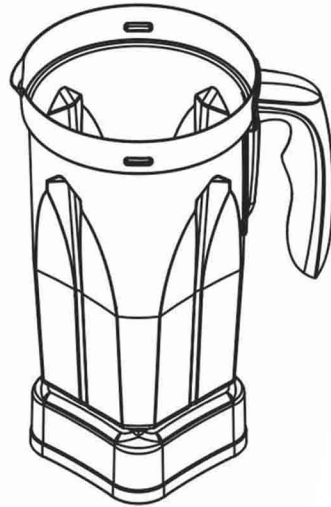  

stirring rod

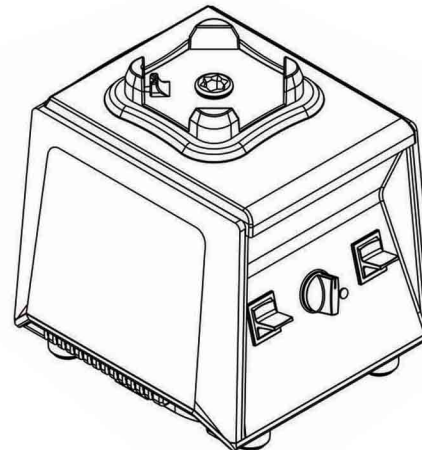 

MD-326S  
main machine



## START/STOP

To start or stop, pull up the power switch. To use the pulse function, pull down the switch. It will stop automatically when the switch has released



## TIME PROGRAM

Select the time program based on the ingredients or beverages you want to make



## VARIABLE SPEED

Adjust the variable speed to control the speed of the blending operation. There are 10 levels of variable speed





# how to operate MD-326S

MADIN CHEFMASTER



## Step 1

### Put the ingredients

Chefmaster blends grains and beans very well into powder. It used for kitchen ingredient preparation, ingredients such as chilli, onions, garlicks, etc



## Step 2

### Put the blender jar on to the machine properly

close the blender jar with the jar cover and condiment lid





## Step 3

### Select the timer program

Choose the timer program that you need to suit your ingredients or beverages. There are 3 auto-timer choices: 30, 60, and 120 seconds

## Step 4

### Pull up the power switch (ON)

Switch ON to start the blending operation. The program will be finished automatically

## Step 5

### Adjust the variable speed

When the blending process is in operation, adjust the speed to the level that you need

 




Put the JAR COVER and LID PROPERLY into the blender jar




When using the stirring rod, blender jar MUST be covered with jar cover



DO NOT put finger when the blender is in working process



 Before cleaning the machine or blender jar, remember to UNPLUG the cord

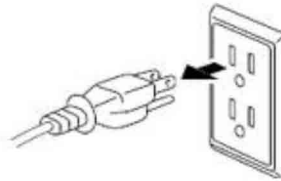

DO NOT use the machine for other purpose

DO NOT let any liquid reach inside the machine.

Ex: Water, milk, fructose, etc



DO NOT let any insects reach inside the machine



DO NOT put ice cube or ingredients until the whole jar



# Troubleshooting and Emergency Treatment

## 1. When motor does not move

Possible cause: Check the jar inserted correctly or not?

Press "recovery key" then unplug and re-plug the power cord. (Decoding automatically)


## 2. Operation suddenly stopped

Possible cause: Too much amount of ingredients (ice cubes). concentration of the ingredients is too high or the viscosity is too sticky

Situation above, the amount should be reduced by half or adding more. This machine is equipped with "safety off device". The machine will automatically power off when the electricity overloads, please unplug and re-plug, and then the machine will be able to use again.



1. The blender is provided with “Overload Protection Device”, when the temperature is over heat, the machine will turn off automatically.
2. Please unplug the power cord for 15 minutes. When the temperature back to normal, blender is ready to use again
3. If there is any sparkles or flames happened during operation. Please unplug it immediately and call nearest dealers or our company as soon as possible

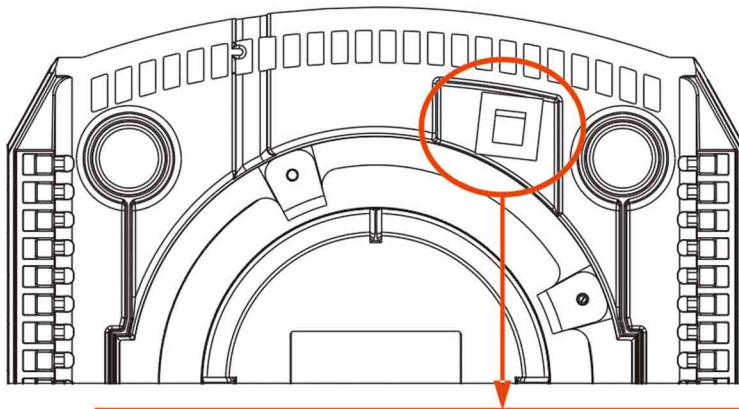

Temperature Protection Device

The blender will automatically shut off when the temperature is over from normal. Unplug the cord, let it rest for 15 minutes. When the temperature back to normal. The machines Is ready to use again.