


ViVOS LCD User Programming Guide (VG1-16z-V1)



Enter Programming: [**Mode** + **4 x Digits Code** + **Enter**]
(Default Code: 1234)

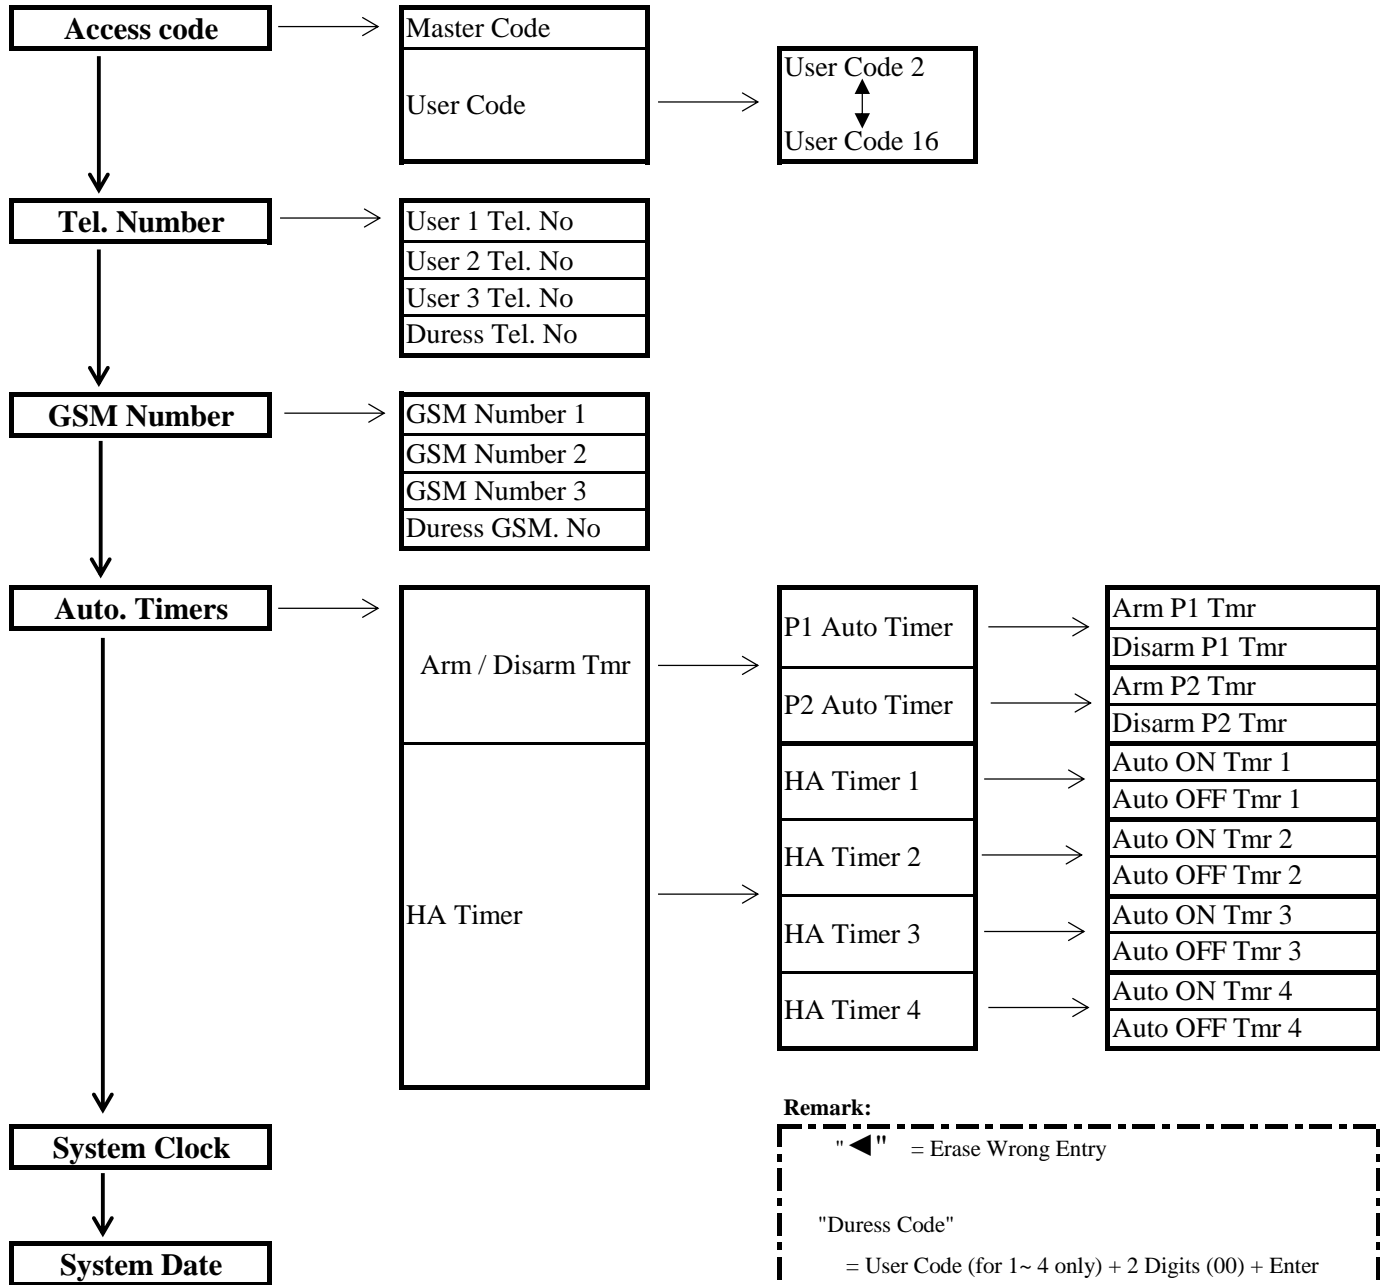

Remark:

"◀" = Erase Wrong Entry

"Duress Code"
= User Code (for 1~ 4 only) + 2 Digits (00) + Enter

Exit Programming: [**Mode** + **Enter**]