

Timer card TC3

	DC IN+	DC input from
	DC IN-	adapter
	NO+	Connect to EM Lock
	NC+	
	-	
	P.Butt	Connect to push button
	P.Butt	
	PUSH	Connect to PUSH signal from keypad