

Product Range :	Kitchen Stainless Steel Faucets		
Product Type :			
Model :	HT-MX-315/UCR	HT-MX-075CR	HT-MX-076CR

Pre-installation	Cut-out Dimension Diagram
<ul style="list-style-type: none"> ● Before installation, please ensure that the following work conditions are adhered to: <ul style="list-style-type: none"> - Water temperature between 0°C - 90°C - Water pressure between 0.05MPa – 1.0MPa. Pressure reducing valve is necessary if pressure exceeds 1.2MPa - Avoid major pressure differences between hot and cold water supply ● Flush pipes thoroughly before and after installation to ensure water supply is free of any debris. ● Inspect tap fitting and debugged to its best. Do not attempt to disassemble fitting on your own. ● Use thread sealant tape (PTFE) on any screw joining connections and ensure all joints are securely tightened. 	<p>A Tap Body E Metal O-washer B Rubber O-ring F Threaded fixing bushing C Sink top or Work top G Flexi bose D Rubber O-washer H Rubber O-ring for flexi hose</p>

Installation Steps
<ol style="list-style-type: none"> 1. An opening hole of 35mm diameter is required on sink top or work top (C) for installation of tap. 2. Slide the rubber O-ring (B) over the threaded tube and up to the base of tap (A). 3. Insert the threaded tube through the hole of sink top or work top (C) and position the tap properly. 4. Slide the rubber O-washer (D) and metal O-washer (E) over the threaded tube and up to the underside of sink top or work top (C). 5. Screw the fixing bushing (F) up to the metal O-washer (E). 6. Connect the flexi hoses (G) to the extension tube on one end and the hot or cold water supply on the other end. Please ensure that the hot water supply goes through the hot flexi hose while the cold water supply goes through the cold flexi hose.

<p>WARRANTY:</p> <ul style="list-style-type: none"> ▪ Lifetime warranty on Anti-rust ▪ 5-year warranty on tap cartridge ▪ 1-year warranty on manufacturing defects 	<p>PRODUCT WARRANTY REGISTRATION:</p> <ul style="list-style-type: none"> ▪ Log on to www.haustern.com for product warranty registration and more information on terms and conditions ▪ Product serial number 818-0114-00001
--	--

CLEANING RECOMMENDATION:
<ul style="list-style-type: none"> ▪ Tap should not be cleaned with abrasive materials such as steel wool or scourers ▪ Do not use any corrosive or abrasive cleaning agents containing acid or scouring agents

This specification is subject to change without notice. FIAMMA TRADING SDN. BHD. will not be held responsible for the use of superseded or voided specifications. Fabricator must check for cut-out accuracy.

Product Range :	Kitchen Stainless Steel Faucets		
Product Type :			
Model :	HT-MX-315/UCR	HT-MX-075CR	HT-MX-076CR

Pre-installation	Cut-out Dimension Diagram
<ul style="list-style-type: none"> ● Before installation, please ensure that the following work conditions are adhered to: <ul style="list-style-type: none"> - Water temperature between 0°C - 90°C - Water pressure between 0.05MPa – 1.0MPa. Pressure reducing valve is necessary if pressure exceeds 1.2MPa - Avoid major pressure differences between hot and cold water supply ● Flush pipes thoroughly before and after installation to ensure water supply is free of any debris. ● Inspect tap fitting and debugged to its best. Do not attempt to disassemble fitting on your own. ● Use thread sealant tape (PTFE) on any screw joining connections and ensure all joints are securely tightened. 	<p>A Tap Body B Rubber O-ring C Sink top or Work top D Rubber O-washer E Metal O-washer F Threaded fixing bushing G Flexi hose H Rubber O-ring for flexi hose</p>

Installation Steps
<ol style="list-style-type: none"> 1. An opening hole of 35mm diameter is required on sink top or work top (C) for installation of tap. 2. Slide the rubber O-ring (B) over the threaded tube and up to the base of tap (A). 3. Insert the threaded tube through the hole of sink top or work top (C) and position the tap properly. 4. Slide the rubber O-washer (D) and metal O-washer (E) over the threaded tube and up to the underside of sink top or work top (C). 5. Screw the fixing bushing (F) up to the metal O-washer (E). 6. Connect the flexi hoses (G) to the extension tube on one end and the hot or cold water supply on the other end. Please ensure that the hot water supply goes through the hot flexi hose while the cold water supply goes through the cold flexi hose.

WARRANTY: <ul style="list-style-type: none"> ▪ Lifetime warranty on Anti-rust ▪ 5-year warranty on tap cartridge ▪ 1-year warranty on manufacturing defects 	PRODUCT WARRANTY REGISTRATION: <ul style="list-style-type: none"> ▪ Log on to www.haustern.com for product warranty registration and more information on terms and conditions ▪ Product serial number 818-0114-00001
---	---

CLEANING RECOMMENDATION:
<ul style="list-style-type: none"> ▪ Tap should not be cleaned with abrasive materials such as steel wool or scourers ▪ Do not use any corrosive or abrasive cleaning agents containing acid or scouring agents

This specification is subject to change without notice. FIAMMA TRADING SDN. BHD. will not be held responsible for the use of superseded or voided specifications. Fabricator must check for cut-out accuracy.