

Product Range :	Stainless Steel Mixers			
Product Type :				
Model :	HT-MX-305/UCR	HT-MX-313/7CR	HT-MX-312/7CR	HT-MX-153CR
HT-MX-310/7CR	HT-MX-151CR	HT-MX-154CR	HT-MX-304/UCR	HT-MX-309/7CR
HT-ME-182/UCR	HT-MX-311/7CR	HT-MX-314/7CR	HT-MX-150CR	HT-MX-152CR
HT-EG-075CR	HT-EG-135CR			

<p>Pre-installation</p> <ul style="list-style-type: none"> ● Before installation, please ensure that the following work conditions are adhered to: <ul style="list-style-type: none"> - Water temperature between 0°C - 90°C - Water pressure between 0.05MPa – 1.0MPa. Pressure reducing valve is necessary if pressure exceeds 1.2MPa - Avoid major pressure differences between hot and cold water supply ● Flush pipes thoroughly before and after installation to ensure water supply is free of any debris. ● Inspect tap fitting and debugged to its best. Do not attempt to disassemble fitting on your own. ● Use thread sealant tape (PTFE) on any screw joining connections and ensure all joints are securely tightened. 	<p>Cut-out Dimension Diagram</p> <table border="1"> <tr> <td>A</td> <td>Tap Body</td> <td>G</td> <td>Metal C-washer</td> </tr> <tr> <td>B</td> <td>Rubber O-ring</td> <td>H</td> <td>Spring washer</td> </tr> <tr> <td>C</td> <td>Sink top or Work top</td> <td>I</td> <td>Lock nut</td> </tr> <tr> <td>D</td> <td>Hex nut</td> <td>J</td> <td>Flexi hose</td> </tr> <tr> <td>E</td> <td>Fixing bolt</td> <td>K</td> <td>Rubber washer for flexi hose</td> </tr> <tr> <td>F</td> <td>Rubber C-washer</td> <td></td> <td></td> </tr> </table>	A	Tap Body	G	Metal C-washer	B	Rubber O-ring	H	Spring washer	C	Sink top or Work top	I	Lock nut	D	Hex nut	J	Flexi hose	E	Fixing bolt	K	Rubber washer for flexi hose	F	Rubber C-washer		
A	Tap Body	G	Metal C-washer																						
B	Rubber O-ring	H	Spring washer																						
C	Sink top or Work top	I	Lock nut																						
D	Hex nut	J	Flexi hose																						
E	Fixing bolt	K	Rubber washer for flexi hose																						
F	Rubber C-washer																								

<p>Installation Steps</p> <ol style="list-style-type: none"> 1. An opening hole of 35mm diameter is required on sink top or work top (C) for installation of tap. 2. Put the rubber O-ring (B) under the base of tap (A). 3. Screw the flexi hoses (J) up to the base of tap (A). 4. Screw the fixing bolts (E) through the hex nut (D), then into the base of tap (A). 5. Insert the tap through the hole of sink top or work top (C) and position the tap properly. 6. Put the rubber C-washer (F), metal C-washer (G) & spring washer (H) over the fixing bolts (E) and up to the underside of sink top or work top (C). 7. Screw and fasten the lock nuts (I) up to spring washer (H). Please ensure the lock nuts (I) are tightened securely. 8. Connect the flexi hoses (J) to the hot or cold water supply on the other end. Please ensure that the hot water supply goes through the hot flexi hose while the cold water supply goes through the cold flexi hose.
--

WARRANTY:

- Lifetime warranty on Anti-rust
- 5-year warranty on tap cartridge
- 1-year warranty on manufacturing defects

PRODUCT WARRANTY REGISTRATION:

- Log on to www.haustern.com for product warranty registration and more information on terms and conditions
- Product serial number 818-0114-00001

<p>CLEANING RECOMMENDATION:</p> <ul style="list-style-type: none"> ▪ Tap should not be cleaned with abrasive materials such as steel wool or scourers ▪ Do not use any corrosive or abrasive cleaning agents containing acid or scouring agents
--

This specification is subject to change without notice. FIAMMA TRADING SDN. BHD. will not be held responsible for the use of superseded or voided specifications. Fabricator must check for cut-out accuracy.