

| | | | | |
|-----------------|-------------------------|--------------|--------------|--------------|
| Product Range : | Stainless Steel Faucets | | | |
| Product Type : | | | | |
| Model : | HT-MX-307C | HT-MX-300/UC | HT-MX-308/7C | HT-MX-201/C |
| HT-MX-202C | HT-ME-015C | HT-ME-180UC | HT-ME-181UC | HT-MX-200/UC |
| HT-MX-206/UC | HT-MX-207/UC | HT-EG-300/UC | HT-EG-502/UC | |

| Pre-installation | Cut-out Dimension Diagram | | | | | | | | | | |
|--|---|------------|----------------|-----------------|--------------|------------------|--------------------------------|------------------------|--------------|-------------------|--|
| <ul style="list-style-type: none"> ● Before installation, please ensure that the following work conditions are adhered to: <ul style="list-style-type: none"> - Water temperature between 0°C - 90°C - Water pressure between 0.05MPa – 1.0MPa. Pressure reducing valve is necessary if pressure exceeds 1.2MPa - Avoid major pressure differences between hot and cold water supply ● Flush pipes thoroughly before and after installation to ensure water supply is free of any debris. ● Inspect tap fitting and debugged to its best. Do not attempt to disassemble fitting on your own. ● Use thread sealant tape (PTFE) on any screw joining connections and ensure all joints are securely tightened. | <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">A Tap Body</td> <td style="width: 50%;">F Metal washer</td> </tr> <tr> <td>B Threaded tube</td> <td>G Fixing nut</td> </tr> <tr> <td>C Rubber O- ring</td> <td>H Rubber washer for Flexi hose</td> </tr> <tr> <td>D Sink top or Work top</td> <td>I Flexi hose</td> </tr> <tr> <td>E Rubber O-washer</td> <td></td> </tr> </table> </div> | A Tap Body | F Metal washer | B Threaded tube | G Fixing nut | C Rubber O- ring | H Rubber washer for Flexi hose | D Sink top or Work top | I Flexi hose | E Rubber O-washer | |
| A Tap Body | F Metal washer | | | | | | | | | | |
| B Threaded tube | G Fixing nut | | | | | | | | | | |
| C Rubber O- ring | H Rubber washer for Flexi hose | | | | | | | | | | |
| D Sink top or Work top | I Flexi hose | | | | | | | | | | |
| E Rubber O-washer | | | | | | | | | | | |

| Installation Steps |
|--|
| <ol style="list-style-type: none"> 1. An opening hole of 25mm diameter is required on sink top or work top (D) for installation of tap. 2. Slide the rubber O-ring (C) over the threaded tube (B) and up to the base of tap (A). 3. Insert the threaded tube (B) through the hole of sink top or work top (D) and position the tap properly. 4. Slide the rubber O-washer (E) and metal O-washer (F) over the threaded tube (B) and up to the underside of sink top or work top (D). 5. Screw and fasten the fixing nut (G). Please ensure the fixing nut (G) is tightened securely. 6. Connect the flexi hose (I) with rubber O-washer (H) to threaded tube (B) on one end and the water supply on the other end. |

WARRANTY:

- Lifetime warranty on Anti-rust
- 5-year warranty on tap cartridge
- 1-year warranty on manufacturing defects

PRODUCT WARRANTY REGISTRATION:

- Log on to www.haustern.com for product warranty registration and more information on terms and conditions
- Product serial number 818-0114-00001

CLEANING RECOMMENDATION:

- Tap should not be cleaned with abrasive materials such as steel wool or scourers
- Do not use any corrosive or abrasive cleaning agents containing acid or scouring agents

This specification is subject to change without notice. FIAMMA TRADING SDN. BHD. will not be held responsible for the use of superseded or voided specifications. Fabricator must check for cut-out accuracy.