

Product Range :	Stainless Steel Mixers		
Product Type :			
Model :	HT-MX-301/UCR		

Pre-installation	Cut-out Dimension Diagram
<ul style="list-style-type: none"> <li>● Before installation, please ensure that the following work conditions are adhered to: <ul style="list-style-type: none"> <li>- Water temperature between 0°C - 90°C</li> <li>- Water pressure between 0.05MPa – 1.0MPa. Pressure reducing valve is necessary if pressure exceeds 1.2MPa</li> <li>- Avoid major pressure differences between hot and cold water supply</li> </ul> </li> <li>● Flush pipes thoroughly before and after installation to ensure water supply is free of any debris.</li> <li>● Inspect tap fitting and debugged to its best. Do not attempt to disassemble fitting on your own.</li> <li>● Use thread sealant tape (PTFE) on any screw joining connections and ensure all joints are securely tightened.</li> </ul>	<ul style="list-style-type: none"> <li>A Tap body</li> <li>B Rubber O ring</li> <li>C Sink top or work top</li> <li>D Threaded tube</li> <li>E Extension tube</li> <li>F Sprayer hose</li> <li>G Plastic fitting I</li> <li>H Tri-bracket</li> <li>I Plastic fitting II</li> <li>J Rubber C washer</li> <li>K Metal C washer</li> <li>L Fixing washer</li> <li>M Screws</li> <li>N Lock nut</li> <li>O Flex hose</li> <li>P Weighing ball</li> <li>Q Rubber washer for flexi hose</li> <li>R Hexagon join</li> <li>S Rubber washer for sprayer hose</li> </ul>

Installation Steps
<ol style="list-style-type: none"> <li>1. An opening hole of 35mm diameter is required on sink top or work top (C) for installation of tap.</li> <li>2. Slide the rubber O-ring (B) up to the base of tap (A).</li> <li>3. Screw the flexi hoses (O) up to the extension tube (E), then insert the tap through the hole of sink top or worktop (C), and position the tap properly.</li> <li>4. Slide the plastic fitting I (G) and Tri-bracket (H) through the extension tube (E) and threaded tube (D), then slide the plastic fitting II (I) through the sprayer hose (F) and up to the Tri-bracket (H). <b>Important: ensure the opening of plastic fitting I (G) is close to threaded tube (E), and the sprayer hose (F) runs freely through the plastic fitting II (I).</b></li> <li>5. Put rubber C-washer (J), metal C-washer (K), fixing washer (L) &amp; 2 pieces lock nuts (N) through the threaded tube (D), and fasten the screws (M) and lock nuts (N) securely. <b>Important: make sure the hose runs smoothly before tightened the lock nuts.</b></li> <li>6. Connect the flexi hoses (O) to the hot &amp; cold water supply, and the sprayer hose to the threaded tube (D) via Hexagon join (R) .</li> <li>7. Adjusting the pull-out length of sprayer hose and fasten the weighing ball (P) with screws.</li> </ol>

<b>WARRANTY:</b> <ul style="list-style-type: none"> <li>▪ Lifetime warranty on Anti-rust</li> <li>▪ 5-year warranty on tap cartridge</li> <li>▪ 1-year warranty on manufacturing defects</li> </ul>	<b>PRODUCT WARRANTY REGISTRATION:</b> <ul style="list-style-type: none"> <li>▪ Log on to <a href="http://www.haustern.com">www.haustern.com</a> for product warranty registration and more information on terms and conditions</li> <li>▪ Product serial number 818-0114-00001</li> </ul>
---	---

CLEANING RECOMMENDATION:
<ul style="list-style-type: none"> <li>▪ Tap should not be cleaned with abrasive materials such as steel wool or scourers</li> <li>▪ Do not use any corrosive or abrasive cleaning agents containing acid or scouring agents</li> </ul>

*This specification is subject to change without notice. FIAMMA TRADING SDN. BHD. will not be held responsible for the use of superseded or voided specifications. Fabricator must check for cut-out accuracy.*