







<b>PRODUCT CATEGORY :</b>	<b>UF SEAT COVER</b>	
<b>MODEL :</b>	HTCC-BEVER-2003	HTCC-BEVER-2036
	HTOP-BEVER-1068	HTOP-BEVER-1003

- These instructions are only a guide and all Haustern products must be installed by a qualified contractor.
- Ensure that the correct tools are used in each step of these procedures.

<p><b>STEP 1:</b> Insert the screw to the hole of the pan.</p> 	<p><b>STEP 2:</b> Loosely install the setscrew in order to adjust the seat cover properly.</p> 	<p><b>STEP 3:</b> Install the stainless steel screw cover on the set screw. Take out the seat cover once the installation position is confirmed.</p> 
<p><b>STEP 4:</b> Fixed the UF Seat Cover on the pan. Adjust the seat cover by accurately aiming the hole of the seat cover to the set screw. Ensure the seat cover and pan match nicely.</p> 	<p><b>STEP 5:</b> Finished.</p> 	<p><b>STEP 6:</b> Should you require removing the seat cover, gently press the left and right button simultaneously and gradually pull upward to remove the seat cover.</p> 

### WARRANTY:

1. 3-year warranty on Seat Cover.

Log on to [www.haustern.com](http://www.haustern.com) for more information on terms and conditions

*This specification is subject to change without notice. FIAMMA TRADING SDN. BHD. will not be held responsible for the use of superseded or voided specifications. Fabricator must check for cut-out accuracy.*