

XP-SR200KN (Codef) ↓
 Switchable Standalone Proximity Reader with Keypad
 Programming Instructions

STANDALONE MODE

AutoPIN	
01...10: AutoPIN Location	- Enter 2 digits number between 01 and 10. - Key in the 4 digits AutoPIN number. - Press # to confirm.
MasterPIN and SuperPIN	
51: MasterPIN	- Press 51. - Key in the new 6 digits MasterPIN. - Press # to confirm.
52: SuperPIN	- Press 52. - Key in the new 6 digits SuperPIN. - Press # to confirm.
Operation Mode	
61: AutoPIN Mode	- Press 61. - Press 1 to enable or 0 to disable AutoPIN mode. - Press # to confirm.
62: Security Mode	- Press 62. - Press 1 for ON or 0 for OFF. - Press # to confirm.
63: Card+PIN Mode	- Press 63. - Press 1 for ON or 0 for OFF. - Press # to confirm.
64: Card Lock Out Mode	- Press 64. - Press 1 for ON or 0 for OFF. - Press # to confirm.
Door: Open Time & Lock/Release Time	
71: Door Open Time	- Press 71. - Enter the required duration (0 - 99 sec.). - Press # to confirm.
72: Lock Release Time	- Press 72. - Enter the required duration (0 - 99 sec.). - Press # to confirm.

XP-SR200KN (CodeProx)
 Switchable Standalone Proximity Reader with Keypad
 Programming Instructions (continue)

STANDALONE MODE

Card Database	
81: Install Card	- Press 81. - Key in a six digit card number or scan the new card to the reader. - Press # to confirm. - Press * to cancel operation.
82: Delete Card	- Press 82. - Key in a six digit card number or scan the card to be deleted to the reader. - Press # to confirm. - Press * to cancel operation.
83: Clear User DB	- Press 83. - Press # to confirm the clearing of the ENTIRE card database in the reader. - Press * to cancel operation.
Changing CardPIN	
To change the CardPIN for a particular card, the following steps are to be taken. 1. Make sure the system is in normal operation mode and not in programming mode. 2. Press * (asterisk) three (3) times. The system will enter change PIN mode. 3. Flash the card where the PIN number needs to be changed. 4. Then enter the current 4 digits CardPIN. 5. After that, enter the new 4 digits CardPIN. 6. Enter the new 4 digits CardPIN again for confirmation. 7. CardPIN change is completed.	