

EP100S

Jantech EP100S

Default operation mode is **CARD** or **PIN**

To Enter Programming Mode Press 'MENU' once.

'RED' Led will be ON.

Default Password is '123456' Enter

Inside Programming Mode

Change Password Pin

Press 1 follow by 'PPPPPP CCCCCC' then press Enter

*Where P is New Password

*Where C is Confirm Password

Install Card and Pin

Press 2 follows by 4 digits Pin then press Enter and Flash Card (card exist pin will be overwrite with new pin)

Install Range of Card

Press 3 then key in range of card number (5 digits). Example: 12345 to 12354 then press Enter (means 10 card added)

Pin number will the last 4 digits of the card number.

Install Card by Flashing Card (normally for card number not in sequence)

Press 31 then Enter and Flash Card continuously

Press ESC to exit from card adding mode

Delete a User Card from Card Database (5 digits card number)

Press 4 then 5 Digits Card Number and Enter

(pin that attached to this card will be deleted as well)

Lock Release Time

Press 6 follow by time in Second [05] (is 5 Second) then press Enter .

(Time second can up to 9999 seconds)

Activate Operation Mode:

Press 70 then Enter (Card Only)

Press 71 then Enter (Card or Pin)

Press 72 then Enter (Card plus Pin)

Master Pin Code Entry

To add master pin = Press 91 then 4 Digits Pin then Enter

To delete pin = Press 91 then Enter

Where 91 for pin set number 1

Where 94 for pin set number 4

Where 92 for pin set number 2

Where 95 for pin set number 5

Where 93 for pin set number 3

Enable/Disable Tamper (Reader Tamper)

Press 81 then 1 then Enter (enable)

Press 81 then 0 then Enter (disable)

Enable/Disable Door Sensor (Magnetic Contact)

Press 82 then 1 then Enter (enable)

Press 82 then 0 then Enter (disable)

Enable/Disable EM Lock (Electromagnetic Lock)

Press 83 then 1 then Enter (enable)

Press 83 then 0 then Enter (disable)

Clear Database

Press 00 then Enter (All Card Database Will Be Erase)

Exit Programming Mode

Press ESC once

Cold Start

Off Power then Press and Hold the Cold Reset Button and On Power

