

One Door Access Control

K6

Enter Programming Mode: # 123456 # Exit Programming Mode : Press * To Exit

Change programming mode: Press 0 New programming code # Reconfirm Again # (3-6 Digit)

Set Open Door Mode: Press 6 01 # (Card Only)
Press 6 02 # (Card or Pin)
Press 6 03 # (Card & Pin)

Add User By Card : Press 1 Read New Card # (Can Add Continuously)

Add User By pin : Press 21 New Master Code # (Only 1 Pin) 3-6 Digit
Press 22 New Access Code # (Up To 1000 User) 3-6 Digit

Add User By Card & Pin : Press 3 Read New Card Input New Pin #

Change Pin (When Open mode :Card & Pin)
After Read Card & Input Pin # (Quick Hold # for 5 second) Until Green LED flashing, Then Input New Pin # Reconfirm Again #

Delete User (All Card & Pin) Not Include Master Code : Press 4 0 0000 #

Delete user By Card : Press 4 1 Read card #

Delete user By User : Press 4 4 Input Pin #

Delete user (ALL PIN) : Press 4 5 1111 #

Change Time Locking : Press 5 XX # (XX Mean 2 Digit No in Second)
Example : 03 is 3 second (Max 99 second)

Set Security Mode: Press 7 00 # Turn Off
Press 7 01 # Turn On

(Security would be locked 5 minutes when read illegal card or input wrong password for 10 times)

Set Manager Add & Delete Card:
Press 9 1 Read Manager Add Card (AMC) Read Manager Delete Card # (DMC)
(New Card) (New Card)

Funtion Manager Card:

Add Card Using (AMC) : Read (AMC) Read Card Read (AMC) (Can Add Continuously)

Delete Using (DMC) : Read (DMC) Read Card Read (DMC)

Delete Manager Card : # Programming Code # 92 #
(123456)

Restore Factory Default: Press 8 99 # (Except Programming Code & Manager Card)

Reset Programming Code: switch Off power Supply – Connect Jumper to 2&3 On S1
Switch On Back & Buzzer Give a long Beep
Switch Off Power Supply – Connect Jumper Back to 1 & 2 On S1
After Power On ,Device will Default the Programming Mode (# 123456 #)

To Delete Card By Using Card No : # 123456 # , 43 , Input Card Number (8 Digit From Behind) #