

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons by doing the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
4. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
5. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
6. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
7. To reduce the risk of electric shock, do not disassemble this product. Take it to a qualified serviceman when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
8. Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.

Please keep this unit away from equipment that uses radio waves or microwaves, a portable radio, a microwave oven, etc. This type of equipment may cause improper operation.

CONNECTION TO THE TELEPHONE LINE

Connect the line cord to the bottom of the AT-40 and to PABX/KTS Extension Socket.

Note : Use the AT-40 TEL only behind a PBX or a KTS.

DIAL MODE

Either "T (Tone/DTMF)" or "P (Pulse/DP)" mode is selected by Dial Mode switch which is located on the bottom side of AT-40.

Note : Confirm PABX/KTS Supplier.



TELEPHONE RINGER SET UP

There are three different ringers available and three different volumes for each ringer. One of ringers and volumes can be assigned by the following operation.

1. Lift Handset.
2. Press MUTE key.
3. Dial "#"
4. Select a number 0-9 from the table.
5. Press MUTE Key.
6. Hang up to finish.

Dial	Ringer Type	Volume
1	A	Low
2	A	Mid
3	A	High
4	B	Low
5	B	Mid
6	B	High
7	C	Low
8	C	Mid
9	C	High
0	-	Off

Note : If you disconnect the phone from the network, ringing tone assignment will be back to default in a few hours.

MAKING A CALL

1. Lift Handset. The IN USE LED will illuminate.
2. Wait for the Dial Tone and then dial the telephone number.
3. Hang up to terminate the call.

Note : Trunk Access Code dialling is necessary before dialling the telephone number in case AT-40 is connected to the PABX/KTS.

FLASH

1. While on a call, press FLASH Key.

Note : In case AT-40 is connected to the PABX/KTS, you can send the "Flash" by pressing FLASH Key.

VOLUME CONTROL

The handset earpiece volume can be adjusted in 5 stepped increments during a call.

Press ▲ to increase the volume, or ▼ to decrease the volume.

MUTE


1. While on a call, press MUTE Key to mute.
2. Press MUTE Key again to resume conversation.

LAST NUMBER REDIAL

1. Lift Handset.
2. Press REDIAL Key.

Note : If you disconnect the phone from the network, redial memory will be erased in a few hours.

LOCATION OF CONTROLS

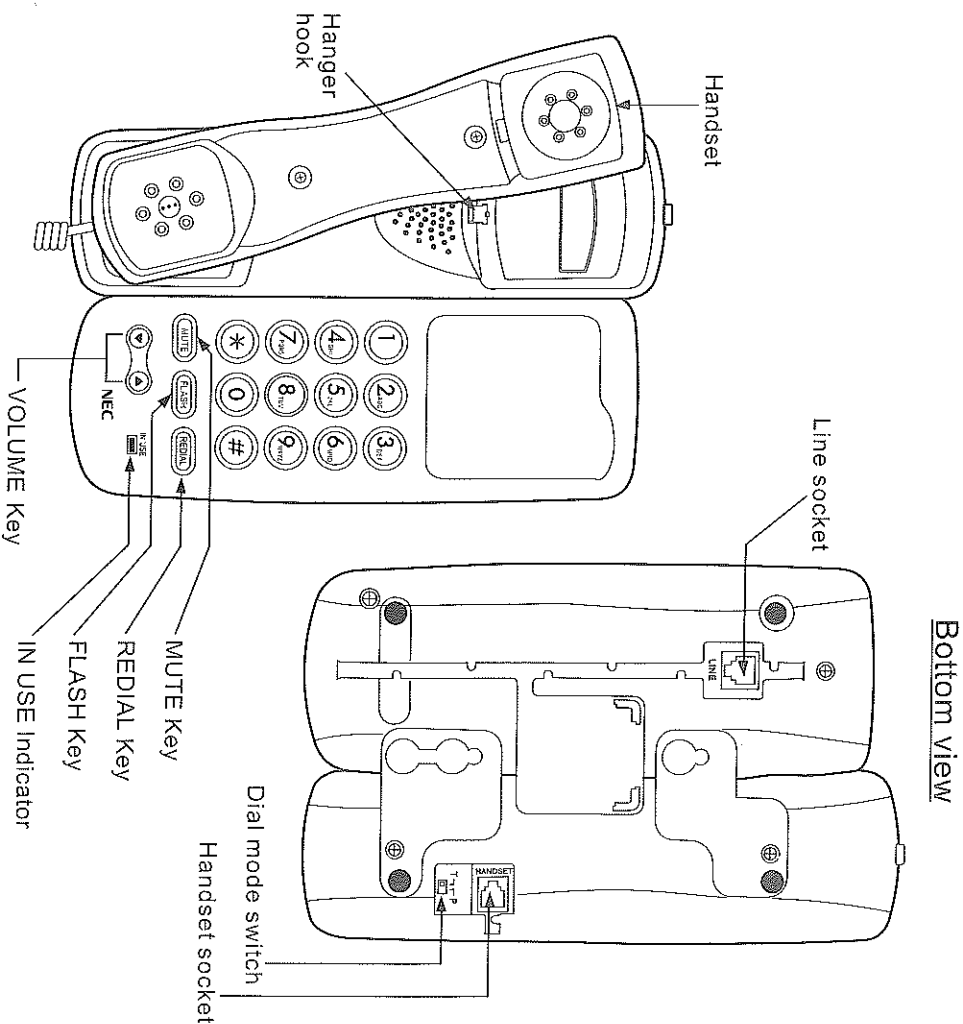

Nothing contained in this manual shall be deemed to be, and this manual does not constitute, a warranty of, or representation with respect to, any of the equipment covered. This manual is subject to change without notice and NEC Infrontia Corporation has no obligation to provide any updates or corrections to this manual. Further, NEC Infrontia Corporation also reserves the right, without prior notice, to make changes in equipment design or components as it deems appropriate. No representation is made that this manual is complete or accurate in all respects and NEC Infrontia Corporation shall not be liable for any errors or omissions in, or event shall NEC Infrontia Corporation be liable for any incidental or consequential damages in connection with the use of this manual. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied or reproduced without prior written consent of NEC Infrontia Corporation.