

SBS-2510 Digital Density Meter

Reference Manual



1-800-554-2243 www.sbsbattery.com Test@sbsbattery.com

Table of Contents

1	Intro	duction		4
2	Safe	ty Inform	nation	5
	2.1		ons of signal words and warning symbols	5
	2.2	Product	specific safety notes	5
3	Desi	gn and Fu	unction	7
	3.1	Instrum	nent overview	7
	3.2	Overvie	w of functions	7
	3.3	User int	terface	9
		3.3.1	Home screen	9
		3.3.2	Icons on the screen	
4			nd commissioning	10
	4.1		of delivery	
	4.2		the density meter	
	4.3		the density meter	
		4.3.1	Charge with the AC adapter	
		4.3.2	Charge with a computer	
	4.4		or working with the sample pump	
		4.4.1	Activate the sample pump mode	
	4.5	4.4.2	Install the filling tube	
	4.5		accessories	
		4.5.1	Setup for working with a syringe	
		4.5.1.1	Activate the syringe mode	
		4.5.1.2	Install the connector for the syringe	
		4.5.2	Connect a Printer	
		4.5.2.1	Connect a USB printer	
		4.5.2.2 4.5.2.3	Connect a Bluetooth printer	
	4.6		Print a test page	
	4.0	4.6.1	re the density meter	16
		4.6.2	Change the temperature unit	17
		4.6.2	Change the density unit	
		4.6.4	Change energy saver settings	
		4.6.5	Protect actions with a password	
		4.6.5.1	Enable the password protection	
		4.6.5.2	Disable the password protection	
		4.6.5.3	Change the password	
		4.6.6	Activate and deactivate the auto rotation of the screen	
		4.6.7	Activate and deactivate the audio signal	
		4.6.8	Change the keyboard layout	
		4.6.9	Change the language	
		4.6.10	Activate and deactivate a cleaning reminder	
	4.7		re density determinations	
	11.7	4.7.1	Create, change or deletea method	
		4.7.1.1	Create a method	
		4.7.1.2	Change a method	
		4.7.1.3	Delete a method	
		4.7.2	Change a test	
		4.7.3	Change an adjustment	
		4.7.4	Configure the user guidance	
		4.7.4.1 4.7.4.2	Define the level of user guidance	
		4.7.4.2	Define the pump speed Define the fill cycle (only guided workflow)	
		T./.T.	Define the fill cycle (offix galaca workhow)	

		4.7.4.4 Define the cleaning type (only guided workflow)		23 23
		4.7.6.1 Density and specific gravity		
		4.7.6.2 Alcohol concentration		
		4.7.6.3 American Petroleum Institute (API)		25
		4.7.6.4 Baumé scale		
		4.7.6.5 Sulfuric acid concentration		26
		4.7.6.6 Sugar concentration		
		4.7.6.7 User defined concentration		26
		4.7.6.8 Define the temperature-compensation coefficient		
		4.7.7 Configure the automatic documentation of results		
		4.7.7.1 Configure the sample or standard identification		
		4.7.7.2 Configure the automatic printing of results		
		4.7.8 Configure result limits		
		4.7.9 Configure a standard		
		4.7.10 Configure the tolerance for a test		31
	000	alian	22	
5	5.1	ration Start up the density meter	33	
	5.2	Shut down the density meter		
	5.3	•		
	5.5	Navigate and enter information		
		5.3.2 Enter text and numbers		
	5.4	Typical phases of density determinations		
	7.7	5.4.1 Fill the measuring cell and measure the density		
		5.4.2 Prepare the measuring cell for the next sample		
	5.5	Example: Density determination using the sample pump		
	5.5	5.5.1 Configure the method		
		5.5.2 Perform the density determination		
	5.6	Example: Density determination using a syringe		
	5.0	5.6.1 Configure the method		
		5.6.2 Perform the density determination		
	5.7	Example: Density determination of cold or hot samples	41	
	017	5.7.1 Configure the method		
		5.7.2 Perform the density determination		
	5.8	View, export, print and delete results		
		5.8.1 View results		
		5.8.2 Delete all results		
		5.8.3 Export and print results		
		5.8.3.1 Print results		
		5.8.3.2 Configure the filter		
6		tenance	47	
	6.1	Maintenance schedule		
	6.2	Clean the density meter		
		6.2.1 Clean the housing		
		6.2.2 Clean the measuring cell	48	
		6.2.2.1 Clean using the sample pump		
		6.2.2.2 Clean using a syringe		
	6.			
		6.3.1 Example: Test with water		
		6.3.1.1 Configure the test		
		6.3.1.2 Perform the test		
	_	6.3.2 Measures if a test fails		
	6.4	-p /		51 52
	6	5 Penlace the filling tube		5)

	6.6	Replace the sample pump	52
	6.7	Update the firmware	53
	6.8	Prepare the density meter for storage	53
	6.9	Ship the density meter	53
	6.10	Dispose of the density meter	
7	Trouk	pleshooting	55
	7.1	List of errors and problems	55
	7.2	Restore the factory adjustment data	
	7.3	Adjust the measurement accuracy	
		7.3.1 Example: Adjustment with water	
		7.3.1.1 Configure the adjustment	
		7.3.1.2 Perform the adjustment	
	7.4	Restore the factory settings	
	7.5	View the firmware version and other system information	
8	Tech	nical data	60
	8.1	Density meter	60
	8.2	Measurement	
9	Acce	essories	62
	9.1	Sampling	62
	9.2	Printers	
	9.3	Miscellaneous accessories	
10	Appe	endix	64
	10.1	Density of pure water (040 °C)	64
		Temperature-compensation coefficients	
	Inde	X	65

1 Introduction

Thank you for choosing a STORAGE BATTERY SYSTEMS SBS-2510 digital density meter. The handheld density meter is a measuring instrument used to determine the density of liquids.

About this document

The instructions in this document refer to the handheld density meter SBS-2510 running firmware version V1.0.0 or higher.

If you have any additional questions, contact your authorized SBS sales representative or dealer. https://www.sbsbattery.com

Conventions and symbols

Note: For useful information about the product.



Refers to an external document.

Elements of instructions

- Prerequisites
- 1 Steps
- 2 Steps
- ⇒ Intermediate results
- з Steps
- ⇒ Results

2 Safety Information

- This Reference Manual contains a full description of the instrument and its use.
- Keep the Reference Manual for future reference.
- Include the Reference Manual if you transfer the instrument to other parties.

Only use the instrument according to the Reference Manual. If you do not use the instrument according to the Reference Manual or if it is modified, the safety of the instrument may be impaired and Storage Battery Systems LLC, assumes no liability.

2.1 Definitions of signal words and warning symbols

Safety notes contain important information on safety issues. Ignoring the safety notes may lead to personal injury, damage to the instrument, malfunctions and false results. Safety notes are marked with the following signal words and warning symbols:

Signal words

WARNING A hazardous situation with medium risk, possibly resulting in death or severe injury

if not avoided.

NOTICE A hazardous situation with low risk, resulting in damage to the instrument, other

material damage, malfunctions and erroneous results, or loss of data.

Warning symbols



Electrical shock

2.2 Product specific safety notes

Intended use

The digital density meter is designed to be used by trained staff and is intended for measuring the density of liquid samples that are compatible with the materials with which they come into contact.

The digital density meter is designed for indoor and outdoor operation in dry conditions. The following site requirements apply:

- The ambient conditions are within the limits specified in the technical data.
- Non corrosive gas atmosphere
- Non explosive atmosphere
- No powerful electric or magnetic fields

Any other type of use and operation beyond the limits of use stated by Storage Battery Systems, LLC without consent from Storage Battery Systems, LLC is considered as not intended.

This device complies with Industry Canada license-exempt RSS standard(s) and part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsibilities of the instrument owner

The instrument owner is the person holding the legal title to the instrument and who uses the instrument or authorizes any person to use it, or the person who is deemed by law to be the operator of the instrument. The instrument owner is responsible for the safety of all users of the instrument and third parties.

Storage Battery Systems, LLC assumes that the instrument owner trains users to safely use the instrument in their workplace and deal with potential hazards. Storage Battery Systems, LLC assumes that the instrument owner provides the necessary protective gear.



MARNING

Danger of death or serious injury due to electric shock!

Contact with parts that carry a live current can lead to death or injury.

- 1 Only use the SBS AC adapter designed for your instrument.
- 2 Keep all electrical cables and connections away from liquids and moisture.
- 3 Check the cables and the plugs for damage and replace damaged cables and plugs.




NOTICE

Risk of damage to the instrument due to the use of unsuitable parts!Using unsuitable parts with the instrument can damage the instrument or cause it to malfunction.

 Only use parts from Storage Battery Systems, LLC that are intended to be used with your instrument.

3 Design and Function

3.1 Instrument overview

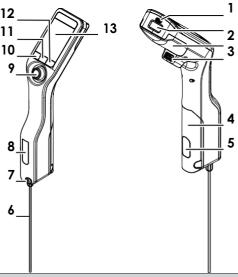


No.	Name	Function
1	USB-C socket	To connect the density meter with the AC adapter or a computer.
2	Battery cover	To access the battery.
3	USB-A socket	To connect a USB, USB printer or Bluetooth Dongle.
4	Sample pump cover	To access the sample pump.
5	Sample pump window	To view the sample pump and to check if the sample pump is filled or empty.
6	Filling tube	To fill and drain the measuring cell.
7	Filling opening with locking screw	To fill and drain the measuring cell using a syringe. The locking screw closes off the filling opening.
8	Measuring cell window	To view the measuring cell and to check if the measuring cell is filled or empty.
9	Navigation joystick	To navigate through the menus.
10	Key 1	To start up the density meter, select menu items and to navigate.
11	Key 2	To select menu items and to navigate.
12	Key 3	To select menu items and to navigate.
13	Screen	To display settings and results.

3.2 Overview of functions

The digital density meter uses an oscillating body method as measurement technology. The digital density meter has no active temperature control.

If you measure samples with low viscosity, you can use the sample pump (1) and the filling tube (2) to fill the measuring cell (5). For samples with high viscosity you can use a syringe (3) and the connector for the syringe (4) to fill the measuring cell (5). The user can observe the filling through the window of the measuring cell.

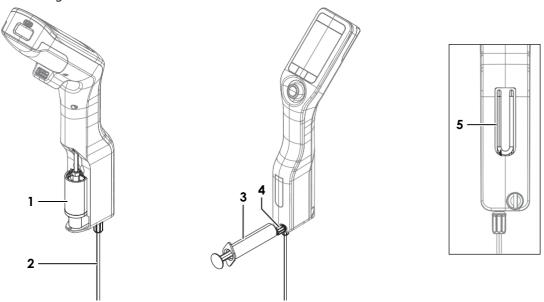

For repeated measurements, you can define and save workflows as methods. Two workflow types are available:

- Customizable guided workflow: guides the user step by step through the density determination.
- Unguided workflow: the user decides which steps are needed.

The results are automatically converted into one of the following predefined units or a unit that the user defines.

- Density
- Specific gravity
- Alcohol concentration
- American Petroleum Institute (API density, API specific gravity, API degree)
- Baumé scale
- Sulfuric acid concentration
- Sucrose concentration

3.3 User interface

3.3.1 Home screen



No.	Name	Explanation	
1	Status ribbon	Displays the current date, time, battery charge status and connection to Accessories.	
2	Method ribbon	Displays the type of density determination and the method identification or the selected standard.	
		MS: measurement using a method	
		• TE: test	
		ADJ: adjustment	
3	Sample ID ribbon	Displays the sample ID.	
4	Measuring ribbon	Displays the unit, the measured value or result and the temperature of the measuring cell.	
5	Sampling ribbon	Displays the current status of the sample pump or syringe.	
6	Key functions ribbon	Displays the function of the keys.	

3.3.2 Icons on the screen

Icon	Location	Explanation
	Statusribbon	Barcode reader is scanning.
Ε.	Status ribbon	Density meter is sending data to the printer.
	Status ribbon	Shows the charge of the battery.
4	Status ribbon	Battery is charging.
重	Sampling ribbon	Syringe mode activated. The sample pump is deactivated.
	Sampling ribbon	Sample pump activated and piston in the lowermost position.
	Sampling ribbon	Sample pump activated and piston in the uppermost position.

4 Installation and commissioning

4.1 Scope of delivery

Part		Order number		
	Handheld density meter	SBS-2510		
	Filling Tube 190 mm Tube Connector syringe/filling tube Washer	2510-TUBE-190		
	Battery Li-Ion 2400mAh	2510-BATTERY		
	USB-Charger	2510-USB-C		
	Bluetooth Dongle	2510-DONGLE		
8	User Manual	_		

4.2 Unpack the density meter

- 1 Remove the SBS-2510 digital density meter from the protective packaging.
- 2 Store the packing material for later transport over long distances.
- 3 Check if you received all parts listed in the scope of delivery.
- 4 Inspect the parts visually for flaws ordamage.
- 5 If parts are missing or damaged, report it immediately and file a freight claim if needed.

4.3 Charge the density meter

You can either charge the SBS-2510 digital density meter using the supplied AC adapter or a computer. Recharging an empty battery takes approximately three hours.

4.3.1 Charge with the AC adapter

The AC adapter is suitable for all supply line voltages ranging from 100...240 V AC and 50/60 Hz.



MARNING

Danger of death or serious injury due to electric shock!

Contact with parts that carry a live current can lead to death or injury.

- 1 Only use the Storage Battery Systems SBS-2510 AC adapter designed for your instrument.
- 2 Keep all electrical cables and connections away from liquids and moisture.
- 3 Check the cables and the plugs for damage and replace damaged cables and plugs.



NOTICE

 
Danger of damage to the AC adapter due to overheating!

If the AC adapter is covered or in a container, it is not sufficiently cooled and overheats.

- 1 Do not cover the AC adapter.
- 2 Do not put the AC adapter in a container.

Assemble the AC adapter

- 1 Slide the desired set of prongs (1) into the AC adapter (2).
- 2 Insert the USB-A plug of the USB-C cable in the USB-A socket of the AC adapter.



Connect the density meter to the power supply

- 1 Insert the USB-C plug of the USB-C cable in the USB-C socket of the density meter.
- 2 Install the cables in such a way that they cannot be damaged or interfere with operation.
- 3 Insert the plug of the AC adapter in a power outlet that is easily accessible.
- ⇒ The density meter starts charging and the **1** icon is displayed.

Change the prongs of the AC adapter

- 1 Pull the plug of the AC adapter out of the power outlet.
- 2 Push the button (2) and slide the set of prongs (1) out.
- 3 Slide the desired set of prongs into the AC adapter.



4.3.2 Charge with a computer

A running computer with USB-A sockets (USB 2.0 or higher) is available.

- 1 Insert the USB-C plug of the USB-C cable in the USB-C socket of the density meter.
- 2 Install the cables in such a way that they cannot be damaged or interfere with operation.

- 3 Insert the USB-A plug in the USB-A socket of the computer.
- ⇒ The density meter starts charging and the **1** icon is displayed.


4.4 Setup for working with the sample pump

4.4.1 Activate the sample pump mode

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Measurement** > **Sampling**.
 - ⇒ The **Sampling** window opens.
- 3 Navigate to **Sample pump**.
- 4 Press the **OK** key.
- 5 Navigate back to the home screen.
- \Rightarrow The icon $\stackrel{..}{\downarrow}$ is displayed in the sampling ribbon.

4.4.2 Install the filling tube


- The filling tube (tube (1), connector (2) and washer (3)) is assembled.
- The locking screw (2) is installed and tight.
- Screw the connector (1) of the filling tube into the opening (3) and tighten it.

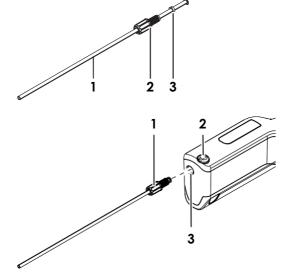

4.5 Install accessories

4.5.1 Setup for working with a syringe

When you work with a syringe you can place the density meter either on the bench or hold it upright.

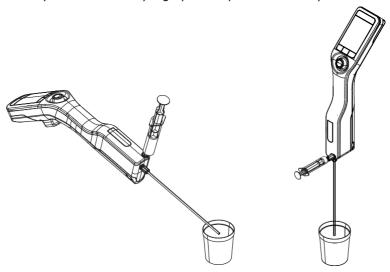


4.5.1.1 Activate the syringe mode

- The piston is in the lowermost position.
- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Measurement** > **Sampling**.
 - \Rightarrow The **Sampling** window opens.
- 3 Navigate to **Syringe**.
- 4 Press the **OK** key.
- 5 Navigate back to the home screen.
 - \Rightarrow The icon $\frac{1}{4}$ is displayed in the sampling ribbon.
- 6 If you want place the density meter on the bench, activate the auto rotation of the screen.

See also

4.5.1.2 Install the connector for the syringe


- The connector for the syringe is available.
- The filling tube is installed.
- 1 Unscrewthe locking screw counterclockwise with a flat screwdriver and remove it.

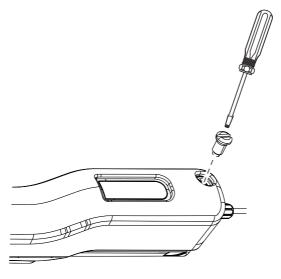

2 Screwthe connector into the filling opening and tighten it.

See also

- ☐ Install the filling tube Page 12

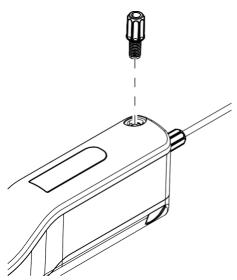

4.5.2 Connect a printer

In order to print the results right after the measuring procedure, the density meter has to be connected to a USB or Bluetooth printer. Alternatively, the results can be printed at a later time from the **Results** menu.

The following printer types are compatible with the density meter:

Connection type	Printer	
Bluetooth	2510-DONGLE	(sold separately)
USB	2510-PRINTER	(sold separately)

Note

The Bluetooth function is only available in selected countries with the necessary approvals. For more information, contact an authorized Storage Battery Systems, LLC sales or service representative.

https://www.sbsbattery.com



Refer to the user documentation of your printer for setting up and operating the printer.

See also

4.5.2.1 Connect a USB printer

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Printer** > **Printer** type.
 - ⇒ The **Printer type** window opens.
- 3 Navigate to USB.
- 4 Press the **OK** key.
- 5 Connect the USB-A plug of USB-C cable with the USB-A socket of the printer.
- 6 Connect the USB-A plug with the USB-A socket of the density meter.
- 7 Switch on the printer.
- ⇒ The connection is established.

See also

- © Configure the automatic printing of results Page 30
- Print results Page 45

4.5.2.2 Connect a Bluetooth printer


- The Bluetooth printer is set up and running.
- 1 Insert the Bluetooth dongle in the USB-A socket of the density meter.
- 2 Press the **Menu** key.
- 3 Navigate to **Settings** > **Printer** > **Printer** type.
 - ⇒ The **Printer type** window opens.
- 4 Navigate to Bluetooth.
- 5 Press the **OK** key.
- 6 Press the **Menu** key.
- 7 Navigate to **Printer selection**.
 - ⇒ The **Printer selection** window with a list of available Bluetooth printers opens.
- 8 Navigate to the Bluetooth printer you want to connect.
- 9 Press the **OK** key.

See also

- © Configure the automatic printing of results Page 30
- Print results Page 45

4.5.2.3 Print a test page

- The printer is connected and running.
- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Printer** > **Test printer**.
 - ⇒ If there is no connection yet, the notification **Connecting to printer** is displayed.
 - ⇒ When the connection is established, a test page is printed.

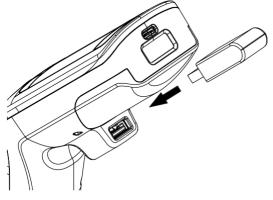

□ Connect a printer Page 14

4.6 Configure the density meter

4.6.1 Change the date and time format

The following date formats are available:

- **dd/mm/yyyy**: day/month/year, e.g. 30/11/2018
- mm/dd/yyyy: month/day/year, e.g. 11/30/2018
- yyyy/mm/dd: year/month/day, e.g. 2018/11/30
- **dd.mm.yyyy**: day.month.year, e.g. 30.11.2018

The following two time formats are available.

- 24 h: 24-hour clock, e.g. 6:30 and 18:30
- am/pm: 12-hour clock, e.g. 6:30 am and 6:30 pm

Procedure

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Date** / **Time**.
 - ⇒ The **Date / Time** window opens.
- 3 Navigate to **Date** or **Time**.
- 4 To change the date or time, move the navigation joystick up to raise or down to lower the number.
- 5 To switch between day, month and year or hours and minutes, move the navigation joystick to the left or right.
- 6 Press the **OK** key.
- 7 Navigate to **Date format** or **Time format**.
- 8 Navigate to the format you want to use.
- 9 Press the **OK** key.

4.6.2 Change the temperature unit

Two temperature units are available.

- ° F
- °C

When you change the temperature unit, temperatures are displayed in the selected unit. The temperature unit of results that were determined before you changed the unit remain unchanged.

Procedure

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Global units** > **Temperature unit**.
 - ⇒ The **Temperature unit** window opens.
- 3 Navigate to the desired **Temperature unit**.
- 4 Press the **OK** key.
- ⇒ The temperatures are displayed in the selected unit.

4.6.3 Change the density unit

Three density units are available.

- g/cm³
- kg/m³
- lb/gal (US)

When you change the density unit, density values are displayed in the selected unit. There are two exceptions.

- The densities of results that were determined before you changed the unit remain unchanged.
- If you select the unit [lb/gal], the unit [g/cm³] is still used for adjustments and tests.

Procedure

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Global units** > **Density unit**.
 - ⇒ The **Density unit** window opens.
- 3 Navigate to the desired **Density unit**.
- 4 Press the **OK** key.
- ⇒ The densities are displayed in the selected unit

4.6.4 Change energy saver settings

The settings of the parameters **Brightness**, **Energy saver** and **Auto shutdown** influence the power consumption and thus the battery life.

Parameter	Description	Values
Brightness	Defines the brightness of the screen.	10100 %
Energy saver	Defines if the screen is dimmed when no action has been performed for a given time.	Off 30 60 90 120 seconds
Auto shutdown	Defines if the density meter is shut down when no action has been performed for a given time.	Off 2 5 10 minutes

Procedure

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Screen**.
 - ⇒ The **Screen** window opens.
- 3 Navigate to the desired parameter and change the settings.

4.6.5 Protect actions with a password

With the parameter **Password** you can prevent users from performing certain actions without a password. The following table shows which actions are password-protected.

Action	Password protected
Start methods.	No
Start tests.	No
Start adjustments.	Yes
View the configuration of methods, tests and adjustments.	No
Change the configuration of methods, tests and adjustments.	Yes
Create and delete methods.	Yes
View, print and export results.	No
Delete all results.	Yes
View the settings of the density meter.	No
Change the settings of the density meter.	Yes
Update the firmware.	Yes
Restore factory adjustment.	Yes
Restore factory settings.	Yes

The password has to be entered once before a user performs a password-protected action and does not have to be reentered until the density meter is restarted.

If the user forgets the password, the universal password 8606 unlocks all actions and settings.

4.6.5.1 Enable the password protection

- 4.6.5.1.1 Press the **Menu** key.
- 4.6.5.1.2 Navigate to **Settings** > **Password** > **Password** protection.
- ⇒ The **Password protection** window opens.
 - 4.6.5.1.3 Navigate to **Yes**.
 - 4.6.5.1.4 Press the **OK** key.
- ⇒ The **Password** window opens.
 - 4.6.5.1.5 Enter a password with the navigation joystick.
 - 4.6.5.1.6 Press the **OK** key.
 - 4.6.5.1.7 Reenter the password.
 - 4.6.5.1.8 Press the **OK** key.

4.6.5.2 Disable the password protection

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Password** > **Password** protection.
 - ⇒ The **Password protection** window opens.
- 3 Navigate to No.
- 4 Press the **OK** key.
 - ⇒ The **Password** window opens.
- 5 Enter the password with the navigation joystick.
- 6 Press the **OK** key.
- ⇒ Users can perform all actions.

[⇒] The password has to be entered before the user can perform a protected action.

4.6.5.3 Change the password

- 1 Disable the password protection.
- 2 Enable the password protection and enter the new password.

4.6.6 Activate and deactivate the auto rotation of the screen

The **Auto rotate** parameter defines whether the screen rotates by 180° when the density meter is placed on a bench.

- 1 Press the Menu key.
- 2 Navigate to **Settings** > **Screen** > **Autorotate**.
 - ⇒ The **Auto rotate** window opens.
- 3 Navigate to **Yes** to switch on or **No** to switch off the **Auto rotate** mode.
- 4 Press the **OK** key.
- ⇒ The screen rotates when the density meter is placed on a bench.

4.6.7 Activate and deactivate the audio signal

The parameter **Audio signal** defines whether an audio signal is played when a key or the navigation joystick is pressed and when measurements are finished.

- 1 Press the Menu key.
- 2 Navigate to **Settings** > **Audio signal**.
 - ⇒ The **Audio signal** window opens.
- 3 Navigate to **Yes** to switch on or **No** to switch off the **Audio signal**.
- 4 Press the **OK** key.

4.6.8 Change the keyboard layout

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Language** / **Keyboard** > **Keyboard layout**.
 - ⇒ The **Keyboard layout** window opens.
- 3 Navigate to the desired keyboard layout.
- 4 Press the **OK** key.

4.6.9 Change the language

The system language defines the language of the user interface and printouts.

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Language** / **Keyboard** > **Language**.
 - ⇒ The **Language** window opens.
- 3 Navigate to the desired language.
- 4 Press the **OK** key.
- ⇒ The user interface is changed to the selected language.

4.6.10 Activate and deactivate a cleaning reminder

Because the measuring cell always contains residue from the last sample, there is a risk that the measuring cell can be damaged by the sample. To prevent such damages, Storage Battery Systems, LLC recommends that you clean the measuring cell at the end of each sample series.

To remind users to clean the measuring cell, you can activate a reminder. This reminder is displayed before manual shutdown of the instrument, and users have to confirm or cancel the reminder before shutting down the density meter.

Action of the system	Cleaning reminder	Auto shutdown
When users shut down the density meter, a reminder is displayed.	Yes	No
If the density meter automatically shuts down, no reminder is displayed.	Yes	Yes
No reminder is displayed when the density meter shuts down.	No	Yes/No

Procedure

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Measurement** > **Cleaning reminder**.
 - ⇒ The **Cleaning reminder** window opens.
- 3 Navigate to **Yes** to activate or **No** to deactivate the **Cleaning reminder**.
- 4 Press the **OK** key.

See also

4.7 Configure density determinations

Three different types of density determinations are available.

- Methods: determine the density of asample.
- **Test**: determine the density of a standard to check that the measurement cell is clean and measuring accurately.
- Adjustment: determine the density of a standard and adjust the density meter based on the results.

4.7.1 Create, change or delete a method

4.7.1.1 Create a method

The new method is listed in the **Methods** window with the name you enter in the parameter **Method ID**. If you do not change the parameter **Method ID**, it is set by default to $(A\{X\}\{X\})$, e.g. A03. Less than 30 methods are saved.

The home screen is open.

- 1 Move the navigation joystick to the left.
 - ⇒ The **Methods** window opens.
- 2 Press the **New** key.
 - ⇒ The **Method settings** window opens.
- 3 Navigate to **Method ID** and enter a name with up to 25 characters.
- 4 Press the **OK** kev.
 - ⇒ The method is listed in the **Methods** window.
- 5 Change the parameters as needed.

See also

- Configure the user guidance Page 22
- © Configure the measurement reliability Page 23
- □ Configure the result conversion Page 23
- © Configure the automatic documentation of results Page 29
- Configure result limits Page 31

4.7.1.2 Change a method

- The home screen is open.
- 1 Move the navigation joystick to the left.
 - ⇒ The **Methods** window opens.
- 2 Navigate to the method you want to edit.
 - ⇒ The **Method settings** windowopens.
- 3 Change the parameters as needed.

See also

- Configure the user guidance Page 22
- □ Configure the measurement reliability Page 23
- ☐ Configure the result conversion Page 23
- © Configure the automatic documentation of results Page 29
- □ Configure result limits Page 31

4.7.1.3 Delete a method

- More than one method is created.
- The method you want to delete is not active, marked by a square.
- The home screen is open.
- 1 Move the navigation joystick to the left.
 - ⇒ The **Methods** window opens.
- 2 Navigate to the method you want to delete.
 - ⇒ The **Method settings** window opens.
- 3 Press the **Delete** key.
 - ⇒ The message **Do you want to delete the method?** is displayed.
- 4 Navigate to **Yes**.
- 5 Press the **OK** key.
- ⇒ The method is no longer listed in the **Methods** window.

4.7.2 Change a test

- 1 Press the **Menu** key.
- 2 Navigate to Test.
 - ⇒ The **Test** window opens.
- 3 Change the parameters as needed.

See also

- Configure the user guidance Page 22
- © Configure the automatic documentation of results Page 29
- Configure a standard Page 31
- Configure the tolerance for a test Page 31

4.7.3 Change an adjustment

- 1 Press the Menu key.
- 2 Navigate to Adjustment.
 - ⇒ The **Adjustment** window opens.
- 3 Change the parameters as needed.

- Configure the user guidance Page 22
- © Configure the automatic documentation of results Page 29
- □ Configure a standard Page 31

4.7.4 Configure the user guidance

The parameters that are available to configure the user guidance are described in the following chapters.

4.7.4.1 Define the level of user guidance

The **Workflow** parameter defines the level of user guidance during the density determination. Two options are available.

- **Manual**: users decide how and when to fill the measuring cell, start the measurement and drain or clean the measuring cell.
- **Guided**: the density meter prompts the user to fill, drain or clean the measuring cell.

4.7.4.2 Define the pump speed

The parameter **Fill speed** defines the speed of the pump for filling the measuring cell. The sample viscosity places limits on the fill speed.

Speed level	% of maximum pump speed	Fill time for water	Viscosity
High	80 %	Approx. 4 s	Up to 40 mPa*s
Medium	40 %	Approx. 8 s	Up to 75 mPa*s
Low	10 %	Approx. 30 s	Up to 100 mPa*s

4.7.4.3 Define the fill cycle (only guided workflow)

The parameter **Fill cycle** defines, how many times the measuring cell is filled and emptied before the density is measured. The sample that is in the measuring cell after the last filling is used for the measurement.

Recommendation:

- Density determination with the sample pump: set **Fill cycle** to 3.
- Density determination with a syringe: set **Fill cycle** to 2.

4.7.4.4 Define the cleaning type (only guided workflow)

Two types of cleaning methods are available, **Drain** and **Rinse**.

Drain

The user is prompted to drain the measuring cell after the measurement.

This setting is useful if the samples that are measured dissolve in each other.

Rinse

The user is prompted to fill and drain the measuring cell with a cleaning solution after the measurement. The parameter **Rinse cycle** defines how many times the user is prompted to fill and drain the measuring cell.

This setting is only useful if the samples that are measured do not dissolve in each other.

See also

Typical phases of density determinations Page 35

4.7.4.5 Activate and deactivate the confirmation of results

After the measurement reliability is achieved, the results are frozen. The parameter **Confirmation of results** defines whether users have to confirm the results before they are replaced by the current density value. Regardless of the setting, all results are stored.

The setting is not method specific but valid for all density determinations.

Action of the system	Confirmation of results	Workflow
The screen is frozen and the sample pump is locked until users confirm the result.	Yes	Guided
The screen is frozen until users confirm the result but the sample pump is not locked.	Yes	Manual
Users are prompted to place the filling tube into the waste beaker. As soon as users press OK , the result is replaced by the current density value.	No	Guided
As soon as the user starts draining the cell, the result is replaced by the current density value.	No	Manual

Procedure

- 1 Press the **Menu** key.
- 2 Navigate to **Settings** > **Measurement** > **Confirmation of results**.
 - ⇒ The Confirmation of results window opens.
- 3 Navigate to Yes to activate or No to deactivate the Confirmation of results.
- 4 Press the **OK** key.

See also

□ Define the level of user guidance Page 22

4.7.5 Configure the measurement reliability

Measurement reliability is only available for methods.

The parameter **Measurement reliability** defines how the stability of a measured value is evaluated. Once a measured value is determined to be stable, it is saved as a result.

- **Medium**: The result is saved as soon as the measured temperature value stays within 0.72 °F (0.4 °C) for 10 s. Results are delivered faster, but with less accuracy compared to the **High** mode.
- **High:** The result is saved as soon as the measured temperature value stays within 0.2 °C 0.36 °F for 10 s. Results are very accurate, but may take a longer time compared to the **Medium** mode in cases where the sample temperature differs from the ambient temperature.
- Manual (only for unguided density determinations): users decide when the result is stable and save it.

See also

□ Define the level of user guidance Page 22

4.7.6 Configure the result conversion

The density meter converts the measured oscillation to the unit you define. The conversions are grouped in the following categories.

- **Density**: Density and specific gravity
- Alcohol: Alcohol concentration
- API: American Petroleum Institute (API density, API specific gravity, API degree)
- Baumé: Baumé scale
- **H2SO4**: Sulfuric acid concentration
- **Sugar**: Sucrose concentration

• User-defined: Conversion as defined by the user

Select the category and the conversion type

- 1 Press the **Menu** key.
- 2 Navigate to Methods > Method settings > Calculation > Category
- 3 Navigate to the desired category.
- 4 Press the **OK** key.
 - ⇒ The Calculation window opens.
- 5 Navigate to the conversion type you want to use.
- 6 Press the **OK** key.
- ⇒ The parameters that you need to configure for the selected conversion type are displayed.

You can find more information about the conversion types and the parameters in the following chapters.

4.7.6.1 Density and specific gravity

Available conversions:

- **d**: density at the measurement temperature
- d comp.: temperature compensated density
- SG: temperature compensated specific gravity
- SG (†/†): specific gravity at the measurement temperature

Density at the measurement temperature

Unit: $[g/cm^3]$, $[kg/m^3]$ or [lb/gal(US)] as defined in **Settings** > **Global units**.

The calculation is based on a reference for the density of water.

Temperature compensated density

Unit: [g/cm³], [kg/m³] or [lb/gal (US)] as defined in **Settings** > **Global units**.

The measured density is converted to the value it would have at a compensation temperature. The following formula is used to compensate the temperature influence.

$$I_{HTRU}$$
" I_{RJFX} * $(1+\phi$ * $(9_{RJFX}-9_{HTRU}))$

- d_{comp}: temperature compensated density
- d_{meas}: density a the measurement temperature
- α: temperature coefficient as defined in Alpha*1000 > Alpha entry, see [Define the temperature-compensation coefficient α } Page 28]
- T_{meas}: measurement temperature, temperature of the measuring cell during the measurement
- T_{comp}: compensation temperature as defined in **Compensation temp**.

Temperature compensated specific gravity

8,"
$$\frac{I_{HTRU}(8FRUQJ)}{I_{HTRU}(-_24)}$$

- SG: specific gravity
- d_{comp}(Sample): density of the sample compensated to the temperature defined in **Compensation temp**.
 - 1. The temperature influence is compensated by the temperature coefficient α as defined in Alpha*1000
 - > **Alpha entry**. See [Define the temperature-compensation coefficient **a**} Page 28]
- d_{comp}(H₂O): density of water compensated to the temperature defined in **Compensation temp. 2**

Specific gravity at the measurement temperature

$$8,(Y/Y)"\frac{\mathbb{I}(8FRUQJ)}{\mathbb{I}(-_{2}4)}$$

- SG(t/t): specific gravity
- d(Sample): density of the sample at the measurement temperature.
- d(H₂O): density of water compensated to the measurement temperature.

- □ Define the temperature-compensation coefficient

 □ Page 28
- ☐ Configure the result conversion Page 23
- Density of pure water (0...40 °C)} Page 64

4.7.6.2 Alcohol concentration

Available calculations:

- Alcohol [%w/w]: mass percent [%w/w]
- Alcohol 60°F [%v/v]: volume percent [%v/v], compensated to 60 °F
- Alcohol 20°C [%v/v]: volume percent [%v/v], compensated to 20 °C
- Proof US 60°F [Proof]: Proof degree with US unit [Proof], compensated to 60 °F
- Proof IP 60°F [Proof]: Proof degree with IP unit [Proof], compensated to 60 °F

See also

© Configure the result conversion Page 23

4.7.6.3 American Petroleum Institute (API)

The conversion of the measured value to the selected unit is based on the tables published by the American Petroleum institute (API).

The following tables are available.

- Crude oil (A)
- Refined products (B)
- Lubricants (D)

The **Compensation temp.** parameter defines the compensation temperature.

The **Output format** defines to which of the following units the result is converted:

- **d**: API density
- SG: API specific gravity
- °API: API degree

See also

☐ Configure the result conversion Page 23

4.7.6.4 Baumé scale

Unit: [°Bé]

Available conversions:

- H. Bé 15°C [°Bé]: for densities > 1 g/cm³, compensated to 15 °C
- L. Bé 15°C [°Bé]: for densities < 1 g/cm³, compensated to 15 °C
- H. Bé 60°F [°Bé]: for densities > 1 g/cm³, compensated to 60 °F
- L. Bé 60°F [°Bé]: for densities < 1 g/cm³, compensated to 60°F

The temperature influence is compensated by the temperature coefficient α as defined in Alpha*1000 > Alpha entry.

- Define the temperature-compensation coefficient α} Page 28
- ☐ Configure the result conversion Page 23

4.7.6.5 Sulfuric acid concentration

Available conversions:

- **H2SO4** [%w/w]: mass percent [%w/w]
- H2SO4 20°C [%v/v]: volume percent [%v/v], compensated to 20 °C

See also

☐ Configure the result conversion Page 23

4.7.6.6 Sugar concentration

Available conversions:

- Brix [%w/w]: mass percent [w/w %], compensated to 20 °C
- Plato [°P]: degree Plato [°P], compensated to 20 °C

See also

☐ Configure the result conversion Page 23

4.7.6.7 User defined concentration

You can define a function to convert a density or specific gravity to a concentration. The following steps are involved:

- 1. Define the conversion of the measured value to a density or specific gravity.
- 2. Define the function to convert the density or specific gravity to a concentration.
- 3. Define the unit and the number of decimal places of the concentration.

See also

- Define the density or specific gravity Page 26
- □ Define the function Page 27
- Define the format of the result} Page 28
- ☐ Configure the result conversion Page 23

Define the density or specific gravity

The conversions are either based on temperature compensated densities (**d comp**.) or specific gravities (**SG**).

Define a temperature-compensated density

The following formula is used to calculate the temperature-compensated density.

$$\mathbf{I}_{HTRU}$$
" $\mathbf{I}_{R,JFX}$ * $(1+\cancel{c}^*(9_{R,JFX}-9_{HTRU}))$

- d_{comp}: temperature compensated density
- d_{meas}: density a the measurement temperature
- α: temperature coefficient as defined in Alpha*1000 > Alpha entry, see [Define the temperature-compensation coefficient α } Page 28]
- T_{meas}: measurement temperature, temperature of the measuring cell during the measurement
- T_{comp}: compensation temperature as defined in **Compensation temp**.

Steps to define a temperature-compensated density:

- The conversion category is set to User-defined.
- 1 Navigate to X and select one of the following options: d comp., d comp. 1 or (1/d comp.) 1.

- 2 Navigate to **Compensation temp**. and define the compensation temperature.
- 3 Navigate to Alpha*1000 > Alpha entry and define α . See [Define the temperature-compensation coefficient α } Page 28]

Define a temperature-compensated specific gravity

The following formula is used to calculate the temperature-compensated specific gravity.

$$8,"\frac{I_{HTRU}(8FRUQJ)}{I_{HTRU}(-_{2}4)}$$

- SG: specific gravity
- d_{comp}(Sample): density of the sample compensated to the temperature defined in Compensation temp.
 - 1. The temperature influence is compensated by the temperature coefficient α as defined in Alpha*1000
 - > **Alpha entry**. See [Define the temperature-compensation coefficient **a**} Page 28]
- d_{comp}(H₂O): density of water compensated to the temperature defined in **Compensation temp. 2** Steps to define the temperature-compensated specific gravity:
- The conversion category is set to User-defined.
- 1 Navigate to X and select one of the following options: **SG**, **SG-1** or **(1/SG)-1**.
- 2 Navigate to **Compensation temp. 1** and define the compensation temperature for the sample.
- 3 Navigate to **Compensation temp. 2** and define the compensation temperature for water.
- 4 Navigate to **Alphα*1000** > **Alphα entry** and define **α**. See [Define the temperature-compensation coefficient **α** } Page 28]

See also

□ Define the function Page 27

Define the function

You can either use a linear function (Linear (Ax+B)) or a second order polynomial function (2nd order pol. (ax^2+bx+c). The functions are based on a graph with the density or specific gravity on the x-axis and the concentration on the y-axis.

The following formulae are used.

- Linear function: Ax + B
- Second order polynomial function: Ax² + Bx + C

Procedure

- The coefficients A and B are known for a linear function.
- The coefficients A, B and C are known for a second order polynomial function.
- 1 Navigate to Fit type and select Linear (Ax+B) or 2nd order pol. (ax^2+bx+c).
- 2 Press the **OK** kev.
- 3 Enter the values for the coefficients.

Calculate the coefficients A, B and C

- 1 If you want to use a second order polynomial function, prepare at least 4 solutions with different concentrations.
- 2 If you want to use a linear function, prepare at least 2 solutions with different concentrations.
- 3 Determine the density or specific gravity you want to use for each concentration.
- 4 Plot the concentration (y-axis) against the density or specific gravity (x-axis).
- 5 Fit a line or second order polynomial to the curve.

See also

Define the density or specific gravity Page 26

Define the format of the result

Using the parameters **Unit** and **Decimal places**, you can define the unit and the number of decimal places for the display of the current value and the result.

4.7.6.8 Define the temperature-compensation coefficient α

The temperature-compensation coefficient α is used to convert a measured value to a reference temperature. You have three options to define α .

- Manual: users enter the value for **α** that they calculated or read from a table.
- Calculated: the density meter calculates **α** based on a linear equation and densities and temperatures that users enter.
- 2nd order pol. (ax²+bx+c): the density meter calculates a based on a second order polynomial using coefficients that users enter.

See also

- Density and specific gravity
 Page 24
- Baumé scale Page 25
- □ Define the density or specific gravity Page 26

Enter a known value for α

- The result of α *1000 isknown.
- 1 Navigate to Alpha*1000 > Alpha entry and select Manual.
- 2 Press the **OK** key.
- 3 Navigate to Alpha*1000.
- 4 Enter the value for α *1000.
- 5 Press the **OK** key.

Calculate a

- 1 Measure the density (d_1) at a temperature (T_1) above the normal measuring temperature.
- 2 Measure the density (d_2) at a temperature (T_2) below the normal measuring temperature.
- 3 Use the measured densities and the temperatures in [°C] to calculate α according to the following formula.

$$\emptyset''\{\frac{1}{1} - 1\} / \{9 - 9\}$$

4 Calculate the result of α *1000.

Example

Density at 26 °C (T_1) = 0.7844 g/cm³ Density at 15 °C (T_2) = 0.7937 g/cm³

$$\alpha = (\frac{0.7937}{0.7844} - 1) / (26 - 15)$$

$$\alpha = ((1.011856 - 1)/11) = 0.011856/11 = 0.001078$$

$$\alpha * 1000 = 1.078$$

See also

☐ Temperature-compensation coefficients α Page 64

The density meter calculates a fixed value for α

- $\blacksquare \quad \text{The density} (d_1) \text{ at a temperature} (T_1) \text{ above the normal measuring temperature is known}.$
- The density (d₂) at a temperature (T₂) below the normal measuring temperature is known.
- 1 Navigate to Alpha*1000 > Alpha entry and select Calculated.
- 2 Navigate to **Density 1** and enter the value for d₁.
- 3 Navigate to **Temperature 1** and enter the value for T_1 .

- 4 Navigate to **Density 2** and enter the value for d₂.
- 5 Navigate to **Temperature 2** and enter the value for T_2 .
- ⇒ The density meter calculates the value for Alpha*1000 and displays it.

Define the second order polynomial used to calculate α

The density meter can use the following second order polynomial to calculate α .

$$\not c$$
"{ $F*I_{RJFX}^2+G*I_{RJFX}+H$)

Procedure

- The three coefficients a, b and c are known.
- 1 Navigate to Alpha*1000 > Alpha entry and select 2nd order pol. (ax^2+bx+c).
- 2 Press the **OK** key.
- 3 Enter the values for the coefficients a, b and c.

Calculate the coefficients a, b and c

- 1 Prepare at least 4 solutions with different concentrations.
- 2 Define two temperatures, one above und one below the normal measurement temperature.
- 3 Measure the density of each solution at both temperatures.
- 4 Calculate the temperature-compensation coefficient α for each solution.
- 5 Plot the values for α (y-axis) against the densities (x-axis) measured at one of the temperatures.
- 6 Fit a second order polynomial to the curve.

See also

List of errors and problems Page 55

4.7.7 Configure the automatic documentation of results



NOTICE

Loss of data!

A maximum of 1100 results are saved in the density meter. When the result list contains 1100 results and a new result is saved, the oldest result is overwritten.

Print or export the results before the maximum number of results is reached.

See also

- □ Change a method Page 21

4.7.7.1 Configure the sample or standard identification

You can define what kind of identification is assigned to a sample or to a standard.

Automatic numbering is only available for methods.

Action of the system	Sample ID entry Standard ID entry	Sample ID Standard ID
No identification is assigned to the sample or the standard.	None	Not available

Action of the system	Sample ID entry Standard ID entry	Sample ID Standard ID
The identification you define in the Sample ID parameter is assigned to all samples measured with the same method.	Fixed	025 characters
The identification you define in the Standard ID parameter is assigned to all standards measured with the same test.		
Users enter the identification before the density measurement starts.	Variable	Not available
Guided density determination: users are prompted to enter the identification when the method starts. The density determination continues when the user has entered a valid identification.		
Unguided density determination: Users have to enter the identification before the measurement starts but are not prompted to do so. If they do not enter an identification, the identification of the previous sample is used.		
An automatically generated identification is assigned to the sample. The identification automatically increases by 1, when a new measurement is started with the same method.	Automatic numbering	Not available

4.7.7.2 Configure the automatic printing of results

The Printout parameter defines whether a result is automatically printed when it is saved and which information is printed.

None: No report is printed.

Short: A short report is printed.

Long: A long report is printed

Information	Methods	Test	Adjustment
Date / Time	Short/Long	Short/Long	Short/Long
Method ID	Short/Long	-	_
Sample ID	Short/Long	-	_
Application name with standard	-	Short/Long	Short/Long
Standard ID	_	Short/Long	Short/Long
Status	Short/Long	Short/Long	_
Calculation	Short/Long	-	_
Density	Short/Long	Short/Long	Short/Long
Dev. d	_	Short/Long	Short/Long
Temp.	Short/Long	Short/Long	Short/Long
d nominal	_	Short/Long	Short/Long
SNR	Long	Long	Long

Information	Methods	Test	Adjustment
Additional settings like the compensation temperature and the temperature compensation coefficient α	Long	Long	Long

□ Connect a printer Page 14

4.7.8 Configure result limits

Result limits are only available for methods.

The **Result limits** parameter defines whether the density meter evaluates if a result lies within a defined range. The parameters **Lower limit** and **Upper limit** define the range.

- Result within the limits: the background of the measuring ribbon turns green.
- Result outside the limits: the background of the measuring ribbon turns red and the text Out of limits is displayed in the sampling ribbon

Procedure

- 1 Press the Menu key.
- 2 Navigate to Methods > Method settings > Calculation > Result limits.
- 3 To deactivate **Result limits**, navigate to **No**.
- 4 To activate **Result limits**, navigate to **Yes**.
- 5 Press the **OK** key.
 - ⇒ Lower limit and Upper limit are displayed.
- 6 Set the **Lower limit** and **Upper limit**.

4.7.9 Configure a standard

Use water as standard

- The Test window or the Adjustment window are open.
- 1 Navigate to **Standard type** and select **Water**.
- 2 Press the **OK** kev.
- ⇒ The density meter uses predefined values for the **Test** or the **Adjustment**.

Use another substance as standard

- The **Test** window or the **Adjustment** window are open.
- 1 Navigate to **Standard type** and select **Other standard**.
- 2 Press the **OK** key.
- 3 Navigate to **Compensation temp.** and enter the compensation temperature.
- 4 Navigate to **d nominal** and enter the nominal density of the standard at the temperature you entered as compensation temperature.
- 5 Navigate to Alpha*1000 and define the temperature-compensation coefficient α .

□ Define the temperature-compensation coefficient

α Page 28

4.7.10 Configure the tolerance for a test

The **Tolerance d** parameter is used to evaluate the measured density and decide if the test passed or failed. Recommendations for defining the value for **Tolerance d**:


- Deionized water: 2*(instrument resolution + operator repeatability)
- Certified organic standards with a high temperature-compensation coefficient: uncertainty of the standard + limit of error of instrument + temperature error + 2*operator repeatability

The operator repeatability is the standard deviation of tendensity determinations performed by the operator.

5 Operation

5.1 Start up the density meter

- Press key 1(1).
 - ⇒ A short beep is played.
 - ⇒ A welcome message is displayed.
- ⇒ The home screen opens. The density meter is ready to use.

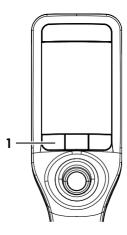

5.2 Shut down the density meter

- Press and hold any of the keys or the navigation joystick for more than 3 s.
 - ⇒ A beep is played and the screen goes dark.
- ⇒ The control circuits for the keys and the navigation joystick are energized. The rest of the density meter is no longer energized.

Shut down using the Menu

- The home screen is open.
- 1 Press the **Menu** key.
- 2 Navigate to **Shut down**.
 - ⇒ The dialog **Do you want to shut down the instrument?** opens.
- 3 Press the Yes key.
 - ⇒ A beep is played and the screen goes dark.
- ⇒ The control circuits for the keys and the navigation joystick are energized. The rest of the density meter is no longer energized.

See also

5.3 Navigate and enter information

5.3.1 Navigate through menus and confirm settings

- 1 Press the **Menu** key.
- 2 To navigate to a desired menu, move the navigation joystick up or down.
- 3 To navigate to a submenu of the selected menu, move the navigation joystick to the right.
- 4 To go back, move the navigation joystick to the left.



Confirm settings

In every menu, where the function of key 3 is marked with a green bar, you can press the navigation joystick to confirm the selection.


Shortcut to the method list

- The home screen is open.
- Move the navigation joystick to the left.
 - ⇒ The **Methods** window opens.

5.3.2 Enter text and numbers

- The keyboard window is open.
- 1 Navigate to the character, number, symbol or icon.
- 2 Press the navigation joystick to confirm the selection of the character, number, symbol or icon.
- 3 To confirm the entered information and leave the keyboard window, press the **OK** key.

Keyboard overview

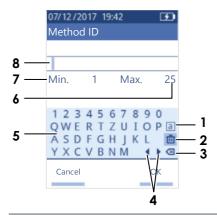

No.	Icon	Function
1	a	Cycles between the screens with small, capital or special characters.
	Α	
	#	
2	ů	Deletes all entered characters.
3	ʹ	Deletes the character to the left of the cursor.

No.	Icon	Function
4	4 >	Moves the cursor.
5	-	Displays available characters, numbers and symbols.
6	-	Maximum number of characters you can enter.
7	-	Minimum number of characters you need to enter.
8	_	Displays the entered characters.

See also

5.4 Typical phases of density determinations

Density determinations include the following two phases.

- Fill the measuring cell with sample and perform the measurement.
- Prepare the measuring cell for the next sample.

5.4.1 Fill the measuring cell and measure the density

Because the measuring cell always contains residue from the previous sample or the cleaning solution, it is important that you remove the residue using the new sample. This is only possible if the residue is soluble in the new sample.

To achieve good results, make sure that the measuring cell contains only the sample you want to measure and that there are no bubbles in the measuring cell.

You can use the sample pump or syringes to fill, drain and rinse the measuring cell. The sample pump is used for samples with a viscosity up to 100 mPa*s. Syringes are typically used if the viscosity of the samples is above 100 mPa*s.

See also

Example: Density determination using the sample pump} Page 35

Example: Density determination using a syringe Page 38

Example: Density determination of cold or hot samples Page 41

5.4.2 Prepare the measuring cell for the next sample

At the end of this phase, the residue in the measuring cell must be soluble in the next sample. The solubility of the sample defines if you can drain the measuring cell or if you need to rinse it.

If the next sample dissolves the sample you just measured, you can drain the cell.

Rinse

If the next sample does not dissolve the sample you just measured, you have to rinse the measuring cell with a cleaning solution. The cleaning solution must dissolve the sample that you just measured and the next sample. When you rinse the measuring cell, the cleaning solution removes the residue from the original sample.

See also

□ Clean the measuring cell Page 48

5.5 Example: Density determination using the sample pump

The following chapters show you how to configure and perform a density determination of deionized water at room temperature 73.4°F or (23 °C).

Summary of the configuration

- Guided density determination
- Filling and draining with the sample pump
- Evaluation if result lies within specified limits

You can find more information about the configuration of a method in the chapter [Configure density determinations] Page 20].

5.5.1 Configure the method

- The density unit is set to [g/cm³].
- Confirmation of results in Settings is activated.
- The home screen is open.
- 1 Move the navigation joystick to the left.
 - \Rightarrow The **Methods** window opens.
- 2 Press the **New** key.
 - ⇒ The **Method settings** window opens.
- 3 Navigate to **Method ID** and enter a name with up to 25 characters.
- 4 Press the **OK** key.
 - ⇒ The method is listed in the **Methods** window.
- 5 Change the parameter settings to the values shown in the following table.

Parameter	Setting	Explanation
Workflow	Guided	The density meter prompts users to fill and drain the measuring cell.
Sample ID entry	Variable	The density meter prompts users to enter the sample ID before the density is measured.
Fill cycle	3	The density meter prompts users to fill and drain the measuring cell twice and then fill the measuring cell for the measurement.
Fill speed	High	The pump fills the measuring cell with 80 % of the maximum pump speed.
Measurement reliability	Medium	The result is saved as soon as the measured temperature value stays within $0.4^{\circ}\text{C}(0.72^{\circ}\text{F})$ for 10s .
Calculation > Category	Density	A density is calculated.
Calculation >	d	The density is not compensated to a certain temperature.
Calculation > Result limits	Yes	The density meter evaluates if the result is within a defined range.
Lower limit	0.9972 g/cm ³	Defines the lower limit of the range.
Upper limit	0.9977 g/cm ³	Defines the upper limit of the range.
Clean	Drain	Users are prompted to drain the measuring cell.
Printout	None	The result is not printed.

See also


5.5.2 Perform the density determination


Start the method

- The density meter is set up to work with the sample pump.
- The piston is in the lowermost position.
- The home screen is open.
- 1 Move the navigation joystick to the left.
- 2 Navigate to the method you want to use and press the **Start** key.
 - ⇒ The home screen opens.
- 3 Press the **Start** key.
 - \Rightarrow The **Sample ID** window opens.
- 4 Enter the identification.
- 5 Press the **OK** key.

Rinse the measuring cell


- 1 Immerse the filling tube into the sample (1).
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 3 Hold the filling tube over the waste beaker (2).
- 4 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 5 Clean the end of the filling tube with a clean tissue.
- 6 Repeat the steps once.

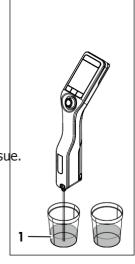

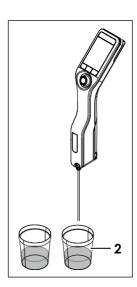


Fill the measuring cell and measure the density

 - 1 Immerse the filling tube into the sample (1).
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 3 Make sure there are no bubbles in the measuring cell.
 - ⇒ The measurement starts.
 - ⇒ When the background of the measuring ribbon changes color, the measurement is finished.
 - ⇒ The measured value is saved in the results.
- 4 Press the **OK** key.



Drain the measuring cell

 - 1 Hold the filling tube over the waste beaker (1).
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 3 Clean the end of the filling tube with a clean tissue.



5.6 Example: Density determination using a syringe

The following chapters show you how to configure and perform a density determination of a viscous sample such as 40 % w/w sugar solution at room temperature 73.4 °F or (23 °C).

Summary of the configuration

- Guided density determination
- Filling and draining with asyringe

You can find more information about the configuration of a method in the chapter [Configure density determinations] Page 20].

5.6.1 Configure the method

- Confirmation of results in Settings is activated.
- The home screen is open.
- 1 Move the navigation joystick to the left.
 - ⇒ The **Methods** window opens.
- 2 Press the **New** key.
 - ⇒ The **Method settings** window opens.
- 3 Navigate to **Method ID** and enter a name with up to 25 characters.
- 4 Press the **OK** key.
 - ⇒ The method is listed in the **Methods** window.
- 5 Change the parameter settings to the values shown in the following table.

Parameter	Setting	Explanation
Workflow	Guided	The density meter prompts users to fill and drain the measuring cell.
		The density meter prompts users to enter the sample ID before the density is measured.
Fill cycle	2	The density meter prompts users to rinse the measuring cell and then fill the measuring cell for the measurement.
Fill speed	High	Has no effect because the syringe mode is activated.
Measurement reliability	Medium	The result is saved as soon as the measured temperature value stays within $0.4^{\circ}\text{C}(0.72^{\circ}\text{F})$ for $10\text{s}.$

Parameter	Setting	Explanation
Calculation > Category	Sugar	A sugar concentration is calculated.
Calculation > Calculation	Brix [%w/w]	A Brix value is calculated.
Calculation > Result limits	None	The density meter does not evaluate if the result is within a defined range.
Clean	Drain	Users are prompted to drain the measuring cell.
Printout	None	The result is not printed.

See also


5.6.2 Perform the density determination

Start the method

- The density meter is set up to work with a syringe.
- The measuring cell is drained.
- The home screen is open.
- 1 Move the navigation joystick to the left.
- 2 Navigate to the method you want to use and press the **Start** key.
 - \Rightarrow The home screen opens.
- 3 Press the **Start** key.
 - \Rightarrow The **Sample ID** window opens.
- 4 Enter the identification.
- 5 Press the **OK** key.

Rinse the measuring cell


- 1 Fill a new syringe with sample.
- 2 Insert the syringe into the connector for the syringe.

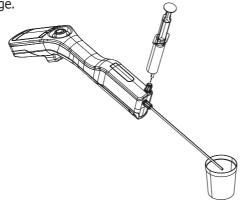


- 3 Hold the filling tube over the waste beaker (1).
- 4 Pressthesyringeplunger continuously into the syringe.
 - ⇒ The sample flows through the measuring cell and removes the residue from the previous sample.
- 5 Pull the plunger continuously out of the syringe.
 - $\begin{tabular}{l} \Rightarrow \begin{tabular}{l} The sample is pulled back into the syringe and the measuring cell fills with air. \end{tabular}$
- 6 Remove the syringe and empty it into a suitable waste beaker.

Fill the measuring cell and measure the density

- 1 Fill a new syringe with sample.
- 2 Insert the syringe into the connector for the syringe.

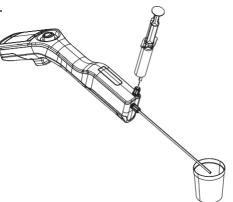


- 3 Hold the filling tube over the waste beaker (1).
- 4 Press the syringe plunger slowly (5...10 cm/s) and continuously into the syringe until only a small amount of sample is left in the syringe.
 - ⇒ The sample flows with a laminar flow into the measuring cell.
- 5 Leave the syringe in the connector.
- 6 Make sure there are no bubbles in the measuring cell.
- 7 Press the **OK** key.
 - \Rightarrow The measurement starts.
 - ⇒ When the background of the measuring ribbon changes color, the measurement is finished.
 - ⇒ The measured value is saved in the results.
- 8 Press the **OK** key.

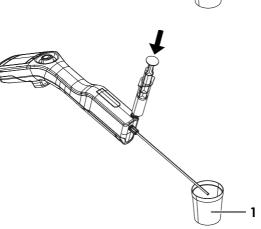

Drain the measuring cell

- 1 Pull the plunger continuously out of the syringe.
 - ⇒ The sample is pulled back into the syringe and the measuring cell fills with air.
- 2 Remove the syringe and empty it into a suitable waste beaker.

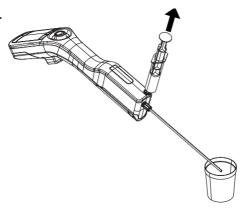

5.7 Example: Density determination of cold or hot samples

To achieve good results, the measuring cell and the sample must have the same temperature. If you fill the measuring cell with a sample that is more than 9 °F (5 °C) above or below the temperature displayed on the home screen, this condition is not met. Because the density meter has no active temperature control, you must wait until the temperature of the measuring cell and the temperature of the sample are the same, before you make the measurement.

The following chapters show you how to configure and perform a density determination of deionized water that is more than 9 °F (5 °C) above or below the temperature displayed on the home screen.

Summary of the configuration

- Unquided density determination
- Filling and draining with the sample pump

You can find more information about the configuration of a method in the chapter [Configure density determinations] Page 20].

5.7.1 Configure the method

- The density unit is set to [g/cm³].
- Confirmation of results in Settings is activated.
- The home screen is open.
- 1 Move the navigation joystick to the left.
 - \Rightarrow The **Methods** window opens.
- 2 Press the **New** key.
 - ⇒ The **Method settings** window opens.
- 3 Navigate to **Method ID** and enter a name with up to 25 characters.
- 4 Press the **OK** key.
 - ⇒ The method is listed in the **Methods** window.
- 5 Change the parameter settings to the values shown in the following table.

Parameter	Setting	Explanation
Workflow	Manual	Users define their individual measuring workflows.
Sample ID entry Variable		Users need to enter the identification before they start the measurement.
Fill speed	High	The pump fills the measuring cell with 80 % of the maximum pump speed.
Measurement reliabil	ity Medium	The result is saved as soon as the measured temperature value stays within $0.72^{\circ}\text{F}(0.4^{\circ}\text{C})$ for 10 s.

Parameter	Setting	Explanation
Calculation > Category	Density	A density is calculated.
Calculation > Calculation	d	The density is not compensated to a certain temperature.
Calculation > Result limits	None	The density meter does not evaluate if the result is within a defined range.
Clean	Drain	Users are prompted to drain the measuring cell.
Printout	None	The result is not printed.

See also


5.7.2 Perform the density determination


Start the method

- The density meter is set up to work with the sample pump.
- The piston is in the lowermost position.
- The home screen is open.
- 1 Move the navigation joystick to the left.
- 2 Navigate to the method you want to use and press the **Start** key.
 - \Rightarrow The home screen opens.
- 3 To enter a **Sample ID**, move the navigation joystick to the right.
 - \Rightarrow The **Sample ID** window opens.
- 4 Enter the identification.
- 5 Press the **OK** key.

Rinse the measuring cell

- 1 Immerse the filling tube into the sample (1).
- 2 Move the navigation joystick upwards and let go.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 3 Hold the filling tube over the waste beaker (2).
- 4 Move the navigation joystick downwards and let go.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 5 Clean the end of the filling tube with a clean tissue.
- 6 Repeat the steps once.

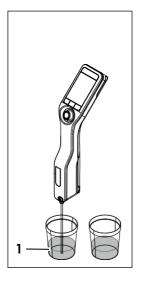

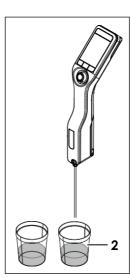

Fill the measuring cell and measure the density

- 1 Immerse the filling tube into the sample (1).
- 2 Move the navigation joystick upwards and let go.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 3 Make sure there are no bubbles in the measuring cell.
- 4 Press the **Start** key.
 - \Rightarrow The measurement starts.
 - ⇒ When the background of the measuring ribbon changes color, the measurement is finished.
 - ⇒ The measured value is saved in the results.
- 5 Press the **OK** key.
- 6 Wait for about 20 seconds and press the **Start** key again.
 - ⇒ The sample that is still in the measuring cell is measured again.
- 7 Tap **Results** and compare the last two results.
- 8 Tap Back.
- 9 If the results are not the same, continue to measure the same sample until the temperatures and the results of two measurements in a row are the same.

Drain the measuring cell

- 1 Hold the filling tube over the waste beaker (1).
- 2 Move the navigation joystick downwards and let go.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 3 Clean the end of the filling tube with a clean tissue.





5.8 View, export, print and delete results

5.8.1 View results

- The home screen is open.
- 1 Press the **Results** key.
 - ⇒ A list with all results is displayed.
- 2 To view an individual result, navigate to the result and move the navigation joystick to the right.

5.8.2 Delete all results

You can only delete all results but not individual results or a subgroup of results.

5.8.2.1 The home screen is open.

- 1 Press the **Results** key.
- 2 Press the **Delete** key.
 - ⇒ The message **Do you want to delete all results?** is displayed.
- 3 Press the **Yes** key.
- ⇒ An empty list is displayed.

5.8.3 Export and print results



NOTICE

Loss of data!

A maximum of 1100 results is saved in the density meter. When the result list contains 1100 results and a new result is saved, the oldest result is overwritten.

- Print or export the results before the maximum number of results is reached.

You can export or print results if you have the required accessories.

- To export results you need the SBS-2510 Bluetooth Dongle.
- To print results, you need a compatible USB printer or Bluetooth printer. (Sold separately)

See also

- □ Connect a printer Page 14

5.8.3.1 Print results

The Printout parameter defines whether a result is automatically printed when it is saved and which information is printed.

Information	Methods	Test	Adjustment
Date / Time	Short/Long	Short/Long	Short/Long
Method ID	Short/Long	_	-
Sample ID	Short/Long	_	-
Application name with standard	-	Short/Long	Short/Long
Standard ID	-	Short/Long	Short/Long
Status	Short/Long	Short/Long	-
Calculation	Short/Long	_	-
Density	Short/Long	Short/Long	Short/Long
Dev. d	_	Short/Long	Short/Long
Temp.	Short/Long	Short/Long	Short/Long
d nominal	_	Short/Long	Short/Long
SNR	Long	Long	Long

Information	Methods	Test	Adjustment
Additional settings likethe compensation temperature and the temperature-compensation coefficient α	Long	Long	Long

Print an individual result

A printer is connected.

An individual result is displayed.

- 1 Press the **Report** key.
- 2 Navigate to **Option** and select **Print**.
- 3 Press the **OK** key.
- 4 Navigate to **Printout** and set it to **Short** or **Long** as needed.
- 5 Press the **OK** key.
- \Rightarrow The result is printed.

Print all results or a subset of results

A printer is connected.

The result list is displayed.

- 1 Press the **Report** key.
- 2 Navigate to **Option** and select **Print**.
- 3 Press the **OK** key.
- 4 Navigate to **Printout** and set it to **Short** or **Long** as needed.
- 5 Press the **OK** key.
- 6 To print all results, deactivate the filter.
- 7 To print a subset of results, configure the filter.
- 8 Press the **Start** key.
- ⇒ The results are printed.

See also

- □ Configure the filter Page 46
- Connect a printer Page 14

5.8.3.2 Configure the filter

If you activate the filter, you can print or export a subset of the results. The following filters are available.

- Off: Filter is deactivated and all results are printed or exported.
- **Today**: Only the results from current day are printed or exported.
- **Range**: Only the results within the set date range are printed or exported.

Procedure

- 1 Press the **Menu** key.
- 2 Navigate to Results > Report > Filter.
- 3 Select the desired **Filter**type.
- 4 Press the **OK** key.
- 5 If you selected **Range**, define the values for **Start date** and **End date**.

See also

Print results Page 45

6 Maintenance

In this chapter you find descriptions of the maintenance tasks you should perform on your density meter. Any other maintenance tasks need to be performed by a service technician that has been qualified by Storage Battery Systems, LLC.

If you experience problems with your density meter, contact your authorized SBS sales or service representative.

Storage Battery Systems, LLC recommends that a preventive maintenance and calibration certification is done at least once a year through your authorized SBS sales or service representative.

6.1 Maintenance schedule

If the standard operating procedures of your company require other maintenance intervals, use the intervals listed in the standard operating procedures.

Frequency	Task	See
Daily	Clean the measuring cell at the end of the work day.	[Clean the measuring cell} Page 48]
	Perform a test with deionized water.	[Check the measurement accuracy] Page 49]

See also

6.2 Clean the density meter



NOTICE

Danger of damage to the density meter due to inappropriate cleaning methods!

Inappropriate cleaning agents can damage the housing or other parts of the density meter. If liquids enter the housing they can damage the density meter.

- 1 Make sure the cleaning agent is compatible with the material of the part you want to clean.
- 2 Make sure that no liquid enters the interior of the density meter.

If you have questions about the compatibility of cleaning agents, contact your authorized SBS sales or service representative.

https://www.sbsbattery.com

6.2.1 Clean the housing

Storage Battery Systems, LLC recommends the following cleaning agents:

- Water
- Water with a mild detergent

Procedure

- The density meter is shut down.
- Wipe the housing with a cloth moistened with the cleaning agent.

6.2.2 Clean the measuring cell

Because the measuring cell always contains residue from the last sample, there is a risk that the measuring cell can be damaged by the sample. To prevent such damages, SBS recommends that you clean the measuring cell with deionized water at the end of each sample series.

To clean the measuring cell, you need to rinse the measuring cell with a cleaning solution. The cleaning solution must have the following properties.

- Does not chemically interact with the material of the measuring cell.
- Dissolves the sample that was just measured.
- Evaporates without leaving incrustations.

SBS recommends the following cleaning agents:


Sample	Cleaning solution
Water Water based	Deionized water
Acids, concentrated	Water (flush the measuring cell with plenty of water to remove the heat from the reaction of water and acid)
Alkaline, concentrated	0.30.5 % deconex solution
Samples with fats or oily components	0.30.5 % deconex solution
Petrochemical samples Edible oils and fats	Toluene, xylene or petrol ether mixtures

See also

Activate and deactivate a cleaning reminder Page 19


6.2.2.1 Clean using the sample pump

- The density meter is set up to work with the sample pump.
- The cleaning solution is defined and available.
- The piston is in the lowermost position.
- 1 Immerse the filling tube in the cleaning solution (1).
- 2 Move the navigation joystick upwards and let go.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 3 Lift the filling tube out of the cleaning solution and hold it over the waste beaker (2).
- 4 Move the navigation joystick downwards and let go.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 5 Clean the end of the filling tube with a clean tissue.
- 6 Repeat the steps until all residue from the sample is removed.
- 7 Move the navigation joystick upwards and let go.
 - ⇒ The sample pump fills the measuring cell with air.
- 8 Move the navigation joystick downwards and let go.
 - \Rightarrow Most of the cleaning solution is removed from the measuring cell.
- 9 Clean the end of the filling tube with a clean tissue.

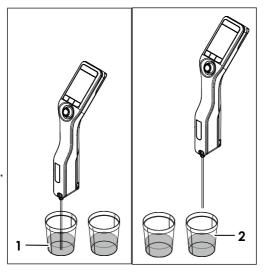


6.2.2.2 Clean using a syringe


- The density meter is set up to work with a syringe.
- The cleaning solution is defined and available.
- The measuring cell is drained.
- 1 Fill a syringe with the cleaning solution.
- 2 Insert the syringe into the connector for the syringe.

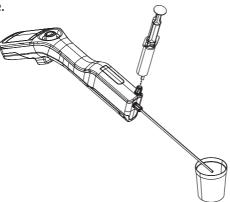

- 3 Hold the filling tube over the waste beaker (1).
- 4 Press the plunger continuously into the syringe until the syringe is empty.

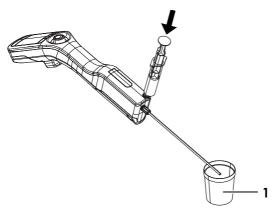

- 5 Pull the plunger continuously out of the syringe.
 - ⇒ The cleaning solution is pulled back into the syringe and the measuring cell fills with air.
- 6 Remove the syringe and empty it into a suitable waste beaker.
- 7 Repeat the steps until all residue from the sample is removed.

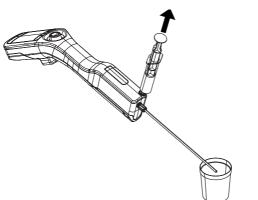

6.3 Check the measurement accuracy

To check the measurement accuracy of the density meter, you need to configure and perform a test. You can find more information about the configuration of a test in the chapter [Configure density determinations] Page 20].

6.3.1 Example: Test with water

The following chapters show you how to configure and perform a guided test with deionized water at room temperature 73.4 $^{\circ}$ F or (23 $^{\circ}$ C).

6.3.1.1 Configure the test

- The density unit is set to [g/cm³].
- Confirmation of results in Settings is activated.
- 1 Press the **Menu** key.
- 2 Navigate to Test.
 - ⇒ The **Test** window opens.
- 3 Change the parameter settings to the values shown in the following table.

Parameter	Setting	Explanation
Workflow	Guided	The density meter prompts users to fill and drain the measuring cell.
Standard type	Water	The density meter uses predefined values for the water measurement.
Standard ID entry	Variable	The density meter prompts users to enter the identification before the density is measured.
Fill cycle	3	The density meter prompts users to fill and drain the measuring cell twice and then fill the measuring cell for the measurement.
Fill speed	High	The pump fills the measuring cell with 80 % of the maximum pump speed.
Tolerance d	0.0002 g/cm ³	The result is marked as passed if it falls within the following range.
		d nominal ± Tolerance d
Clean	Drain	Users are prompted to drain the measuring cell.
Printout	None	The result is not printed.

See also

6.3.1.2 Perform the test

Start the test

- The density meter is set up to work with the sample pump.
- The measuring cell has been cleaned.
- The piston is in the lowermost position.
- 1 Press the **Menu** key.
- 2 Navigate to Test.
 - ⇒ The **Test** window opens.
- 3 Press the **Start** key.
 - ⇒ The home screen opens.
- 4 Press the **Start** key.
 - ⇒ The **Standard ID** window opens.
- 5 Enter the identification.
- 6 Press the **OK** key.

Rinse the measuring cell

- 1 Immerse the filling tube in the water.
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.

- 3 Hold the filling tube over the waste beaker.
- 4 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 5 Clean the end of the filling tube with a clean tissue.
- 6 Repeat the steps once.

Fill the measuring cell and measure the density

- 1 Immerse the filling tube in the water.
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 3 Make sure there are no bubbles in the measuring cell.
 - ⇒ The measurement starts.
 - ⇒ When the background of the measuring ribbon changes color, the measurement is finished.
 - ⇒ The measured value is saved in the results.
- 4 Press the **OK** kev.

Drain the measuring cell

- 1 Hold the filling tube over the waste beaker.
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 3 Clean the end of the filling tube with a clean tissue.

6.3.2 Measures if a test fails

- 1 Check if the correct standard has been used, and if needed repeat the test with the correct standard.
- 2 If the test continues to fail, clean the measuring cell with a cleaning solution that dissolves your samples and dissolves in the standard.
- 3 Repeat the test.
- 4 If the test continues to fail, repeat the test twice and compare all three results.
- 5 If the results are not the same, clean the measuring cell and perform tests until the test passes or the results of three consecutive tests are the same.
- 6 If the test continues to fail and the results of three consecutive tests are the same, restore the factory adjustment data and repeat the test.
- 7 If the test continues to fail, perform an adjustment.

See also


- □ Clean the measuring cell Page 48
- Restore the factory adjustment data Page 56


6.4 Replace the battery

The density meter works with a rechargeable 2400 mAh Li-Ion battery that you can order from Storage Battery Systems, LLC Part # 2510-BATTERY

- 1 Press on the lower part (1) of the battery cover and push the battery cover up.
- 2 Pull the upper part of the battery out of the battery compartment and lift the battery out.

Properly dispose of used / old Lithium battery packs in accordance with local codes.

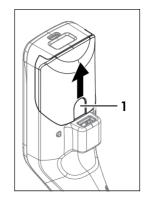


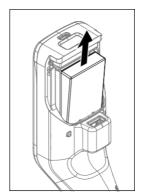


- 3 Insertthelower part of the battery at an angle into the battery compartment.
- 4 Push the upper part of the battery into the battery compartment.
- 5 Slide the battery cover from above onto the density meter.

See also

- □ Technical data Page 60

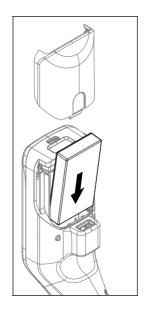

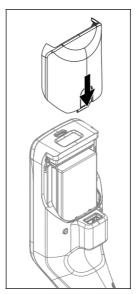


6.5 Replace the filling tube

- 1 Unscrew the filling tube by hand and remove it.
- 2 Install the new filling tube.

See also

- ☐ Install the filling tube Page 12

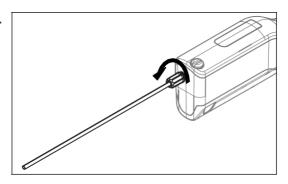


6.6 Replace the sample pump

Remove the sample pump

- The measuring cell is drained.
- 1 Move the navigation joystick upwards and let go.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 2 Shut down the density meter.


- 3 Press on the grip recesses (4) of the cover and lift the lower part of the cover out of the housing.
- 4 Pull the top of the cover out of the housing.
- 5 Lift the piston (1) out of the guide system.
- 6 Pull the cylinder (2) up and out of its guide system (3).

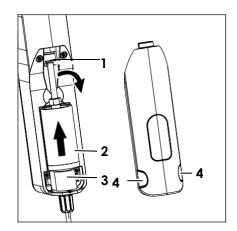

Install the sample pump

- 1 Insert the cylinder (3) of the sample pump in its guide system (4).
- 2 Insert the piston (1) in its guide system (2).
- 3 To check if the sample pump works, move the navigation joystick downwards and let go.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 4 Reinstall the cover of the sample pump.



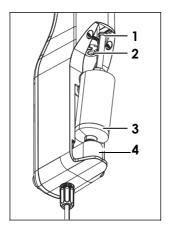

6.7 Update the firmware

It is possible to update the firmware of your density meter. To update the firmware of the density meter, contact an authorized SBS sales or service representative to determine if there is a newer firmware version available.

https://www.sbsbattery.com

6.8 Prepare the density meter for storage

The density meter can be stored at temperatures of -4...+122 °F (-20...+50 °C). But the lifespan of the battery is reduced when it is stored at high temperatures.

- 1 Clean the measuring cell.
- 2 Shut down the density meter.
- 3 Clean the housing.
- 4 Store the density meter in a dry and clean place.

See also

- □ Clean the density meter Page 47
- □ Technical data Page 60

6.9 Ship the density meter

If you have questions about transporting your density meter, contact your authorized SBS sales or service representative.

https://www.sbsbattery.com

1 Shut down the density meter.

- 2 Clean the density meter.
- 3 Ship the density meter using the original packaging.

6.10 Dispose of the density meter

In conformance with the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) this device may not be disposed of in domestic waste. This also applies to countries outside the EU, per their specific requirements.



Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment. If you have any questions, please contact the responsible authority or the distributor from which you purchased this device. Should this device be passed on to other parties (for private or professional use), the content of this regulation must also be related.

Thank you for your contribution to environmental protection.

7 Troubleshooting

7.1 List of errors and problems

Problem	Possible cause	Measure
The sample pump does not	The locking screw is not installed. – Install the locking s	
aspirate any liquid.	The locking screw is not tight.	- Tighten the locking screw.
Test of measurement accuracy fails.	The measuring cell is not clean.	See [Measures if a test fails] Page 51].
	Mismatch between measured and configured standard	See [Measures if a test fails] Page 51].
	The tolerance range is too small.	See [Configure the tolerance for a test] Page 31].
	The density meter is not adjusted correctly.	See [Measures if a test fails} Page 51].
The message Drain cell over waste beaker. is displayed when	The piston is not in the lowermost position.	1 Hold the filling tube over the waste beaker.
you try to start a method.		 Move the navigation joystick downwards and let go.
		⇒ The sample pump starts and stops when the piston is in the lowermost position.
		3 Clean the end of the filling tube with a clean tissue.
There are bubbles in the measuring cell.	Fill speed is too high.	1 If you use the sample pump, lower the setting for fill speed. See [Define the pump speed} Page 22].
		2 If you use a syringe, press the syringe plunger more slowly into the syringe.
	The liquid contains dissolved gases.	 Degas the sample before you fill it into the measuring cell.
	Connector for syringe or the filling tube is not tight.	1 Tighten the connector of the filling tube.
		2 Tighten the locking screw or the connector for the syringe.

Problem	Possible cause	Measure
The message Pump position unknown. is displayed.	The saved pump position was lost because the battery was removed	The density meter is set up to work with a syringe.
	too long.	 You can ignore the message and continue to work with the density meter.
		The density meter is set up to work with the sample pump.
		1 Hold the filling tube over the waste beaker.
		2 Move the navigation joystick downwards and let go.
		⇒ The sample pump starts and stops when the piston is in the lowermost position.
		3 Clean the end of the filling tube with a clean tissue.
"" is displayed, instead of a value for Alpha*1000 .	The calculated value is out of range.	 Check and correct the density values and the values for the compensation temperatures you entered.
" is displayed, instead of a measured value or a result.	The measured value or the result is out of range.	s 1 Check that the unit defined in the method matches the sample you want to measure.
		2 If you use a user-defined conversion, check that all the settings are correct.

7.2 Restore the factory adjustment data

If you restore the factory adjustment data, the current adjustment data is overwritten with the adjustment data that were determined when the density meter was adjusted during production.

- 1 Press the **Menu** key.
- 2 Navigate to Maintenance & Service > Reset to factory adjust.
 - ⇒ The message **Do you want to reset to factory adjustment?** opens.
- 3 To overwrite the current adjustment data with the factory adjustment data, press **Yes**.
- ⇒ The factory adjustment data are restored.

7.3 Adjust the measurement accuracy



NOTICE

Danger of incorrect results due to incorrect adjustment!

Adjustments that are not performed property can lead to inaccurate results.

- 1 Make sure the results of the test are repeatable.
- 2 Only perform an adjustment if you are qualified to do it.

The following chapters show you, how to configure and perform an exemplary adjustment with water. You can find more information about the configuration of an adjustment in the chapter [Configure density determinations Page 20].

See also

7.3.1 Example: Adjustment with water

The following chapters show you how to configure and perform a guided adjustment with deionized water at room temperature 73.4 °F or (23 °C).

7.3.1.1 Configure the adjustment

- Confirmation of results in Settings is activated.
- 1 Press the **Menu** key.
- 2 Navigate to Adjustment.
 - ⇒ The **Adjustment** window opens.
- 3 Change the parameter settings to the values shown in the following table.

Davanastan	C = 111:	Franks all an
Parameter	Setting	Explanation
Workflow	Guided	The density meter prompts users to fill and drain the measuring cell.
Standard type	Water	The density meter uses predefined values for the water measurement.
Standard ID entry	Variable	The density meter prompts users to enter the identification before the density is measured.
Fill cycle	3	The density meter prompts users to fill and drain the measuring cell twice and then fill the measuring cell for the measurement.
Fillspeed	High	The pump fills the measuring cell with 80 % of the maximum pump speed.
Clean	Drain	Users are prompted to drain the measuring cell.
Printout	None	The result is not printed.


7.3.1.2 Perform the adjustment

Start the adjustment

- The density meter is set up to work with the sample pump.
- The measuring cell has been cleaned.
- The piston is in the lowermost position.
- 1 Press the **Menu** key.
- 2 Navigate to Adjustment.
 - ⇒ The **Adjustment** window opens.
- 3 Press the **Start** key.
 - ⇒ The home screen opens.
- 4 Press the **Start** key.
 - ⇒ The **Standard ID** window opens.
- 5 Enter the identification.
- 6 Press the **OK** key.

Rinse the measuring cell

- 1 Immerse the filling tube in the water (1).
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 3 Hold the filling tube over the waste beaker (2).
- 4 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 5 Clean the end of the filling tube with a clean tissue.
- 6 Repeat the steps once.

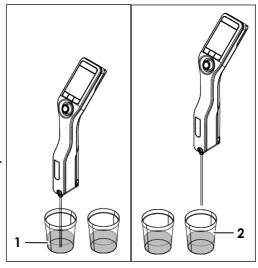

Fill the measuring cell and measure the density

- 1 Immerse the filling tube in the water (1).
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the uppermost position.
- 3 Make sure there are no bubbles in the measuring cell.
 - ⇒ The measurement starts.
 - ⇒ When the background of the measuring ribbon changes color, the measurement is finished.
 - ⇒ The measured value is saved in the results.
- 4 Accept or reject the adjustment.



Drain the measuring cell

- 1 Hold the filling tube over the waste beaker (1).
- 2 Press the **OK** key.
 - ⇒ The sample pump starts and stops when the piston is in the lowermost position.
- 3 Clean the end of the filling tube with a clean tissue.

See also

Activate and deactivate the confirmation of results Page 23



7.4 Restore the factory settings



NOTICE

Loss of data

With a factory reset all user-specific settings are set to the default values and all saved data (e.g. sample IDs, results, Method IDs and adjustment data) are deleted.

- Document the data you need before you restore the factory settings.
- 1 Press the **Menu** key.
- 2 Navigate to Maintenance & Service > Reset to factory settings.
 - ⇒ The dialog **Do you want to reset all values to factory settings?** opens.
- 3 To reset the density meter to factory settings, press the **Yes** key.
- ⇒ The density meter restarts.

7.5 View the firmware version and other system information

- The home screen is open.
- 1 Press the **Menu** key.
- 2 Navigate to **Information**.
- ⇒ The firmware version and other system information are displayed.

Instrument type Shows the density meter is a SBS-2510

SNR instrument Shows the serial number of the instrument.

Firmware version Shows the firmware version of the density meter.

Opens a window with information on the End User License Agreement, third party Licenses

licenses and open source attribution files.

8 Technical data

8.1 Density meter

Characteristic		Value
Power rating instrument	Inputvalues	5 V DC, 1.0 A
	Connector type	USB C
Power rating ACadapte	r Input values	100240 V AC, 0.3 A
	Input frequency	50 - 60 Hz
	Output values	5 V DC, 1.0 A
Battery	Туре	Rechargeable lithium-ion battery
	Capacity	2400 mAh
	Temperature range for char	ging 32104°F (040°C)
Dimensions	Width	56 mm
	Length	288 mm
	Depth	80 mm
	Weight	355 g
Screen	Technology	Color screen
	Size	2.4"
	Resolution	240 x 320 pixels
USB type A	Datarate	USB 2.0, host full speed
	Outputvoltage	5 V DC ±5%
	Max. output current	250 mA
USB type C	Datarate	USB 2.0, device full speed
	Inputvoltage	5 V DC ±10 %
	Max. input current	400 mA, max. 1 A with AC adapter
Materials	Housing	PBT (polybutylene terephthalate)
	Measuring cell	Borosilicate glass
	Parts in contact when working with sample pump	PTFE (polytetrafluorethylene) PVDF (polyvinylidene difluoride) EPDM (ethylene propylene diene monomer (M- class) rubber) FFKM (perfluoro-elastomers) Borosilicate glass
	Filling tube	PTFE (polytetrafluorethylene)
	Connector for filling tube or syringe	PP (polypropylene)

Ambient conditions

Characteristic	Value
Ambient temperature	14122°F (-10+50°C)
Relative humidity	Max.80%(non-condensing) at 88°F (31°C), linear fall to 50% at 104°F (40°C)

Characteristic	Value	
Altitude	Up to 6562 Ft (2000m) above sea level	
Pressure	Atmospheric pressure	
Use	In interior spaces	
Overvoltage category	II	
Pollution degree	2	
IP code	IP5X	

Storage temperatures

Characteristic		Value
Instrument		-4122°F (-20+50°C)
Battery	Storage for up to 1 month	-4140°F (-20+60°C)
	Storage for up to 3 months	-4113°F (-20+45°C)
	Storage for up to 1 year	-486°F (-20+30°C)

Directives, standards and REACH regulation

Directives and standards complied with are listed on the declaration of conformity.

SVHC candidate substances according to REACH (Article 33)

Material	CAS No.	
1,3-Propanesultone	1120-71-4	
PZT (Lead Zirconate Titanate)	12626-81-2	

8.2 Measurement

Characteristic		Value
Density	Measuring range	0.0003.000 g/cm ³
	Accuracy 1)	$\pm 0.001 \text{g/cm}^3$
	Repeatability	$\pm 0.0005 \text{g/cm}^3$
	Resolution	0.0001 g/cm ³
Temperature	Temperature range for sam	nple 32122°F (050°C)
	Resolution	0.1°F (0.1°C)
	Accuracy	±0.3°F (±0.2°C)
Viscosity	Using sample pump	0100 mPa*s
	Using syringe	01000 mPa*s
Volumes	Sample pump	5 mL
	Min. sample volume	2 mL
Temperature compe	nsation	Automatic or by using a user-defined temperature correction coefficient
Application	Max. number of methods	30
	Stored results	1100

¹⁾ For viscosity range of 0...200 mPa*s

Measurement scales

Characteristic		Value	
Ethanol(d)%w/w Range		0.0. 100.0% w/w	
	Accuracy	±1.0 % w/w	
Ethanol(d)%v/v	Range	0.0 % v/v	
	Accuracy	±1.0% v/v	

Characteristic		Value
Proof (IP)	Range	0.0. 175.0 Proof
	Accuracy	±1.75 Proof
Proof (US)	Range	0.0. 200.0 Proof
	Accuracy	±2.0 Proof
Light Baumé	Range	10100 °Bé
	Accuracy	±0.4 °Bé
Heavy Baumé	Range	072 °Bé
	Accuracy	±0.1 °Bé
H ₂ SO ₄ % w/w	Temperature range	32122°F (1050°C)
	Concentration range	0.0. 100.0% w/w
	Accuracy	±1.0% w/w
H ₂ SO ₄ % v/v	Temperature range	32122°F (1050°C)
	Concentration range	0.0% v/v
	Accuracy	±1.0% v/v
Brix (d) % w/w	Range	0.0. 85.0% w/w
	Accuracy	±0.3% w/w
Plato	Range	0.0. 85.0°P
	Accuracy	±0.3°P

9 Accessories

The following accessories and parts are available for the SBS-2510.

All parts are specified with their order number and quantity in cases where more than one part is included. When ordering, some parts are only available in a minimum order quantity. In such cases, the corresponding minimum order quantity is quoted. Certain parts are only available in specific countries.

If you have any questions, contact your authorized SBS sales or service representative.

9.1 Sampling



Filling Tube 190 mm

- Tube
- Connector syringe/filling tube
- Washer



 
Filling tube 600 mm

- Tube
- Connector syringe/filling tube
- Washer

2510-TUBE-190

2510-TUBE-600

9.2 Printer



Bluetooth Dongle

 
2510-DONGLE



PRINTER, USB P-25


2510-PRINTER

9.3 Miscellaneous accessories



Carrying Case

 2510-CASE




Battery Li-Ion 2400mAh

2510-BATTERY



USB-C Cable

 2510-USBCABLE



Power Supply with Adapter

2510-POWERSUPPLY

10 Appendix

10.1 Density of pure water 32...104°F (0...40°C)

32.0 (0) 0.99984 33.8 (1) 0.99990 69.8 (21) 0.99799 35.6 (2) 0.99994 71.6 (22) 0.99777 37.4 (3) 0.99996 73.4 (23) 0.99754 39.2 (4) 0.99997 75.2 (24) 0.99730 41.0 (5) 0.99996 77.0 (25) 0.99705 42.8 (6) 0.99994 78.8 (26) 0.99679 44.6 (7) 0.99990 80.6 (27) 0.99652 46.4 (8) 0.99985 82.4 (28) 0.99624 48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925	Temperatu	re °F[°C]	Density [g/cm3]	Temperatu	re F[°C]	Density [g/cm3]
35.6 (2) 0.99994 71.6 (22) 0.99777 37.4 (3) 0.99996 73.4 (23) 0.99754 39.2 (4) 0.99997 75.2 (24) 0.99730 41.0 (5) 0.99996 77.0 (25) 0.99705 42.8 (6) 0.99994 78.8 (26) 0.99679 44.6 (7) 0.99990 80.6 (27) 0.99652 46.4 (8) 0.99985 82.4 (28) 0.99624 48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438	32.0	(0)	0.99984			
37.4 (3) 0.99996 73.4 (23) 0.99754 39.2 (4) 0.99997 75.2 (24) 0.99730 41.0 (5) 0.99996 77.0 (25) 0.99705 42.8 (6) 0.99994 78.8 (26) 0.99679 44.6 (7) 0.99990 80.6 (27) 0.99652 46.4 (8) 0.99985 82.4 (28) 0.99624 48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	33.8	(1)	0.99990	69.8	(21)	0.99799
39.2 (4) 0.99997 75.2 (24) 0.99730 41.0 (5) 0.99996 77.0 (25) 0.99705 42.8 (6) 0.99994 78.8 (26) 0.99679 44.6 (7) 0.99990 80.6 (27) 0.99652 46.4 (8) 0.99985 82.4 (28) 0.99624 48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	35.6	(2)	0.99994	71.6	(22)	0.99777
41.0 (5) 0.99996 77.0 (25) 0.99705 42.8 (6) 0.99994 78.8 (26) 0.99679 44.6 (7) 0.99990 80.6 (27) 0.99652 46.4 (8) 0.99985 82.4 (28) 0.99624 48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	37.4	(3)	0.99996	73.4	(23)	0.99754
42.8 (6) 0.99994 78.8 (26) 0.99679 44.6 (7) 0.99990 80.6 (27) 0.99652 46.4 (8) 0.99985 82.4 (28) 0.99624 48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	39.2	(4)	0.99997	75.2	(24)	0.99730
44.6 (7) 0.99990 80.6 (27) 0.99652 46.4 (8) 0.99985 82.4 (28) 0.99624 48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	41.0	(5)	0.99996	77.0	(25)	0.99705
46.4 (8) 0.99985 82.4 (28) 0.99624 48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	42.8	(6)	0.99994	78.8	(26)	0.99679
48.2 (9) 0.99978 84.2 (29) 0.99595 50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	44.6	(7)	0.99990	80.6	(27)	0.99652
50.0 (10) 0.99970 86.0 (30) 0.99565 51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	46.4	(8)	0.99985	82.4	(28)	0.99624
51.8 (11) 0.99961 87.8 (31) 0.99534 53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	48.2	(9)	0.99978	84.2	(29)	0.99595
53.6 (12) 0.99950 89.6 (32) 0.99503 55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	50.0	(10)	0.99970	86.0	(30)	0.99565
55.4 (13) 0.99938 91.4 (33) 0.99471 57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	51.8	(11)	0.99961	87.8	(31)	0.99534
57.2 (14) 0.99925 93.2 (34) 0.99438 59.0 (15) 0.99910 95.0 (35) 0.99404	53.6	(12)	0.99950	89.6	(32)	0.99503
59.0 (15) 0.99910 95.0 (35) 0.99404	55.4	(13)	0.99938	91.4	(33)	0.99471
	57.2	(14)	0.99925	93.2	(34)	0.99438
	59.0	(15)	0.99910	95.0	(35)	0.99404
60.8 (16) 0.99894 96.8 (36) 0.99369	60.8	(16)	0.99894	96.8	(36)	0.99369
62.6 (17) 0.99878 98.6 (37) 0.99333	62.6	(17)	0.99878	98.6	(37)	0.99333
64.4 (18) 0.99860 100.4 (38) 0.99297	64.4	(18)	0.99860	100.4	(38)	0.99297
66.2 (19) 0.99841 102.2 (39) 0.99260	66.2	(19)	0.99841	102.2	(39)	0.99260
68.0 (20) 0.99821 104.0 (40) 0.99222	68.0	(20)	0.99821	104.0	(40)	0.99222

[Chemical Handbook Fundamental Version, Rev. 3, Table 5.2 (1984)]

10.2 Temperature-compensation coefficients α

Substance	Temperature range [°C]	α • 10 ³ /°C
Water	(1530)	0.23
Ethanol	(030)	1.09
m-xylene	(030)	0.99
p-xylene	(1530)	1.02
Glycerine	(1530)	0.49
Chloroform	(030)	1.26
Carbon tetrachloride	(030)	1.22
Toluene	(030)	1.07
Benzene	(630)	1.21
Methanol	(630)	1.18
Acetone	(030)	1.42
Bromobenzene	(030)	0.91
Cyclohexane	(030)	1.20
Isopropanol	(030)	1.06
n-nonane	(030)	1.08

Index

Auto rotation 19 Storage temperature 61 Auto rotation 19 Technical data 60 Cleaning reminder 19 Baumé 23, 25 Password protection 18 Activate 19 Sample pump mode 12 Deactivate 19 Syringe mode 13 Deactivate 19 Syringe mode 13 Bluetooth printer Connect 14, 15 Adjustment Change 21 Configure 22, 29, 30, 31, 32 Configure example 57 Density unit 17 Perform 50 Perform example 57 Alcohol concentration 25 Proof (IP) 25 Change 25 Proof (IP) 25 Change 26 Adjustment 27 Proof (IS) 25 Change 27 Aljustment 27 Alpha 28 Configure 28 Date format 16 Configure 28 Date format 16 Configure 28 Date format 16 Abuse 29 April 23 April 24 April 23 April 24 April 23 April 25 April 27 April 27 April 27 April 28 April 29 April 29 April 29 April 20 April	A		Activate	19
Assemble 11 B Change prongs 11 Battery Connect 11 Install 51 Accessories 62 Install 51 Activate Replace 51 Audio signal 19 Storage temperature 61 Auto rotation 19 Storage temperature 61 Cleaning reminder 19 Baumé 23, 25 Password protection 18 Activate 19 Password protection 18 Activate 19 Sample pump mode 12 Deactivate 19 Syringe mode 12 Deactivate 19 Syringe mode 13 Brightness 19 Adjustment Configure 21 Connect 14, 15 Adjustment Brightness Change 17 Configure example 57 Activate 19 Alcohol concentration 25 C Celsius Morigure example 25 A	AC adapter		Deactivate	
Change prongs Connect 111 Connect 112 Confirmation of results 23 Confirmation of results 23 Confirmation of results 23 Configure mode 12 Configure mode 12 Configure connect 14, 15 Configure 22, 29, 30, 31, 32 Configure example 57 Configure example 57 Connect 21 Configure example 57 Configure 50 Configure 61 C	·	11	В	
Connect				
Accessories Activate Audio signal Audio signal Autor otation Autor otation Cleaning reminder Confirmation of results Sample pump mode Syringe mode Syringe mode Adjustment Change Configure Configur			,	
Activate			Install	
Audio signal 19 Replace 51 Auto rotation 19 Storage temperature 61 Cleaning reminder 19 Technical data 60 Cleaning reminder 23 Beep Password protection 18 Activate 19 Syringe mode 12 Deactivate 19 Syringe mode 13 Deactivate 19 Syringe mode 15 Deactivate 19 Syringe mode 16 Deactivate 19 Syringe mode 17 Deactivate 19 Configure 22, 29, 30, 31, 32 Deactivate 19 Configure example 57 Change 17 Configure example 57 Density unit 17 Perform 50 Perform example 57 Alcohol concentration 25 Cestisus 17 Proof (IS) 25 Change 17 Configure 28 Date format 16 Configure 28 Date format 16 Configure 28 Date format 16 Configure 29 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API degree 25 Password 19 API degree 25 Password 19 API degree 25 Password 19 API degree 17 Specific gravity 25 Screen brightness 17 Assemble 17 Charge 18 ACAdapter 11 Filling tube 12 Time 16 Audio signal Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation 15 For apicular meter 11 Auto rotation 15 Prosity meter 11 Autor otation 16 Clean		02		
Auto rotation 19 Storage temperature 61 Cleaning reminder 19 Baumé 23, 25 Confirmation of results 23 Baumé 23, 25 Password protection 18 Sample pump mode 12 Pactivate 19 Syringe mode 13 Bluetooth printer Connect 14, 15 Adjustment Change 21 Configure 22, 29, 30, 31, 32 Configure example 57 Density unit 17 Perform example 57 Alcohol concentration 25 Proof (IP) 25 Configure 28 Proof (IP) 25 Configure 28 Alpha Date 16 Configure 29 Alcohol concentration 25 Proof (IP) 25 Configure 28 Alpha Date 16 Configure 29 Alcohol concentration 25 Proof (IP) 25 Configure 28 Alpha Date 16 Configure 29 Alpha Date 16 Configure 29 Alpha Date 16 Configure 29 Alpha Date 17 Adjustment 21 Alpha Date 16 Configure 29 Alpha Date 17 Adjustment 21 Alpha Date 16 Configure 29 Alpha Date 17 Adjustment 21 Alpha Date 16 Configure 29 Alpha Date 17 Adjustment 21 Alpha Date 16 Configure 29 Alpha Date 17 Adjustment 21 Alpha Date 16 Configure 29 Alpha Date 17 Adjustment 21 Alpha Date 16 Adjustment 21 Alpha Date 17		19	Replace	51
Cleaning reminder 19 Technical data 60 Confirmation of results 23 Baumé 23, 25 Password protection 18 Activate 19 Sample pump mode 12 Deactivate 19 Syringe mode 13 Bluetooth printer 19 Connect 14, 15 14, 15 Adjustment Connect 14, 15 Change 21 Change 17 Configure 22, 29, 30, 31, 32 Brix 26 Configure example 57 Brix 26 Density unit 17 Perform 50 Prostitute 17 Alcohol concentration 25 C Celsius 17 Alcohol concentration 25 C Celsius 17 Perform example 57 C Celsius 17 Alcohol concentration 25 C Celsius 17 Perform example 25 Adjustment 21 Language <t< td=""><td>-</td><td></td><td></td><td>61</td></t<>	-			61
Confirmation of results			Technical data	60
Password protection 18 Sample pump mode Activate 19 Syringe mode 12 Deactivate 19 Syringe mode 13 Bluetooth printer Connect 14, 15 Adjustment Brightness Change 17 Configure 22, 29, 30, 31, 32 Brisk Density unit 17 Perform 50 Perform example 57 Alcohol concentration 25 Mass percent 25 Proof (IP) 25 Proof (US) 25 Volume percent 25 Alpha Date Configure 28 Table 64 Table 64 Table 64 Table (April degree 23 API degree 25 Density 25 Proofsity 25 API degree 25 Density 25 API degree 25 Density 25 Prongs AC adap	_		Baumé	23, 25
Sample pump mode 12 Activate 19 Syringe mode 13 Bluetooth printer Connect 14, 15 Adjustment Brightness Change 21 Change 17 Configure 22, 29, 30, 31, 32 Brix 26 Density unit 17 Perform 50 Perform example 57 Density unit 17 Perform example 57 C C Alcohol concentration 25 C C C Mass percent 25 C C C Mass percent 25 C Change 17 Proof (IP) 25 C Change 17 Yolume percent 25 Adjustment 21 Alpha Date 16 Configure 28 Date format 16 Table 64 Density unit 17 American Petroleum Institute 23 Method 21 API degree 25 Pas			Веер	
Syringe mode 13 Deactivate 19			Activate	19
Adjustment Change 21 Change 17 Configure 22, 29, 30, 31, 32 Configure example 57 Density unit 17 Perform 50 Perform example 57 Alcohol concentration 25 Masspercent 25 Proof (IP) 25 Colfigure 28 Volume percent 25 Alpha 28 Configure 28 Alpha 29 Alpha 64 Configure 28 Alpha 64 Configure 38 Aleverage 16 Alpha 64 Configure 28 Alpha 64 Configure 38 Aleverage 16 Alpha 64 Configure 28 Alpha 64 Configure 38 Aleverage 19 American Petroleum Institute 23 And degree 25 Algha 64 Alpha 65 Alpha 66 Alpha 67 Alpha 67 Ambient conditions 60 Alpha 68 Alpha 69 API 23 API 69 API 23 API 69 API 23 API 69 API 25 API 69 API 21 API 69 API 60 API 70 API 71 API 69 API 71 API 69 API 71 API 69 API 71 AP			Deactivate	19
Adjustment Change 21 Change 17 Configure 22, 29, 30, 31, 32 Configure example 57 Density unit 17 Perform S0 50 Perform example 57 Alcohol concentration 25 Masspercent 25 Proof (IP) 25 Colsius 17 Proof (US) 25 Volume percent 25 Adjustment 21 Alpha 28 Configure 28 Configure example 37 Ambient conditions 60 Configure 38 American Petroleum Institute 23 API 49 API 49 API 49 API 49 API 49 API 59 Density 59 ACadapter 11 ACadapter 11 ACadapter 11 Filling tube 16 Audio signal 17 Autior otation 17 Dimming 17 Aring 6 Brix 29 Dimming 17 Dimming 17 Aring 6 Dimming 17 Dimming 17 Dimming 17 Aring 6 Dimming 17 Dimming 17 Dimming 17 Dimming 17 Aring 6 Dimming 17 Dimmi	Syringe mode	13	Bluetooth printer	
Adjustment Change Configure example Sor Density unit Perform Perform example Sor Alcohol concentration Sor Proof (IP) Sor Proof (US) Sor Volume percent Configure Alpha Configure Sor Adjustment Date Sor Celsius Sor Change Volume percent Sor Adjustment Date Sor Adjustment Sor Sor Adjustment Sor Sor Adjustment Sor			Connect	14, 15
Adjustment Change Configure example Sor Density unit Perform Perform example Sor Alcohol concentration Sor Proof (IP) Sor Proof (US) Sor Volume percent Configure Alpha Configure Sor Adjustment Date Sor Celsius Sor Change Volume percent Sor Adjustment Date Sor Adjustment Sor Sor Adjustment Sor Sor Adjustment Sor			Brightness	
Configure 22, 29, 30, 31, 32 Dimming 17	•		_	17
Configure example 57 Brix 26 Configure example 57 Brix 26 Density unit 17 Ferform 50 Ferform 50 <td><u> </u></td> <td></td> <td>_</td> <td>17</td>	<u> </u>		_	17
Density unit	-		-	
Perform Perform example 50 Perform example 57 Alcohol concentration 25 C Masspercent 25 Celsius 17 Proof (IP) 25 Celsius 17 Proof (US) 25 Change Volume percent 25 Adjustment 21 Alpha Date 16 Configure 28 Date format 16 Table 64 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API 23 Method 21 API degree 25 Password 19 Density 25 Screen brightness 17 Assemble Temperature unit 17 Actoadpter 11 Test 21 Filling tube 12 Time 16 Activate 19 Density meter 11 Activate			2	20
Perform example 57 Alcohol concentration 25 C Mass percent 25 Celsius 17 Proof (IP) 25 Celsius 17 Proof (US) 25 Change Volume percent 25 Adjustment 21 Alpha Date 16 Configure 28 Date format 16 Table 64 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API 23 Method 21 API degree 25 Password 19 Density 25 Prongs AC adapter 11 Assemble Temperature unit 17 Acadapter 11 Test 21 Filling tube 12 Time 16 Audio signal Time format 16 Activate 19 Density meter 11	•	17		
Alcohol concentration 25				
Masspercent 25 Celsius 17 Proof (IP) 25 Celsius 17 Proof (US) 25 Change Volume percent 25 Adjustment 21 Alpha Date 16 Configure 28 Date format 16 Table 64 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API 23 Method 21 API degree 25 Password 19 Density 25 Prongs AC adapter 11 Specific gravity 25 Screen brightness 17 Assemble Temperature unit 17 ACadapter 11 Test 21 Filling tube 12 Time 16 Activate 19 Charge Deactivate 19 Density meter 11 Activate 19<	Perform example	57		
Proof (IP) 25 Celsius 17 Proof (US) 25 Change Volume percent 25 Adjustment 21 Alpha Date 16 Configure 28 Date format 16 Table 64 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API 23 Method 21 API degree 25 Password 19 Density 5pecific gravity 25 Screen brightness 17 Assemble Temperature unit 17 AC adapter 11 Test 21 Filling tube 12 Time 16 Audio signal Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	Alcohol concentration	25	С	
Proof (US) Proof (US) Proof (US) Volume percent Alpha Date Date 16 Configure 28 Date format 16 Table Ambient conditions 60 Keyboard layout 19 American Petroleum Institute API API degree Density Specific gravity Assemble ACadapter Filling tube ACI	Masspercent	25		
Volume percent 25 Adjustment 21 Alpha Date 16 Configure 28 Date format 16 Table 64 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API 23 Method 21 API degree 25 Password 19 Density 25 Prongs AC adapter 11 Specific gravity 25 Screen brightness 17 Assemble Temperature unit 17 AC adapter 11 Test 21 Filling tube 12 Time 16 Audio signal 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	Proof(IP)	25		17
Alpha Date 16 Configure 28 Date format 16 Table 64 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API 23 Method 21 API degree 25 Password 19 Density 25 Prongs AC adapter 11 Specific gravity 25 Screen brightness 17 Assemble 17 ACadapter 11 Test 21 Filling tube 12 Time 16 Audio signal 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	Proof(US)	25	_	
Configure 28 Date format 16 Table 64 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API 23 Method 21 API degree 25 Password 19 Density 25 Prongs AC adapter 11 Specific gravity 25 Screen brightness 17 ASsemble Temperature unit 17 ACadapter 11 Test 21 Filling tube 12 Time 16 Audio signal 19 Charge Deactivate 19 Density neter 11 Activate 19 Density meter 11 Auto rotation Clean	Volume percent	25		
Table 64 Density unit 17 Ambient conditions 60 Keyboard layout 19 American Petroleum Institute 23 Language 19 API 23 Method 21 API degree 25 Password 19 Density 5pecific gravity 25 Screen brightness 17 ASsemble Temperature unit 17 ACadapter 11 Test 21 Filling tube 12 Time 16 Audio signal 19 Charge 19 Deactivate 19 Density meter 11 Auto rotation Clean	Alpha		Date	16
Ambient conditions American Petroleum Institute API API degree Density Specific gravity Assemble ACadapter Filling tube Audio signal Activate Deactivate Auto rotation American Petroleum Institute 23 Language 19 Aesyboard layout 19 Password 19 Password 19 Prongs AC adapter 11 Test 12 Time Time 16 Time format 16 Clean Clean	Configure	28	Date format	16
American Petroleum Institute API API API degree Density Specific gravity ASsemble ACadapter Filling tube Audio signal Activate Deactivate Auto rotation American Petroleum Institute 23 Language Password 19 Password 19 Prongs AC adapter 11 Test Temperature unit 17 Test 21 Time Time Time Time Time Tomat Clean Clean	Table	64	Density unit	17
API 23 Method 21 API degree 25 Password 19 Density 25 Prongs AC adapter 11 Specific gravity 25 Screen brightness 17 ASsemble Temperature unit 17 AC adapter 11 Test 21 Filling tube 12 Time 16 Audio signal Time format 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	Ambient conditions	60	Keyboard layout	19
API degree 25 Password 19 Density 25 Prongs AC adapter 11 Specific gravity 25 Screen brightness 17 Assemble Temperature unit 17 ACadapter 11 Test 21 Filling tube 12 Time 16 Audio signal Time format 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	American Petroleum Institute	23	Language	19
Density 25 Prongs AC adapter 11 Specific gravity 25 Screen brightness 17 Assemble Temperature unit 17 AC adapter 11 Test 21 Filling tube 12 Time 16 Audio signal 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	API	23	Method	21
Density 25 Prongs AC adapter 11 Specific gravity 25 Screen brightness 17 Assemble Temperature unit 17 AC adapter 11 Test 21 Filling tube 12 Time 16 Audio signal Time format 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	API degree	25	Password	19
Specific gravity Assemble ACadapter Filling tube Audio signal Activate Deactivate Auto rotation Specific gravity 25 Screen brightness 17 Temperature unit 17 Test 21 Time Time Time Time format 16 Charge Density meter 11 Clean		25	Prongs AC adapter	11
Assemble Temperature unit 17 ACadapter 11 Test 21 Filling tube 12 Time 16 Audio signal Time format 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	•		Screen brightness	17
ACadapter 11 Test 21 Filling tube 12 Time 16 Audio signal Time format 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	Assemble		Temperature unit	17
Filling tube 12 Time 16 Audio signal 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean		11	Test	21
Audio signal Time format 16 Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	·		Time	16
Activate 19 Charge Deactivate 19 Density meter 11 Auto rotation Clean	-	12	Time format	16
Deactivate 19 Density meter 11 Auto rotation Clean	-	10	Charge	
Auto rotation Clean			•	11
Auto rotation		19		
	Auto rotation			48

Measuring cell	48	D	
Cleaning reminder		Date	
Activate	19	Change	16
Deactivate	19	Date format	10
Concentration		Change	16
Alcohol	23	Deactivate	10
Sugar	23	Audio signal	19
Sulfuric acid	23	Auto rotation	19
User-defined	24, 26	Auto rotation	19
Configure		Classing reminder	10
Adjustment	21, 22, 28, 29, 30, 31, 32	Cleaning reminder	19
Alpha	28	Confirmation of results	23
Drain	22	Password protection	18
Measurement reliability	23		40
Method	21, 22, 23, 28, 29, 30, 31	Sample pump	12
Result limits	31	Sample pump mode	12
Rinse	22	Syringe mode	13
Standard	31	Delete	
Test	21, 22, 28, 29, 30, 31, 32	Method	20
Tolerance		Results	44
User-guidance	32 22	Density	24, 25
-	22	Temperature compensated	24
Configure example	F-7	Density determination	
Adjustment	57	Typical phases	35
Guided	35, 38	Density meter	
Sample pump	35, 41	Charge	11
Syringe	38	Functions	7
Test	51	Overview	7
Unguided	41	Ship	53
Confirm settings	34	Shut down	33
Confirmation of results		Start up	33
Activate	23	Store	53
Deactivate	23	Unpack	10
Connect		Density of pure water	
AC adapter	11	Table	64
Bluetooth printer	14, 15	Density unit	
		Adjustment	17
		Change	17
Power supply	11	Test	17
USB printer	14, 15	Dimming	_,
Connector for syringe		Automatic	17
Install	14	Disposal	54
Material	60	Drain	51
Contact	Back Cover	Background	35
Create		Configure	22
Method	20	Guided	39, 42
		Sample pump	39, 42 43
		Заттріє риттр	43

Syringe	41	Н	
Unguided	43	Housing	
E		Clean	47
		Material	60
End user license agreement	5	1	
Energy saver	17	<u> </u>	
Enter	17	Icons	9
Number	34	Identification	
		Sample	29
Special character	34	Standard	29
Symbol	34	Install	
Text	34	Battery	51
Errors		Connector for syringe	14
List	55	Filling tube	12
Export		Sample pump	53
Results	29, 44	Syringe adapter	14
F		Intended use	5
Factory adjustment		K	
Restore	56	Key functions ribbon	9
Factory settings		Keyboard	,
Restore	56	Change layout	19
Fahrenheit	17	Overview	34
Fill		Overview	77
Background	35	L	
Guided	37, 40	Language	
Sample pump	43	Change	19
Syringe	38	M	
Unguided	41		
		Maintenance	47
		Schedule	47
Fill speed	22	Material	CO
Filling tube		Connector for filling tube or syringe	60
Assemble	12	Filling tube	60
Install	12	Housing	60
Material	60	Measuring cell	60
Remove	52	Sample pump	60
Replace	52	Measurement accuracy	
Fir nware		Adjust	56
End user license agreement	5	Check	49
Open source attribution files	5	Measurement reliability	
Third party licenses	5	Configure	23
Update	53	Measuring cell	7
Version	4, 59	Clean	48
	,	Material	60
G		Measuring ribbon	9
		Method	
		Change	21

Configure	22, 23, 29, 30, 31, 32	Sample pump	52
Create	20	Replace	
Delete	21	Battery	51
Method ribbon	9	Filling tube	52
N		Sample pump	52
	24	Reset	
Navigate	34	Factory adjustment	56
Number	24	Factory settings	59
Enter	34	Restore	
0		Factory settings	59
Open source attribution files	5	Factory adjustment	56
Overview		Result limits	
Functions	7	Configure	31
Instrument	7	Results	
Keyboard	34	Delete	44
P		Activate	12
		Deactivate	12
Parts	62	Metal container	44
Password		Read	44
Change	19	Write	45
Password protection	18	Rinse	
Activate	18	Background	35
Deactivate	18	Configure	22
Perform		Guided	37, 38
Adjustment	57	Sample pump	42
Test	50	Syringe	39
Perform example		Unguided	41
Adjustment	57	-	
Method	37, 39, 42	<u>S</u>	
Test	50	Safety information	
Plato	26	Signal words	5
Power supply		Warningsymbols	5
Connect	11	Sample	
Print		Identification	29
Results	30, 46	Sample ID ribbon	9
Printer		Sample pump	
Connect	14	Deactivate	13
Test	15	Drain	43
Printout	30	Fill	43
R		Install	52
Remove		Material	60
Battery	51	Remove	52
Filling tube	52	Replace	52
Export	52 44		
Print	30, 46		
-	50, .5		

Rinse	42	Status ribbon	9
Set up	12	Store	
Sample pump mode		Battery	61
Activate	12	Density meter	53
Deactivate	12	Sucrose concentration	23
Sampling ribbon	9	Sugar concentration	23
Scope of delivery	10	Brix	26
Screen		Plato	26
Auto rotation	19	Sulfuric acid concentration	23
Brightness	17	Masspercent	26
Dimming	17	Volume percent	26
Serial number	59	Switch off	
Set up		Density meter	33
Sample pump	12	Switch on	
Syringe	13	Density meter	33
Ship		Symbol	5, 9
Density meter	53	Enter	34
Shortcut method list	34	Syringe	
Shut down		Drain	41
Automatic	17	Fill	40
Density meter	33	Rinse	39
Signal words	5	Set up	13
Site requirements	5	Syringe adapter	
Special character	_	Install	14
Enter	34	Syringe mode	
Specific gravity	23, 24	Activate	13
Temperature compensated	24	Deactivate	13
Standard		T	
Configure	31	•	60
Identification	29	Technical data	
Standard delivery	10	Temperature compensated	
Start adjustment		Density	24
Guided	57	Specific gravity	24
Start method		Temperature unit	
Guided	37, 39	Change	17
Sample pump	37	Temperature-compensation coef	
Syringe	39	Configure	28
Unguided	41	Values	64
Start test		Test	
Guided	50	Change	21
Start up		Configure	22, 28, 29, 30, 31, 32
Density meter	32	Configure example	50
	-	Density unit	17
		Failed	51
		Perform	50
		Perform example	49
		Printer	15

Start guided	50
Text	
Enter	34
Third party licenses	5
Time	
Change	16
Time format	
Change	16
Tolerance	
Configure	32
Troubleshooting	
List of errors	55
Turn off	
Density meter	33
Turn on	
Density meter	33
U	
Unit	
Density	17
Temperature	17
Unpack	10
Update	
Firmware	53
USB printer	
Connect	14, 15
User guidance	
Configure	22
٧	
View	
Firmware version	59
Results	44
W	
Warning symbols	5



Storage Battery Systems LLC N56 W16665 Ridgewood Drive Menomonee Falls, WI 53051

www.sbsbattery.com

800-554-2243

test@sbsbattery.com