

 REPLACEMENT OF THE FUSE Image: Strate of the second s	 CAUTION Always disconnect Adapter from the outlet when not in use. Before use,please read this instruction carefully! This product dees not convert voltage(Ac-AC), in order to avoid possible damage to your device or other safety hazards,please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter. Indoor use only: Misuse can lead to electrical shock. The length of the USB cable should be less than 3M. The travel adaptor is for temporary use only and that it shall not be used permanently. Against inserting an adaptor into another adaptor shall be provided by the manufacturer. No grounding,This product is for use with unearthed or double insulated appliances only. 	COMPATIBLE COUNTRIES	s Tunisia Turkay U Uruguay V Vetnam Z Zambia AUS PLUG: Australia C China E I Salvador E Salvador E Fiji € Guatemata X Kribat X Kribat Nauru New Zealand Papua New Guinea S S Voncent	USA PLUG: American Samoa Anguilia Antiles Artuba Bahados Bangladosh Barbados Bermuda Bellivia Brazil Canada Canada Canada Canada Combia Costa Rica Cuba E Salvador E Salvador E Salvador Ciutemala Guyana Maiti Honduras	 Japan Jamaica Jamaica Jamaica Jamaica Jamaica Jamaica Jamaica Lebanon Lebanon Lebanon Lebanon Mexico Nicaragua Niger Peru Peru Peru Peru Peru Peru Peru Peru Sudi Arabia Tailand United States Veenam Vietnam Virgin Islands(US&British) 	UK PLUG: B Bahrain Bangladesh Beliza Botisana Brunei Cameroon N Oprus Bominica El El Salvador Gambia Chana Gibratar Grenada Guarmaia I Hong Kong I reland Visio of Man Viordan	Macau Malawi Malaysia Malatwa Maufitus Myanmar Nigeria Oman Gatar Su Sunoat Su Sunoat Su Sunoat Su Sunoat Su Sunoat Su Sunoat Su Sunoat
--	---	----------------------	---	--	--	--	--

Slightly press the button and slide to the down for USA plug completely as shown.make sure the contact blades are turned to

continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.



Slightly press the button and slide to the down for AUS plug completely as shown .make sure the contact blades are turned to the parallel position.



Australia / NZ

Recover the plug: press and hold the "AUST" button to rele and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and loo the plug.

Slightly press the button and slide to the down for UK plug



completely as shown .Pull out the insulated ground pin from the housing. Recover the plug: press and hold the "UK" button to release

and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and inited Kingdom



lock the plug. Slightly press the button and slide to the down for EUROPE plug completely as shown .make sure the contact blades are

turned to the parallel position. Recover the plug: press and hold the "EUROPE" button to release and continue to pull up, until the plug completely pull

the top and then release the button, then the button will reset

and lock the plug.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice. ∐ 🖓 🐔 🕲 (€ F©)

660AC说明书		
品号		
日期	2024-01-25	
版本	V1.0	
制图		
审核		
核准		