


## User guide of Sharp Edge Tester SET-50

1. The starting and ending points of the measured object.



2. During the test, use any of the following two methods to apply pressure (both can meet the UL1439 standard 1.5 lbs /0.68Kg).

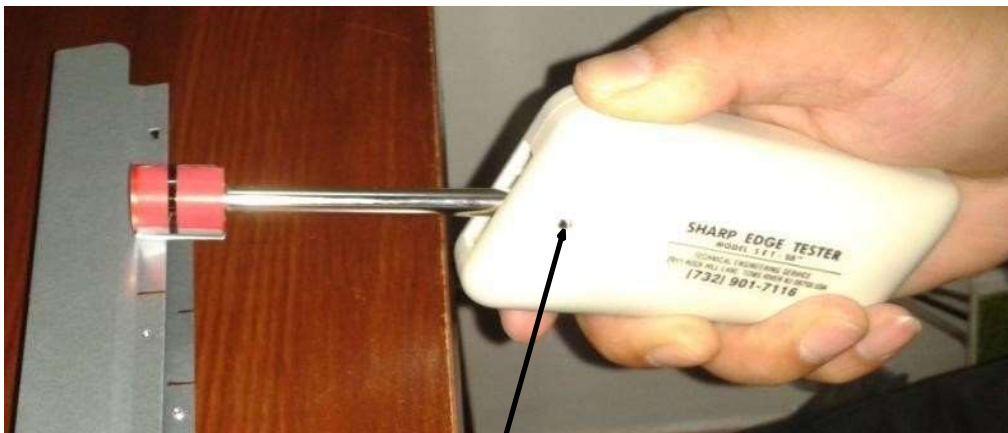

1. Those who have experience in using it can see that the test cap and the test rod are in a straight line or horizontal to the fuselage.

2. First-time users apply pressure and pass through the round hole until they see the black hole inside, and the center of the hole shall prevail.



3. The test head with rubber sleeve moves 2 inches (50.8mm) along the tested object, and then returns to the starting point. The total moving distance does not exceed 4 inches (101mm), and the time does not exceed 5 seconds, nor less than 2 seconds.

Note: The entire test process must be carried out under pressure (the above two methods are acceptable)

After the test, check the test head, if the outermost two layers (simulated skin) on the test head are scratched, it indicates that the edge of the object under test is a sharp edge.

