WARRANTY

We warrant that the products will be free from defects in material and workmanship for 2 years from the date of bill. failure caused by the use of the product

The warranty above shall not apply for any not in line with the instructions reported on this manual.

PACK LIST


Please visual check

- 1 piece of EMI-940 Pt-100 input module
- 1 piece of EMI-940 module presenting label

Thank you very much for buying EMKO's product.




Installing and Pulling Out Input/Output Modules

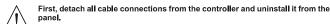




 ϵ

Suppress to the lock pins where top and bottom of the controller.

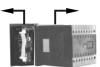

Pull the cover case with your other hand from front panel to rear

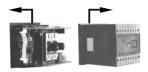

Pull out the cover case from the controller



Slide input/output modules into socket. Pull out the module from it's socket, instead of this module install the new one or other module user wants to use.



Replace the cover case by taking care of the terminal numbers should be at right orientation



After adding or changing modules to the unit, these changes must be taken into consideration while mounting of the unit to the system. If mounting is incorrect, it can cause accidents to harm system, operator or person who does the mounting. Responsibility of these kind of harmful events belongs to the user.

EMI-940 Pt-100 Input Module

: EMI-940 Pt-100 Input module

Function : Thermoresistance input

: Pt-100 Input sensor types

Insulation resistance

: +/- 0,5% FS with ESM-9950 Accuracy Dielectric strength : From device supply to module output 2kV ~


From device ground to module output N/A

: From device supply to module output _>999,9MOhm


From device ground to module output _>999,9MOhm

Overall size of the equipment : 18mm x 75,2mm x 41,4mm

: ESM-9950 Applicable products

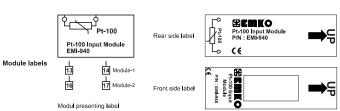



Before the module installation you must read instruction manual of which applicable product.

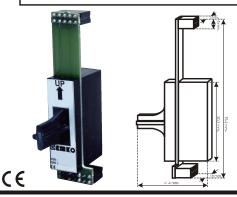



After the module installed to the device successfully, please to stick on module presenting label where to participate in the module packet, to suitable module presenting box where on the device label.

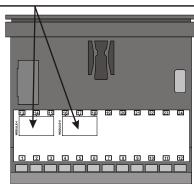

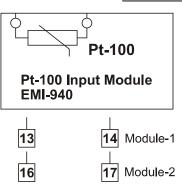

Modul presenting label



