

U-50

ITEM CODE: 172487

U50 - UNDERCOUNTER DISHWASHER

The U 50 has a robust construction and offers simple and self-explanatory operation with its single-button control. Thanks to its spacious interior, big dishes can be washed in the U 50. The upper and lower washing system remove stubborn contaminations – within 2 or 3 minutes. The twofold wash water filtration system guarantees an effective washing process with gleaming washing results.

The included strainer filters coarse dirt out of the wash water and the detergent solution remains constantly clean.

• This guarantees an optimal and efficient usage of energy, water, detergent and rinse aid.

• The double skinned door saves energy and minimises the noise


emission to a pleasant noise level.

BEST FEATURES

- WASHING PROGRAMMES The U50
 makes washing as easy as possible: with
 only three programmes. A standard
 programme for normal soiling, a
 HighTemp programme that meets
 Thermolable specifications and a 1minute-programme.
- SIMPLE TO USE Start button for 1-button operation. Automatic self-cleaning programed. Temperature display. Operation of the U50 is easy and intuitive.
- WASH FIELD Two elliptical wash fields at the top and bottom deliver optimal wash results. The special shape of the wash fields and the geometry of the jets guarantee washing power over the entire surfaces with minimal rinse water consumption.





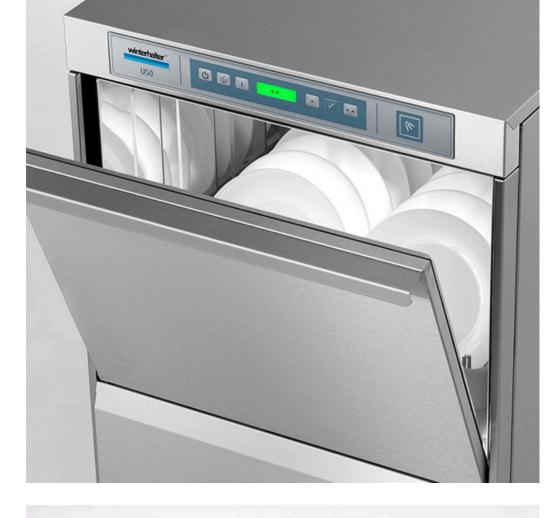





- Sparkling clean. Hygienically clean. The U50 guarantees first-class wash results. For cleanliness and hygiene of the highest standard.
- ECONOMICAL AND EFFICIENT Double-skinned design. Effective
 filtration. Smaller tank volume for fast
 start. The U50 is designed for
 extremely cost-effective operation.


DESCRIPTION OF PRODUCT

BRAND NAME	WINTERHALTER		
PRODUCT ORIGIN	THAILAND		
MODEL	U50		
CAPACITY	30/20 (RACKS/H)		
POWER & VOLTAGE REQUIREMENT	400V/3PH/50HZ		
RACK DIMENSION	50 x 50 cm		
CAPACITY TANK	15.3 LITERS		
WEIGHT	74 KG		
PRODUCT SIZE	WIDTH	DEPTH	HEIGHT
	600 mm	603 mm	855 mm

DIMENSION OF PRODUCT




PRODUCT DETAILS

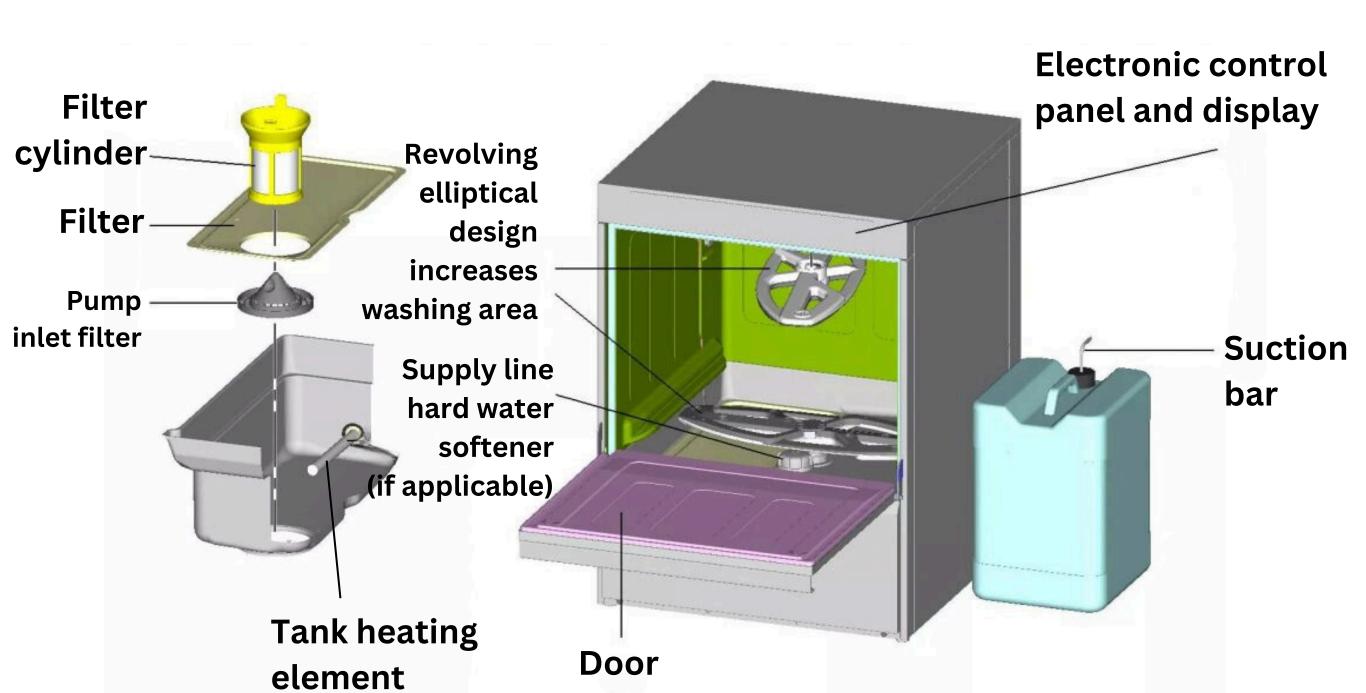


INSTRUCTIONS FOR USE OF WINTERHALTER U50 DISHWASHER


I. PREPARE THE MACHINE BEFORE STARTING IT

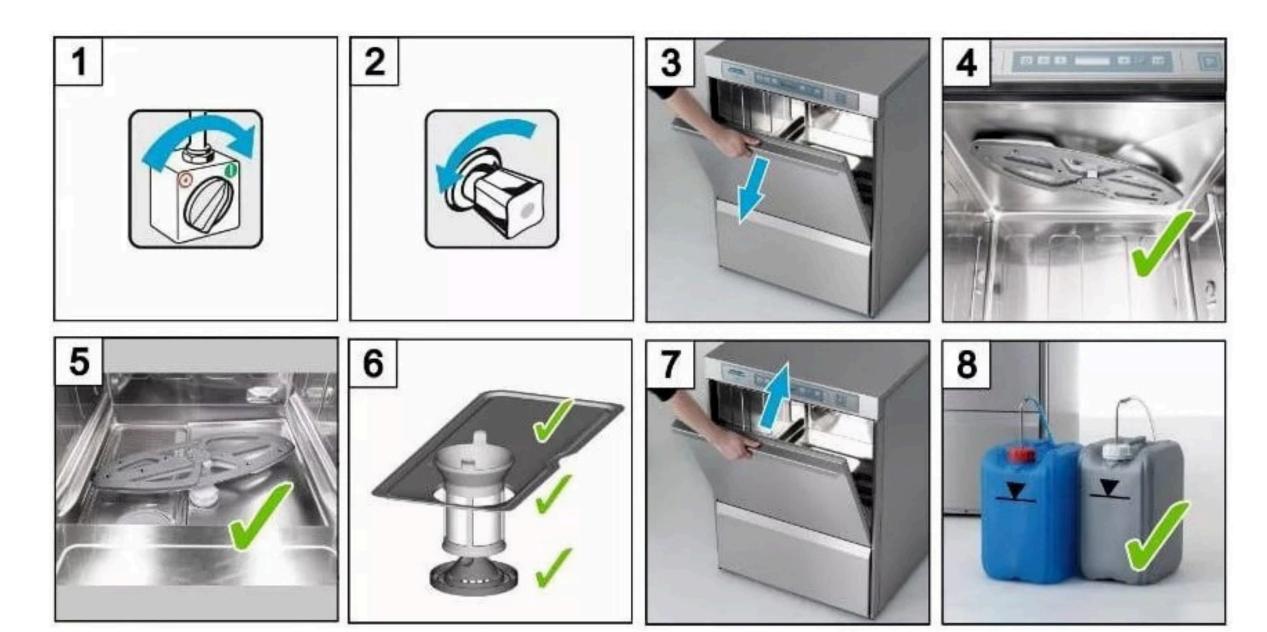

II. START THE MACHINE

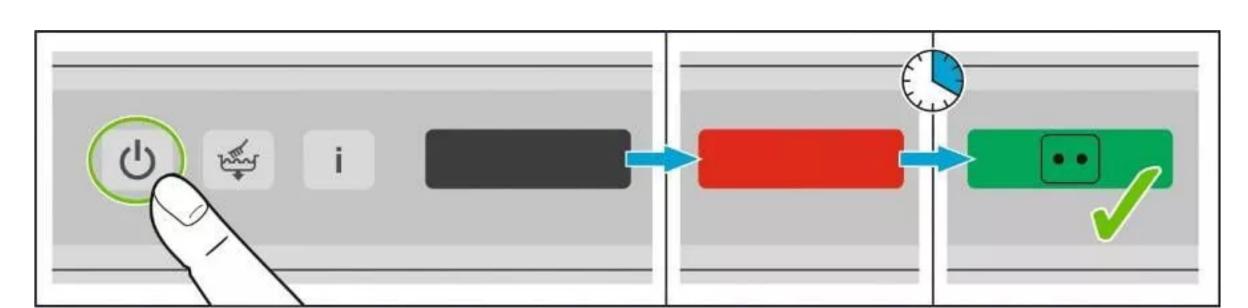

III. PREPARE TO WASH DISHES

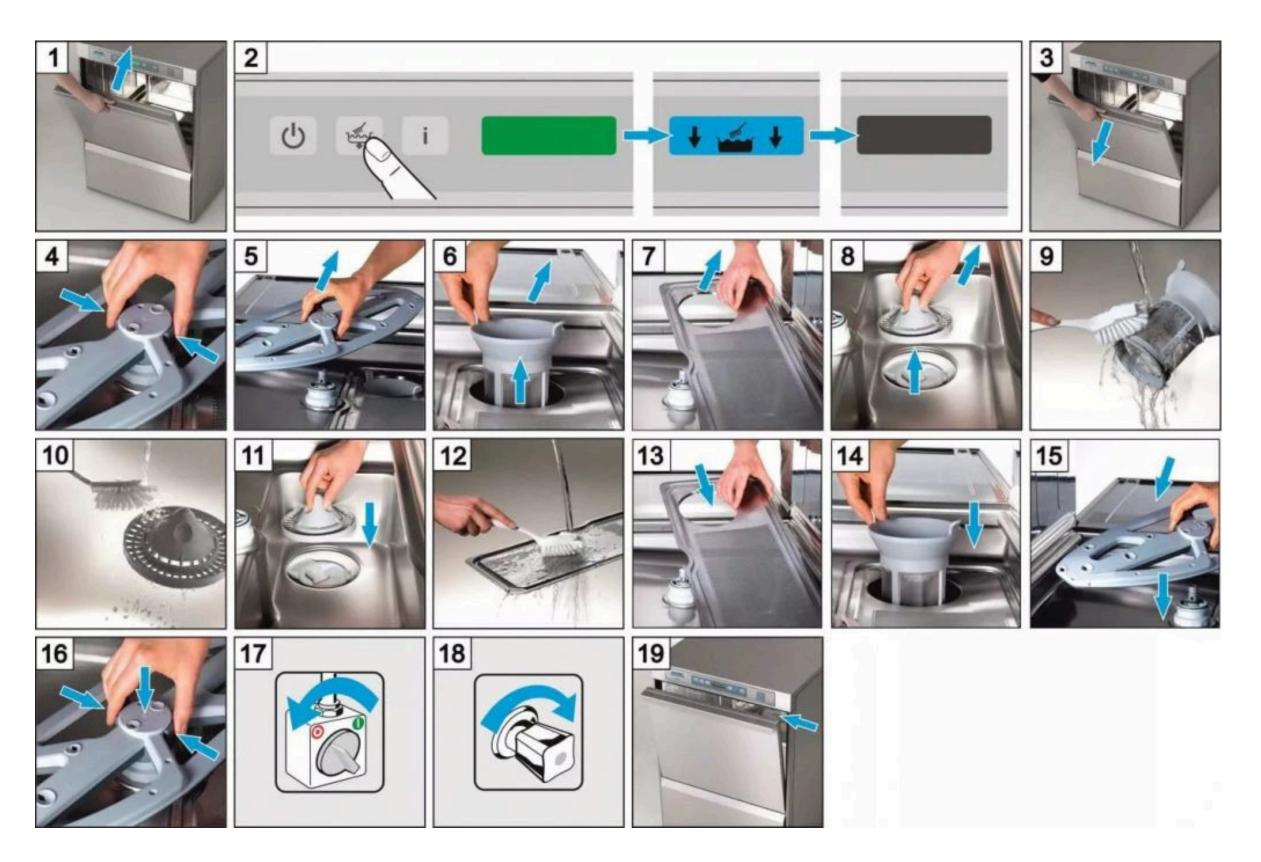

Start the washing program

Slide the washing rack into the machine.

Note: Do not put too many dishes to ensure the machine operates well

- Close the door.
- Select program.
- The selected program is displayed on the screen.
- Press the start button.

The washing program can be ended in the following ways:

- Press the power button
- Press the button of the selected washing program

Washing process

• Do not turn off the machine when stopping washing. Close the door to prevent cooling.

Shutting down the machine

• Turn off the machine at the end of the workday using the self-cleaning program (as shown) to allow the machine to be cleaned and emptied. If you use the On/Off button, the tank will remain full but will no longer be kept at temperature. If the tank temperature has dropped too much before the machine is turned back on, the tank will be automatically emptied and refilled.

Website

<u>click here</u>




Connect with us

on Youtube.

Click below

HORECA HUB OFFICIAL

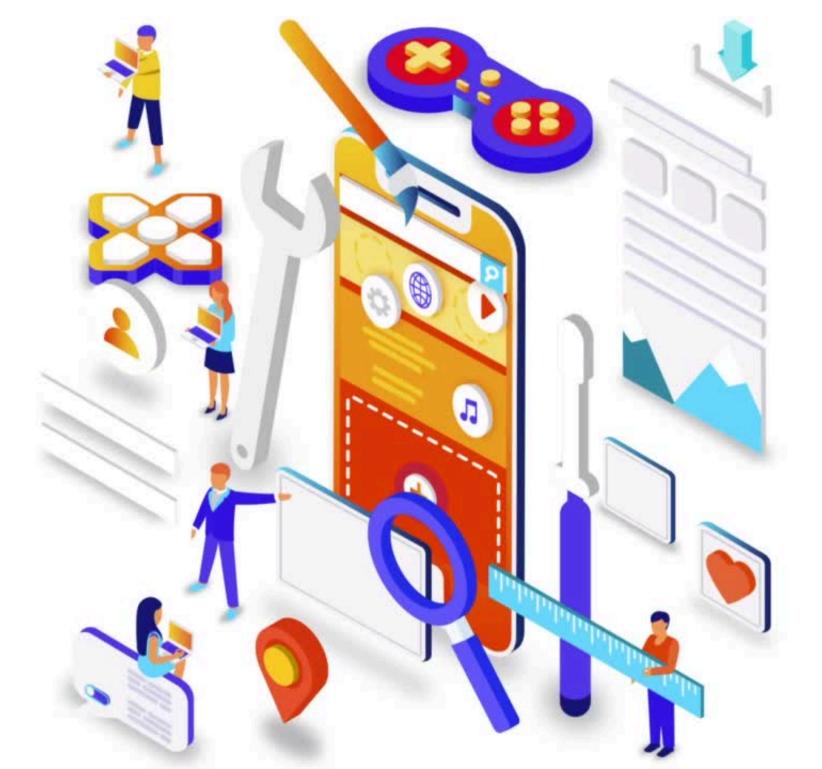


Connect with us

on Facebook.

Click below

HORECA HUB INDUSTRI JAYA

HORECA HUB TAMAN SENTOSA

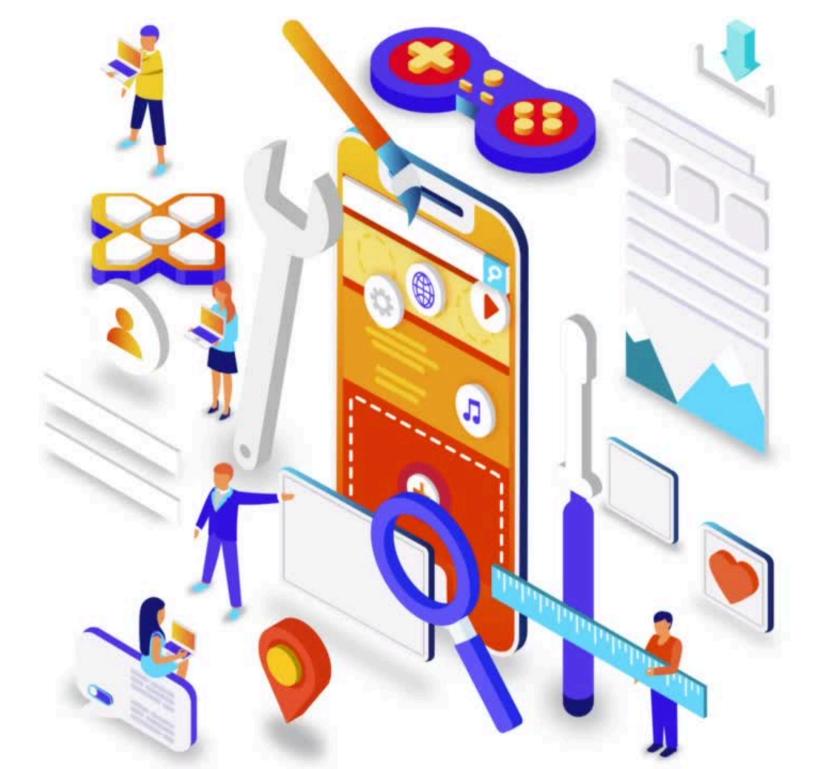


Connect with us on Instagram.

Click below

HORECA HUB INDUSTRI JAYA

HORECA HUB TAMAN SENTOSA

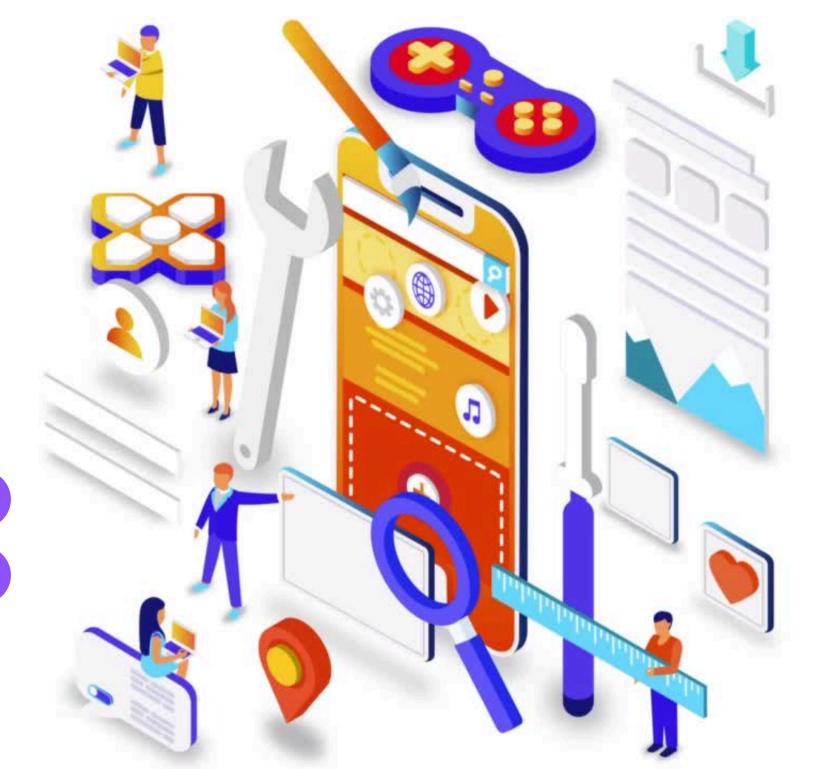


Connect with us on Tiktok.

Click below

HORECA HUB INDUSTRI JAYA

HORECA HUB TAMAN SENTOSA

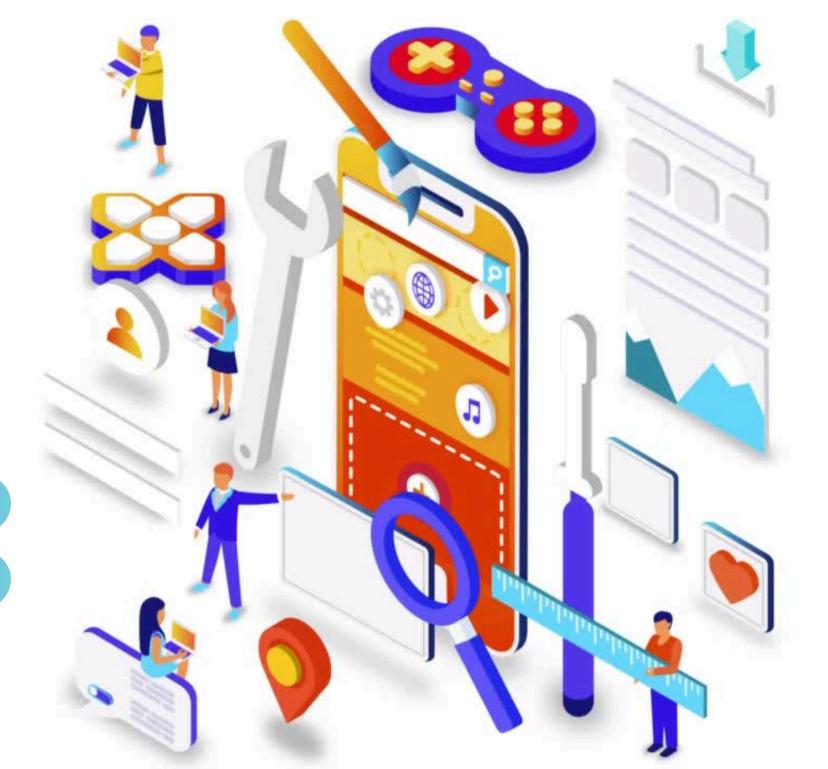

Owned by

