







PRODUCT DETAILS

TRAY SIZE

140(W) x 56(L) x 161(H) **DIMENSION**



TRAY 67(W) x 56(L) x 131(H) SIZE **DIMENSION**










1 TRAY 67(W) x 56(L) x 161(H) SIZE **DIMENSION**



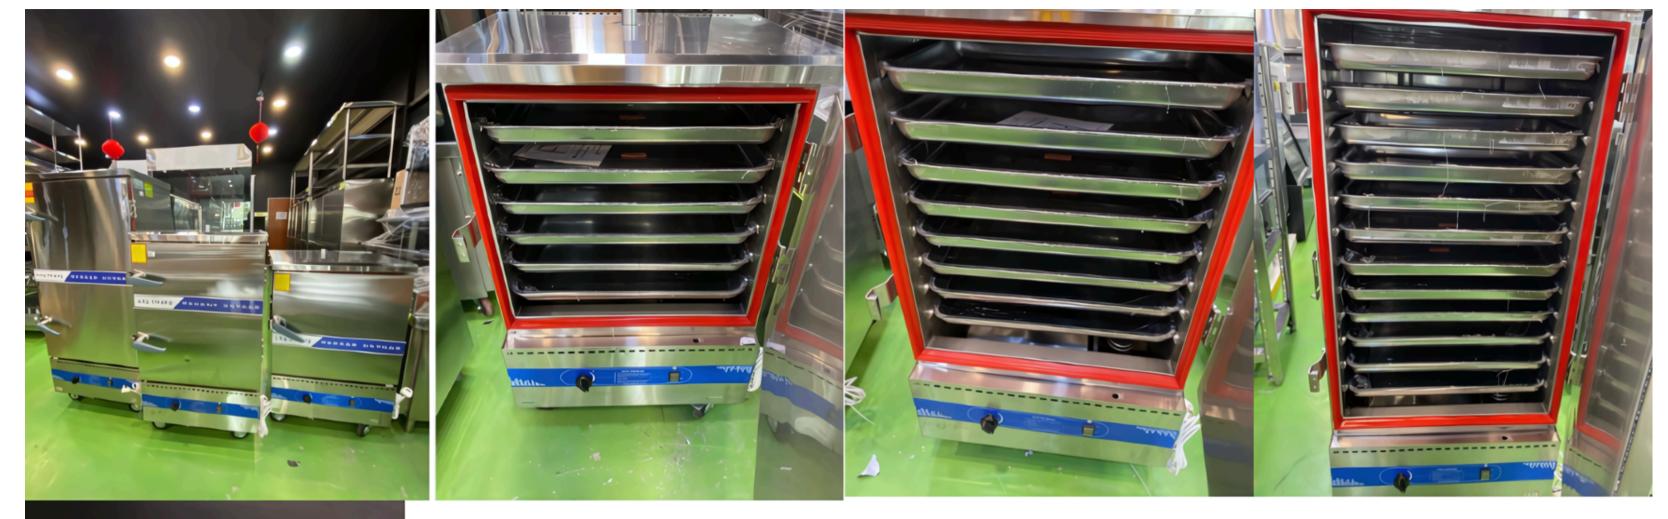





1TRAY

ABLE TO FEED 6-8 PEOPLE

6 TRAY

ABLE TO FEED 36-48PEOPLE

8 TRAY

ABLE TO FEED 48-64PEOPLE

10 TRAY

ABLE TO FEED 60-80PEOPLE

12 TRAY

ABLE TO FEED 72-96PEOPLE

24 TRAY

ABLE TO FEED 144 - 192 PEOPLE



WHITE RICE: TYPICALLY
TAKES AROUND **15-20**MINUTES TO COOK IN A GAS
RICE STEAMER.

BROWN RICE: REQUIRES LONGER COOKING TIME, USUALLY AROUND 30-40 MINUTES.

BASMATI OR JASMINE RICE:

THESE AROMATIC RICE VARIETIES USUALLY TAKE AROUND **15-20 MINUTES.**

CAPACITY(EST)





AUTO CONTROL

Full microcomputer control, automatic water inflow, automatic ignition

TIME EFFICIENT

High heat utilization rate, fast boiling speed and large steam volume.

FOOD GRADE MATERIAL

Made entirely of stainless steel, corrosion-resistant, rush-free & hygienic.

CONVINIENT DOOR SEAL

The door seal is designed with multi-air bag embedded silicone door seal, which is durable and has good sealing performance.

ADVANTAGES





ENVIRONMENT IMPACT

Burning gas produces carbon emissions, contributing to environmental pollution and climate change, whereas electric rice cookers can be more energyefficient if powered by renewable sources.

LIMITED PORTABILITY

Gas rice steamers are less portable than electric models since they require a gas source, limiting their use to locations with access to gas lines.

INSTALLATION CHALLENGES

Installing a gas rice steamer requires a gas line, which may not be feasible in all locations or may incur additional installation costs.

SAFETY CONCERN

Gas-powered appliances can pose safety risks, including gas leaks, fire hazards, and carbon monoxide poisoning if not properly maintained or used in a well-ventilated area.

DISADVANTAGES





1. Place the rice steaming cart smoothly on the ground and secure it

- 2. Confirm that the ignition switch is in the "off" state
- 3. When connecting to the gas source, a high-quality household-gas regulator (JYT-0.6) must be used to connect the liquefied petroleum gas to the inlet of the rice steamer truck.
- 4. Medium and high pressure gas regulator valves cannot be used.
- 5. Connect the water pipe and the water pressure should be (100~250) kPa or above



HOW TO USE





HOW TO USE

- 1. First turn on the tap water switch and fill the water tank clean water
- 2. Turn on the air source and turn the fire power adjustment knob to "large"
- 3. Press the ignition switch -"ON/OFF" and the rice steamer will automatically ignite.
- 4. Shut down: Press the iginition switch "ON/OFF" again, the rice steamer will automatically shut down and then close the gas cylinder valve.





STEPS OF COOKING FOOD

PREHEATING

After the burner burns, the water in the water tank heats up quickly though the heat exchange tube. In about 8 minutes, the water in the water tank begins to boil and generate steam. The top pressure relief valve releases the steam, indicating that the cooker is ready for cooking food

COOKING FOOD

Before opening the door to put food in, turn down or turn off the heat. Slowly open the door, re-ignite, and adjust the firepower. Read the cooking time.



STEPS OF COOKING FOOD

PRESSURE RELEASE & RETRIEVAL

After the food is cooked, when opening the door, be careful not to touch the rice steamer or the gap in the door. Stay as far away from the rice steamer as possible. Slowly unlock the door and allow the high-temperature steam to dissipate before removing the food from the steamer. Wear heatinsulating gloves when handling the food to prevent burns.



HOW TO CLEAN



After using it for several days, if the fire tube is stained with yellow scale, you must add 1 to 2 bottles of vinegar and water (approximately 2 to 3 centimeters above the surface of the fire tube). Boil for about 15 minutes, let it soak for 1 hour, and wait until the scale comes off completely. Drain the water and then rinse it with clean water

Fault phenomenon	Cause of issue	Method of exclusion	
A. No response when starting up	1. The power cord is broken2. Burn insurance3. The switch is broken or the wire is disconnected	1. Replace the power cord2. Check the cause and replace the fuse 3. Replace the switch or plug it in again	
B. There is a battery but no sparks after tuming on the machine	1. The ignition switch is broken2. The ignition pulse is broken3. The distance between the ignition pins is too large orthey collide	1. Replace the switch2. Replace the pulse3. Adjust to the appropriate distance	
C. There are sparks after turning on the machine but no fire	1. The air source pressure is too high or too low and there is no air2. The solenoid valve is broken or the line is disconnected 3. Air path is blocked	1. Change to a suitable gas cylinder2. Replace the solenoid valve or reconnect the wires3. Adjust to the appropiate distance	
D. Automatic flameout	1. Gas cylinder is empty2. The sensing wire is loose3. The sensor needle position is too high or too low	1. Air replacement bottle2. Tighten the sensing wire3. Remove the blocking debris	
E. Alarms	1. Water tank is short of water2. There is oil on the water level probe	1. Add water , open the water valve for a long time, do not turn off the water2. Wipe clean	



Product name	Single door 6 basins	Single door 8 basins	Single door 10 basins	Single door 12 basins	Double door 24 basins	
Product number	ZXYF16-F-6	ZXYF16-F-8	ZXYF16-F-10	ZXYF16-F-12	ZXYF16-F-24	
Rates input voltage	-3V/220V~					
Rated input power	0.01kW					
Rated input frequncy	50Hz					
Gas type	Liquefied petroleum gas					
Gas rated pressure	2.8kPa					
Rated heat load	16kW					
Inlet water pressure	(100~250)kPa					
Operation noise	Level 2					
Material grade	201# stainless steel					
Weight	67kg	78kg	89kg	98kg	182kg	
Overall dimensions(mm)	670x560x1100	670x560x1310	670x560x1460	670x560x1550	1400x560x1610	
Price	RM 3,103.00	RM 3,799.00	RM 4,200.00	RM 4,500.00	RM 7,451.90	