

## Quick Programming Guide V 3.2 編程安裝簡便 V 3.2

### 1. Zone & Zone Type Setting. (防區與區類型設置)

Example for Zone Setting:- (例如: 區類型設置)

Installer Code 編號與安裝員密碼	Section (頁)	Zone (防區)	Zone Type (區類型)	Zone Attribute 防區功能
* 8 2525	00	01	01 (Delay Zone)	123456■8
* 8 2525	00	02	03 (Instant Zone)	123456■8
* 8 2525	00	03	11 (Panic Zone)	123456■8
* 8 2525	00	07	14 (Key Switch Zone)	123456■8
* 8 2525	00	12	10 (Tamper Zone)	123456■8

Press [#] to exit / enter for the programming mode.

■ : Disable (Off)

Note: Default Zoning (Zone 1 – Delay zone, Zone 2 to 11 – Instant zone, Zone 12 – Tamper zone)

### 2. Date and Time Setting. (日期與時間設置)

[\* 7][1234][60] (yymmdd)(hhmmss) Enter data / time. (輸入日期 / 時間)

### 3. Phone Number and Dial Sequence Setting. (電話號碼與撥打次數設置)

[\* 7][1234][51] 1<sup>st</sup> Phone number. (第 1 電話號碼)

[\* 7][1234][52] 2<sup>nd</sup> Phone number. (第 2 電話號碼)

[\* 7][1234][53] 3<sup>rd</sup> Phone number. (第 3 電話號碼)

[\* 7][1234][54] 4<sup>th</sup> Phone number. (第 4 電話號碼)

[\* 8][2525][10] On number 2. (開 2 號)

[\* 8][2525][20] (XX) Dialing Sequences. (撥打次數)

### 4. Phone Control Arming / Disarming Setting. (電話開 / 關遙控設置)

[\* 8][2525][10] On number 4. (開 4 號)

### 5. Entry / Exit Time Setting. (進 / 出時間設置)

[\* 8][2525][12] (XXX)(YYY) Enter entry / exit time. (輸入進 / 出時間)

### 6. Burglary / Fire Bell Cut Off Times Setting. (警笛 / 火警聲時間停止設置)

[\* 8][2525][13] (XX)(YY) Entry burglary / fire cut off time. (輸入警笛 / 火警聲時)

### 7. Zone Fast Response Time Setting For Vibrator Sensor. (振應器靈敏度可調設置)

[\* 8][2525][07] On zone number for vibrator sensor. (開振應器連接區號碼)

[\* 8][2525][06] (XX) Enter sensitivity value from 05 to 30. (輸入靈敏度 05 到 30)

8. User Code Adding. (增加用戶密碼)

- [\* 7][1234][02] New code for 2<sup>nd</sup> User. (第 2 用戶密碼)
- [\* 7][1234][03] New code for 3<sup>rd</sup> User. (第 3 用戶密碼)
- [\* 7][1234][04] New code for 4<sup>th</sup> User. (第 4 用戶密碼)
- [\* 7][1234][15] New code for 15<sup>th</sup> User. (第 15 用戶密碼)

9. Master Code Changing. (主碼更改)

- [\* 7][1234][01] New code. (新密碼)

10. Zone Bypass Setting. (防區關閉設置)

- [BYPS][1234] On / Off zone number. (開 / 關防區號碼)

11. AC Loss Reporting. (電源中斷發送通訊)


- [\* 8][2525][10] On number 8 (開 8 號)- ON (開)

12. Voice Module Setting. (語音卡設置)


- [\* 8][2525][10] On number 3 (開 3 號)

13. Phone Remote Control. (電話遙控功能)

Without voice module diagram. (無語音電話遙控)

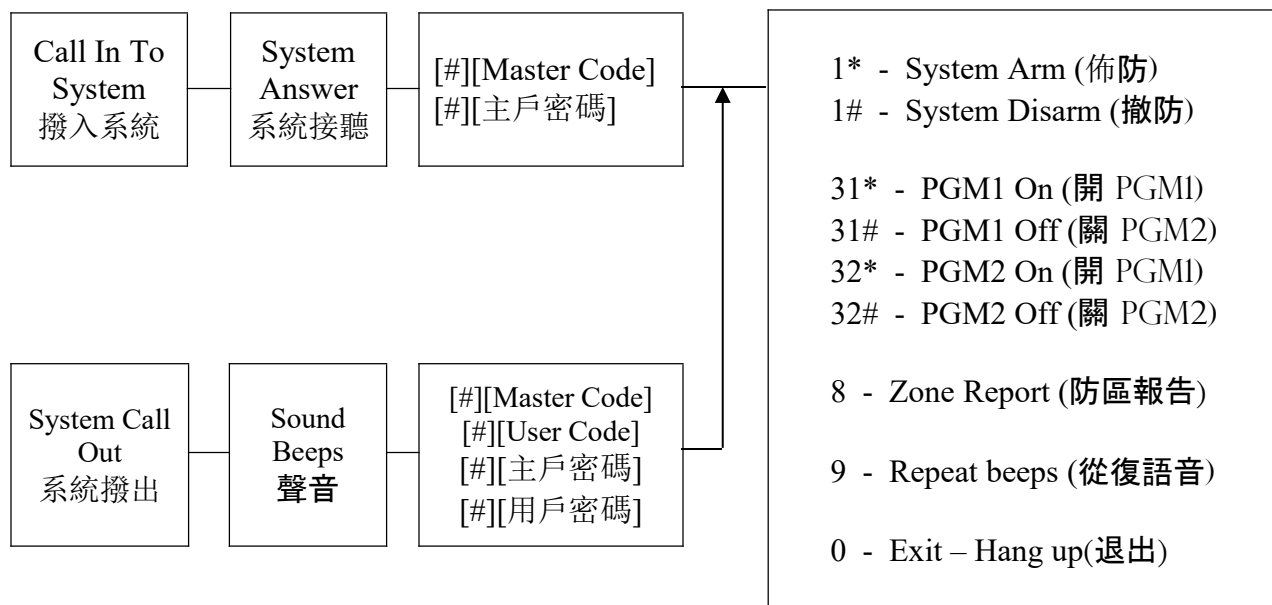

With voice module diagram. (有語音電話遙控)

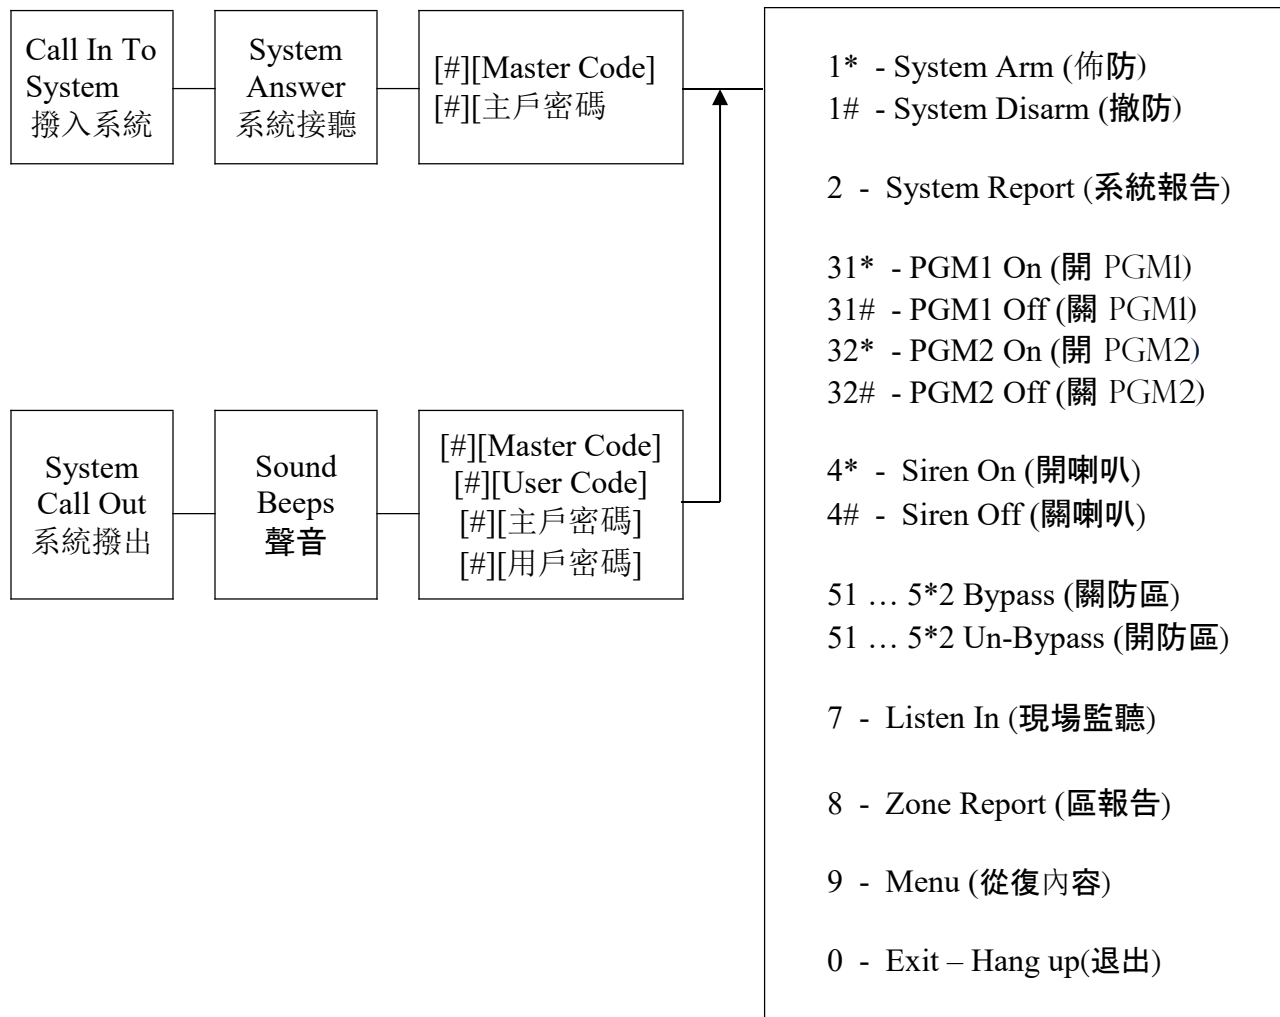

14. CMS Setting. (信號發送設置)

- [\* 8][2525][10] On number 1. (開 1 號)
- [\* 8][2525][24] 1<sup>st</sup> CMS phone number. (第 1 電話號碼)
- [\* 8][2525][25] 2<sup>nd</sup> CMS phone number. (第 2 電話號碼)
- [\* 8][2525][26] Enter CMS account number. (輸入 CMS 戶口號碼)
- [\* 8][2525][27] <> [31] Enable / disable for CMS events. (輸入 CMS 信息號碼)

## Quick Reference (目錄)

15. Arm / Disarm (佈防 / 撤防操作) – [1234]
16. System Trouble Checking (查詢系統狀態) – [\* 4]
17. Event Memory Checking (查詢記錄內容) – [\* 5]
18. Chime On / Off (鈴聲開 / 關) – [\* 6]
19. AC Loss Transmission Delay (電源中斷監測時間) – [\* 8][2525][14](XX)
20. Ring Number For The System Answer (主機接聽次數) – [\* 8][2525][18](XX)
21. Voice Transmission Duration (語音發送時間設置) – [\* 8][2525][19](XX)
22. Number Of Dialing Sequences (撥打次數設置) – [\* 8][2525][20](XX)
23. Programmable For PGM Setting (PGM 控制功能設置) – [\* 8][2525][22](XX)(YY)
24. Cancellation Of Phone Communication (切斷電話通訊) – [\* 7][1234][49] or [\* 8][2525][35]
25. CMS Communication Test (CMS 信號發送測試) – [\* 8][2525][36]
26. Walk Test (移動測試) – [\* 8][2525][37]
27. Stay Arming (Stay 佈防) – [STAY][1234]  
Setting : [\*8][2525][00][xx][03][12345678]#  
xx : Zone Number
28. Instant Stay Arming (立即 Stay 佈防) – [INST][STAY][1234]  
Setting : [\*8][2525][00][xx][03][12345678]#  
xx : Zone Number
29. Instant Arming (立即佈防) – [INST][1234]
30. Info Key (查詢鍵) – [?]
31. Reset key (復位鍵) – [#]