 





ING HING HONG
Trading Sdn bhd 荣兴行贸易有限公司

INSTALLATION GUIDE AND TIPS

1 The spacing between the roof eaves & Rain Gutter must be 40mm
屋檐和水槽之间的距离必须保持40mm



 
2 Placed the Bracket for the straight Fascia Board
平面的挑口板能用托架




3 Placed the Adjustable Bracket for the uneven Fascia Board
不平面的挑口板必须用可调托架




4 Placed every Bracket along the Rain Gutter with the spacing 600mm
保持600mm间隔的距离上, 沿着水槽安装上托架

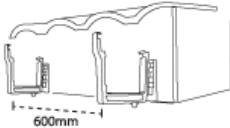


5 The spacing between the Bracket & Outlet must be 300mm
水斗与托架的距离保持300mm

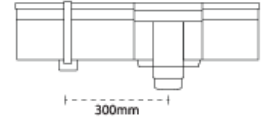


6 The spacing between the Bracket & Socket must be 100mm
托架与水槽接头的距离必须保持100mm

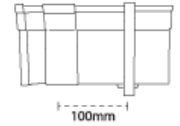

7 The spacing between Bracket & End Cap must be 100mm
托架与端盖的距离必须保持100mm

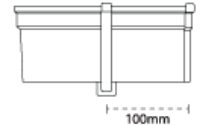

8 The spacing between Bracket & Corner must be 300mm
托架与转角接头保持300mm

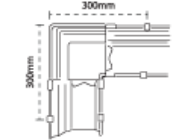

Remark: The products should remain a spacing distance of 60cm for each bracket

Item	Description
1	Rain Gutter
2	End Cap-Left
3	End Cap-Right
4	Socket
5	Outlet-Fin / Original Outlet
6	Corner-In
7	Corner-Out
8	PVC Bracket / PVC Adjustable Bracket
9	Bend 45°
10	Downpipe
11	Bend 90°

