

Stepping Motor Driver

5 Phase Stepping Motor Driver Series



5 Phase Stepping Motor Driver-AC110V/220V input TR514-1 • TR514-2




► Features

- Small size, AC110V or 220V power input directly
- New driving type—Pentangle which is high efficiency, low noise and vibration, the characteristic of torque and response improved greatly
- SMD (Surface Mounting Design) design for raised stability of circuit
- With auto current down circuit it can depress the motor's temperature rising
- Self-test/TIMING function and easy circuit inspection
- With over voltage protection function, auto current cut off when the input current over the rated value


► Specs

Driver model	TR514-1	TR514-2
Power Input	AC100~115V±15% 5A 50/60Hz	AC200~230V±10% 3A 50/60Hz
Drive current	1.4A/phase	
Excitation mode	Full step : 0.72° 4 phase excitation Half step : 0.36° 4-5 phase excitation (Switch selectable)	
Signal output/input mode	Photo Coupler input interface Open Collector output interface	
CW pulse Input	2 pulses : CW pulse signal input ; 1 pulse : Rotation pulse signal input	
CCW pulse input	2 pulses : CCW pulse signal input ; 1 pulse : Direction of rotation signal input	
H.OFF input	HOLDING OFF input	
Output signal	TIMING output	Signal is output every time the excitation sequence returns to step 0 Full step : Signals is output every 10 pulses Half step : Signal is output every 20 pulses
	H.OFF output	Signal is output when the internal heat sink exceed 80°C
Functions		• Pulse Input mode switch (1P/2P) • Auto current OFF when overheat (O.H.) • Step angle switch (H/F) • Self test (TEST) • Auto current down (ACD)
Protection functions		• Overheat protection : Signal is output when the internal radiator exceed 80°C • motor stops running • Over voltage protection : Auto current cut off when the input voltage over the rated value
Light display		POWER、CW、CCW、H.OFF、TIMING、O.H.
Ambient temperature		0 °C~+40 °C
Dimension (mm)		115 (L) × 42 (W) × 200 (H)
Weight (g)	940	960

► Wiring diagrams

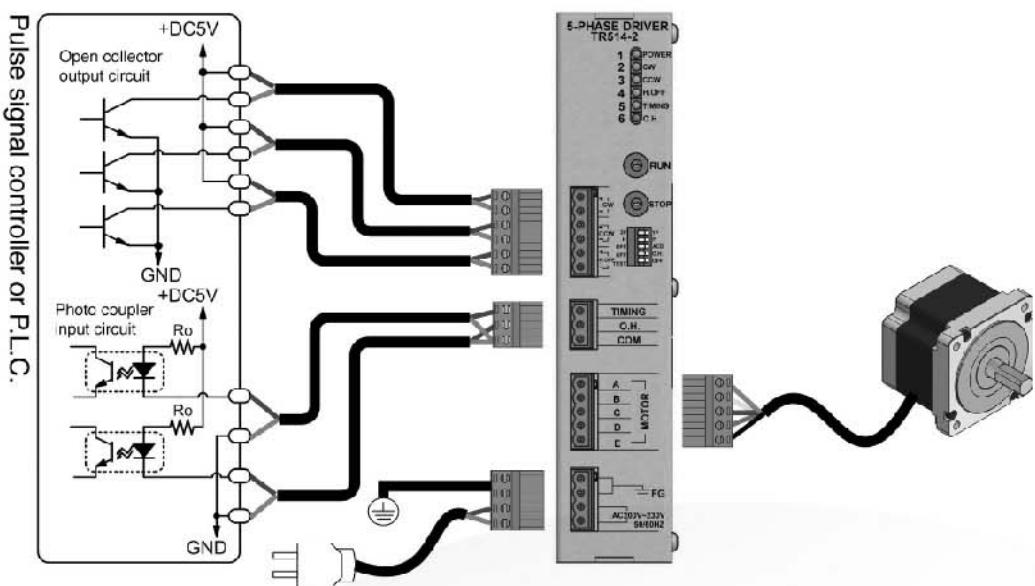

■ 5 phase motor internal wiring diagram :

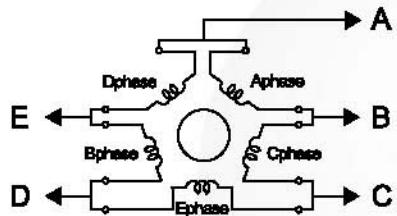


■ Wiring chart :

	TROY		SANYO DENKI		TAMAGAWA		ORIENTAL		
Line	5lines	10lines	5lines	5lines*	10lines	5lines	10lines	5lines	10lines
A	Blue	Blue/Black	Black	Blue	Black/Yellow	Blue	Blue/Black	Blue	Blue/Black
B	Red	Red/Brown	Orange	Red	Black/White/Orange	Red	Red/Brown	Red	Red/Brown
C	Orange	Purple/Orange	Blue	Orange	Orange/White/Blue	Orange	Purple/Orange	Orange	Purple/Orange
D	Green	Yellow/Green	Red	Green	Red/White/White	Green	Yellow/Green	Green	Yellow/Green
E	Black	White/Grey	Yellow	Black	Yellow/White/Red	Black	White/Grey	Black	White/Grey

「」means 5 phase stepping motor new color mark of Sanyo Denki which is different the old one. Please refer to the wiring chart to compare the lines what you got.

► Dimension (Unit:mm)

■ Driver dimension :

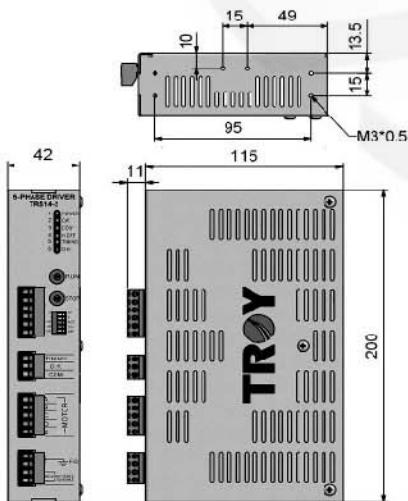

■ Mounting plate dimension :

