
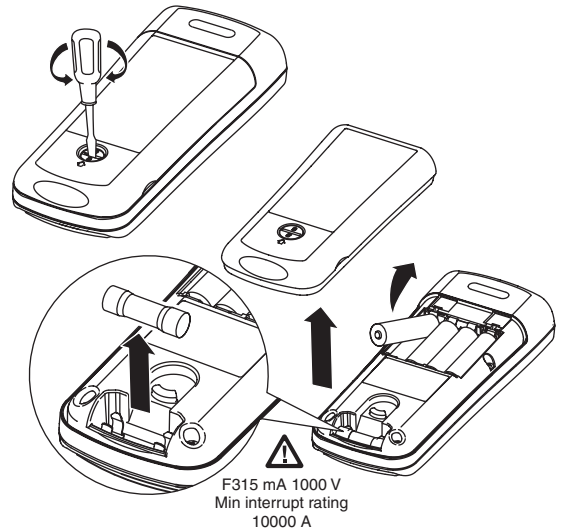



1507/1503 Insulation Tester Quick Reference Guide

 See Users Manual for "Safety Information" and complete operating information.


Fuse Test

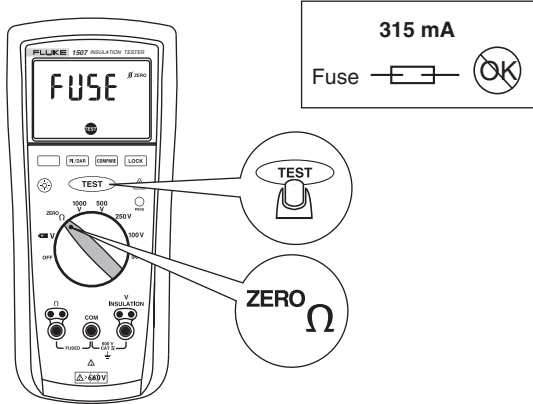


Battery Test

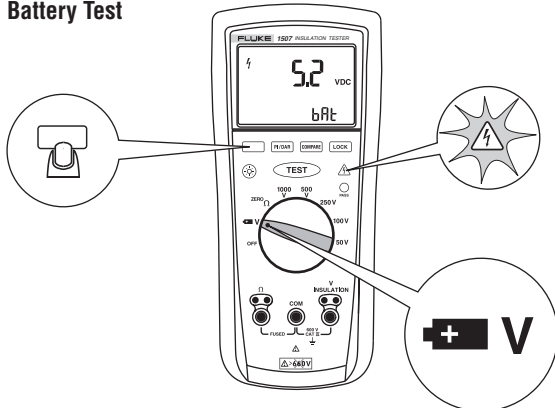


Voltage \tilde{V} \bar{V}

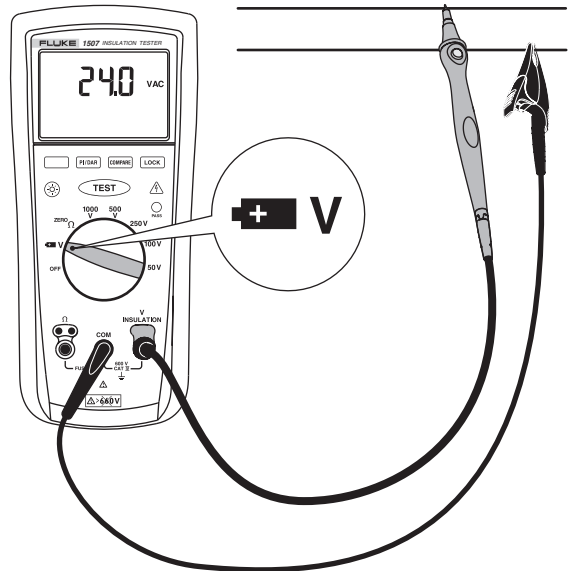


Measuring Insulation Resistance

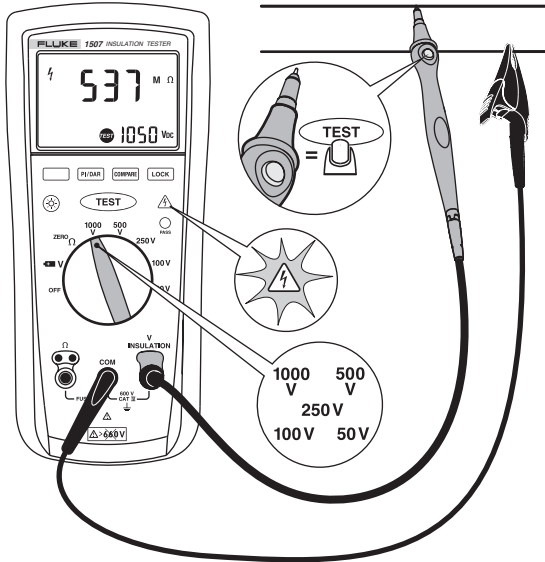

Compare Function (1507)

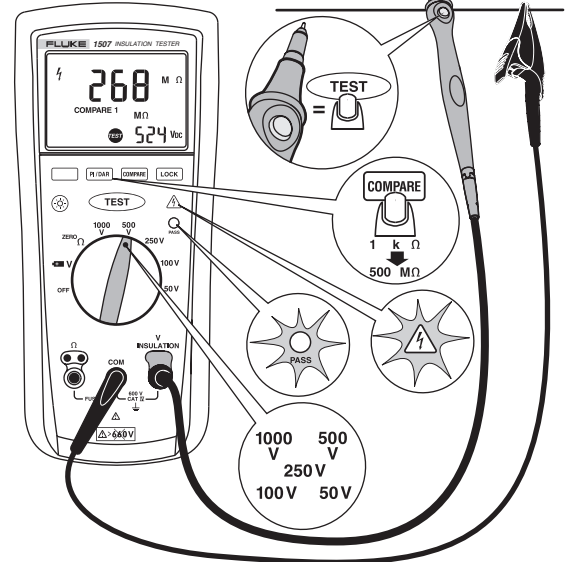

Polarization Index and Dielectric Absorption Ratio (1507)

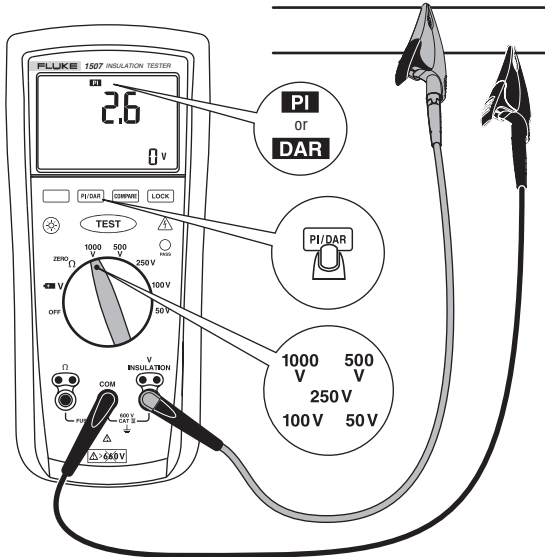

Measuring Earth-Bond Resistance

