

# VINTEC



## Quickstart Guide

# Before turning your cabinet on

---

**DO NOT SWITCH ON FOR  
AT LEAST 24 HOURS**

after transport to allow refrigerant gases to settle.



## **SPACER**

Install spacer at the back of the cabinet.



## **SURGE PROTECTOR**

Make sure you use a surge protector.



## **LEVEL**

Level your wine cabinet before loading. Un-levelled cabinets can be noisy, and doors may not close or seal properly.



## **FILL**

Fill the cabinet with bottles before you turn it on. If you don't have enough bottles, spread them evenly throughout the cabinet.

 


## **TEMPERATURE**

Check desired temperature setting (6°-8° for serving white, 12°-14° for all cellaring, and 16°-18° for serving red).

# Installation and ventilation

**WARNING:** You **MUST** refer to model-specific ventilation requirements listed in the user manual or on the Vintec website when installing your cabinet.

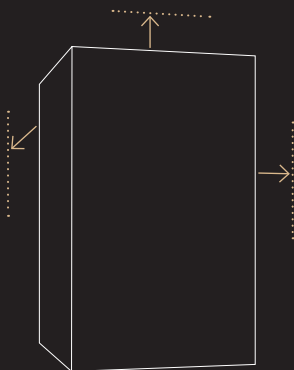

See user manual for model-specific dimensions

## FOR V30 SERIES

**Freestanding only:** Cannot be placed underbench.

## FOR ALL MODELS:



**DO NOT** put cabinets in direct sunlight



**DO NOT** expose cabinets to moisture or rain



**DO NOT** place cabinets outdoors (except for covered alfresco areas)



**DO NOT** place cabinets near heat sources such as ovens



**DO NOT** place a door in front of cabinets or put them in a closed confined space (eg. small rooms such as pantries, closets or under staircases)

# Have you noticed:

---



## **FREQUENT FAN CYCLE**

This ensures slow and even distribution of cool air throughout the cabinet, limiting temperature variations.



## **SPACER/STOPPER**

Ensures adequate ventilation behind unit.



## **HINGE**

If required, is used for reversing the door.



## **WATER ON THE DOOR OR FLOOR**

 
In hot/humid climates and particularly on hot days, humidity in the ambient air can condense on the cabinet's cold glass door.



## **ICE FORMING**


If the door seal is compromised or left slightly ajar the compressor will keep running which may cause ice formation on the back wall.



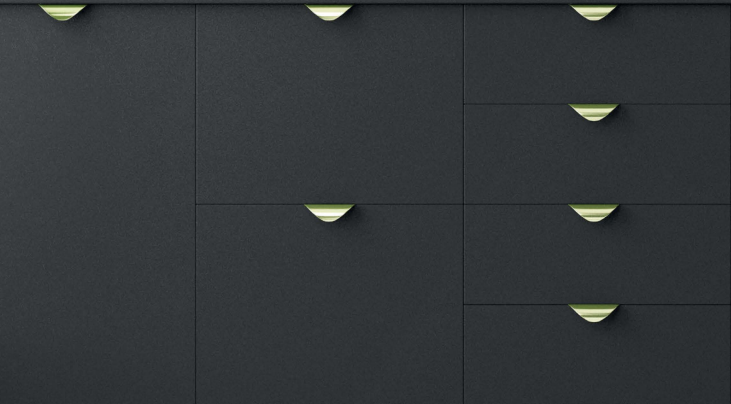

# Storing and stacking

 
## Different shapes and sizes

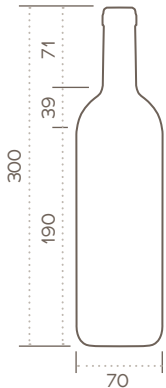

Standard  
Bordeaux style  
bottle dimensions

When quoting capacity, Vintec refers to the “standard Bordeaux style bottle”. The dimensions and proportions of this bottle shape are shown on the left.

 
Wine producers use a huge range of different bottles (see below), and not all will fit opposite each other on the same shelf. To improve capacity, lay bottles opposite complementary shaped bottles with necks interlocking (see right).

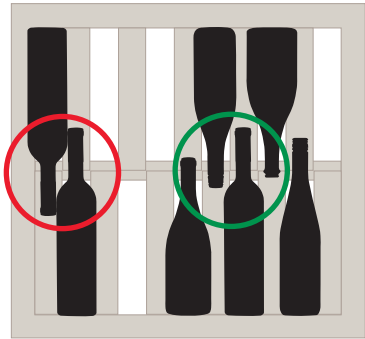


Standard  
Bordeaux style



## Stacking for ageing

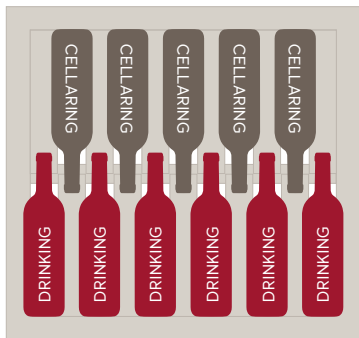 


Shelf top view

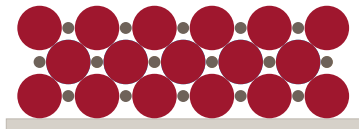 


Shelf front view

Stack bottles you wish to mature at the back of shelves, and wines for consumption at the front.

## Stacking for accessibility

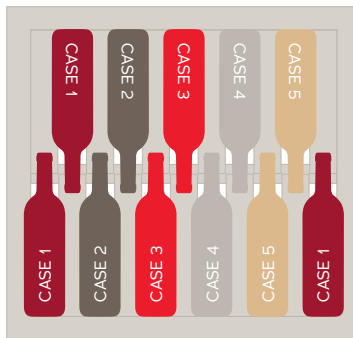 

Shelf top view

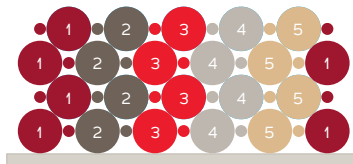 

Shelf front view

Keep bottles from the same case together in vertical stacks for safe and easy access to all your different wines.

# Warranty and registration

---

Warranty registration of your Vintec wine cellars can be done via your local Vintec distributor:

- 1 Take note of your model number and serial number
- 2 Visit [www.vintec.com/distributors/](http://www.vintec.com/distributors/) to find your location
- 3 Contact your distributor and register

# Service and support

---

In the rare event that your Vintec cabinet does not perform to your satisfaction, contact your local Vintec distributor.

Contact details can be found at:  
**[www.vintec.com/distributors/](http://www.vintec.com/distributors/)**



# VINTEC

Vintec. We are part of the Electrolux Family. To add a touch of professional inspiration to your home, visit [electrolux.com](http://electrolux.com)

Stay in touch and share your user experience by following us on Facebook and Instagram:



@vintecclub

[vintec.com](http://vintec.com)