

F7 FINGER PRINT READER (PROGRAMMING)

PROGRAMMING MODE

* MASTER CODE # (Default MASTER CODE 999999)

TO CHANGE MASTER CODE

* 99 99 99 # 00 NEW CODE # NEW CODE # *

ADD USER & DELETE USER

ADD CARD

* 99 99 99 # 11 Touch card * (can be continuously)

ADD CARD BY USER ID

* 99 99 99 # 11 100 # Touch card * (user ID can be anything and needs while deleting process)

DELETE CARD

* 99 99 99 # 21 Touch card * (can be continuously)

DELETE CARD BY USER ID

* 99 99 99 # 21 100 # *

ADD PIN

* 99 99 99 # 11 NEW 4 DIGIT PIN # NEW 4 DIGIT PIN # * (can be continuously)

ADD PIN BY USER ID

* 99 99 99 # 11 100 # NEW 4 DIGIT PIN # NEW 4 DIGIT PIN # *

DELETE PIN

* 99 99 99 # 21 100 # *

ADD FINGER PRINT

* 99 99 99 # 11 PLACE FINGER 2X * (can be continuously)

ADD FINGERPRINT BY USER ID

* 99 99 99 # 11 100 # PLACE FINGER 2X *

DELETE FINGER PRINT

* 99 99 99 # 21 PLACE FINGER 1X * (can be continuously)

DELETE FINGER PRINT BY USER ID

* 99 99 99 # 21 100 # *


DELETE ALL USER

* 99 99 99 # 20 0000 # *

DOOR TIME

* 99 99 99 # 41 0 – 300 # *

F7 FINGER PRINT READER (WIRING DIAGRAM)

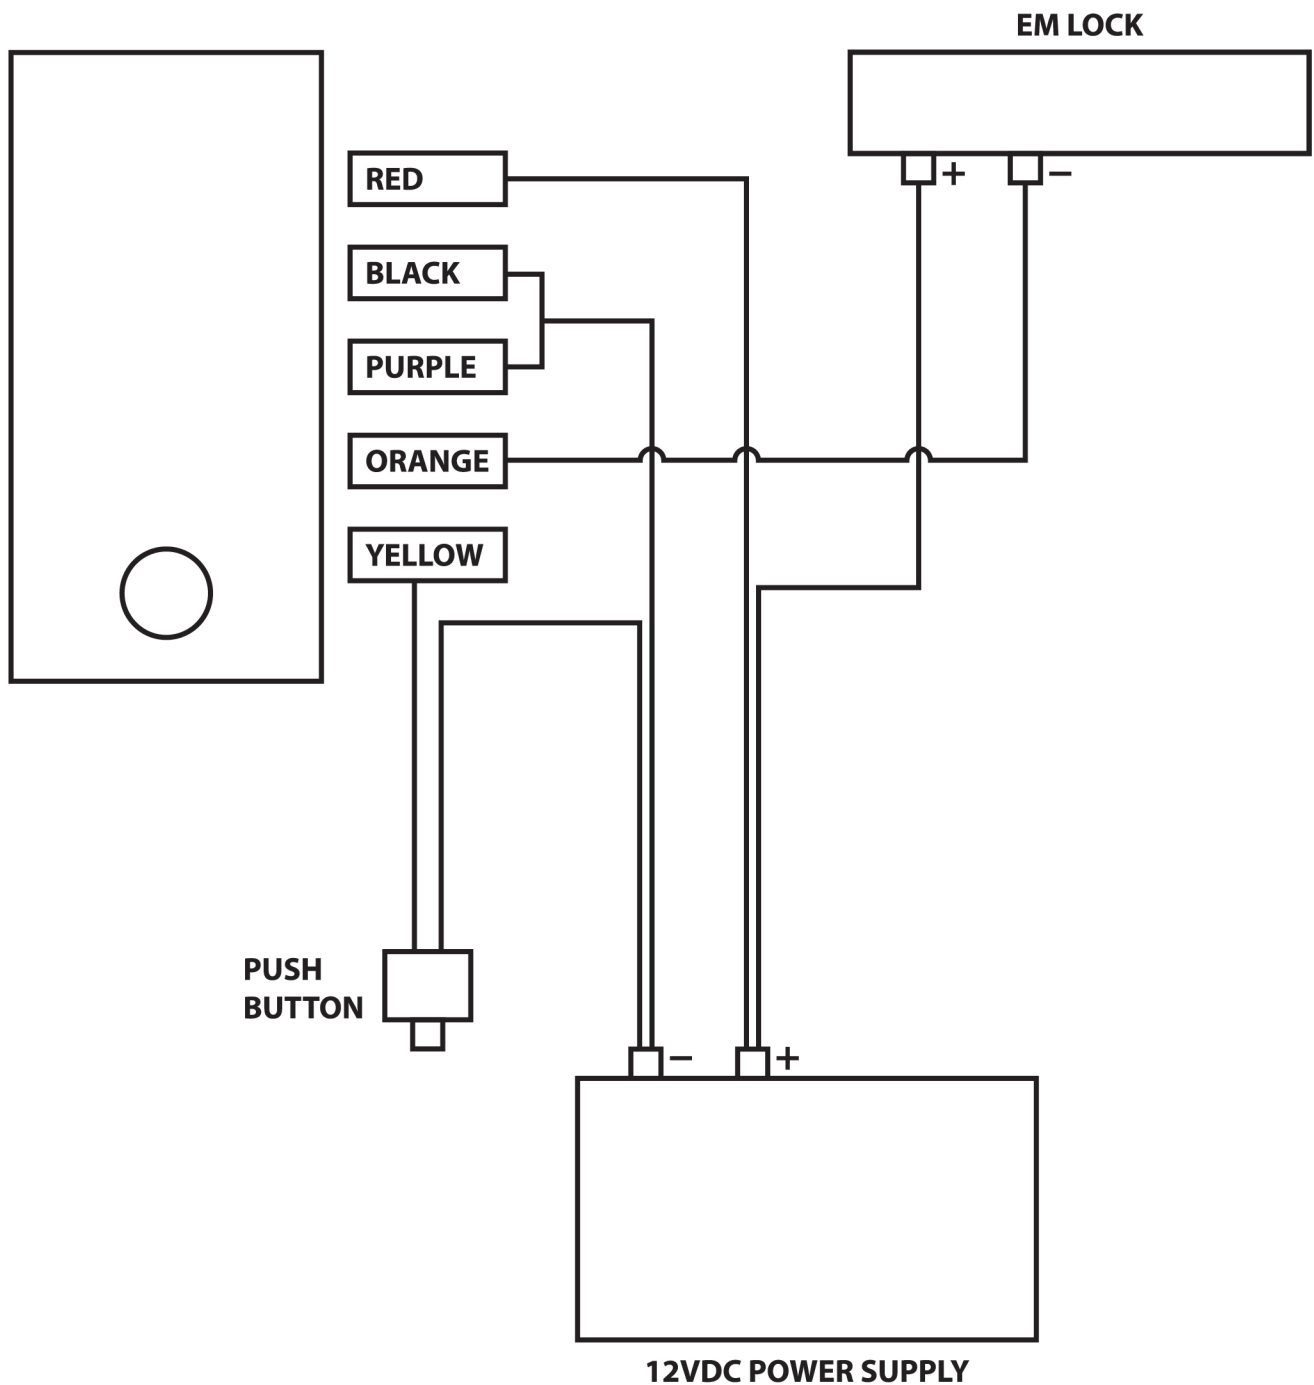

RESET MASTER CODE

Connect **YELLOW** wire with **GND (BLACK)**, LED will turn **GREEN**, OFF power.

ON power, disconnect **YELLOW** wire quickly when LED turns **YELLOW + ORANGE** and will heard 2X buzzer sound. Reset done.