

How To Setup Machine

Changing SYSTEM PASSWORD

Default PASSWORD is '12345'

#+[password current system 5 digit]+1+[Input new systems password 5 Digit]

Registering User/Member

Member with RFID+PASSWORD

#+[5 digit system password]+0+[4 digit user id]+RFID detect+[User 6 Digit user's password]+6

Member with RFID Only

#+[5 digit system password]+2+[4 digit user id]+RFID detect+6

Member with PASSWORD Only

#+[5 digit system password]+2+[4 digit user id]+[User 6 Digit user's password]+6

Deleting USER

Delete 1 user ID

#+[5 digit system password]+3+[user id]

Remove All User

#+[5 digit system password]+4

Duration of Opened Door

#+[5 digit system password]+5+[2 Digit duration in second]

How To Access (choose one)

1. Put RFID near the censor
2. Input Password
3. Put RFID near the censor following 6 digit Password

Howto RESET System PASSWORD (12345)

1. Power Off
2. Jumper S16 Pin 2+3
3. Power On (Alrm+all led flashing)
4. Power Off
5. Power On (Alarm+all led flashing)
6. Change Jumper S16 to Pin 1+2
7. Finished

Log out From System

[Login State]+6

--

