



Fire Exit Door Panel
(12Vdc will trigger when Fire Exit Door open and only will stop when key switch activated)