

# ***MX25D***

## ***DOOR ACCESS CONTROLLER***

### **User Manual**

(R1.0.0)

<h2><b>A GUIDE TO INSTALLATION AND OPERATION</b></h2>
---

### **MICRO ID SDN BHD**

#### **Programming Mode**

<b>Action</b>	<b>LCD Display</b>	<b>Note</b>
<ul style="list-style-type: none"><li>• Press Enter</li></ul>	"Programing Mode "	
<ul style="list-style-type: none"><li>• Press Enter</li></ul>	"Pin : "	
<ul style="list-style-type: none"><li>• Key Master Pin No.</li></ul>	"Pin : 1234 "	Default Pin 1234
<ul style="list-style-type: none"><li>• Press Enter</li></ul>	<ul style="list-style-type: none"><li>• "Card Menu "</li><li>• "Date &amp; Time "</li><li>• "Timer "</li><li>• "Holiday "</li><li>• "Time Zone "</li><li>• "Pin Setup "</li><li>• "Controller Setup "</li><li>• "Option "</li></ul>	To scroll , Press 0 or 8 than press Enter.

#### **Card Menu**

<b>Action</b>	<b>LCD Display</b>	<b>Note</b>
	"Card Menu "	
<ul style="list-style-type: none"><li>• Press Enter</li></ul>	<ul style="list-style-type: none"><li>• "Add Card "</li><li>• "Delete Card "</li><li>• "Add Card by Key "</li><li>• "Delete Card by K "</li></ul>	To scroll , Press 0 or 8 than press Enter.

## Time Zone

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Time Zone "	<b>Scroll till "Time Zone"</b>
• Press Enter	<ul style="list-style-type: none"> <li>"Access TZ "</li> <li>"Pin Disable TZ "</li> <li>"Lock Release TZ "</li> </ul>	To scroll , Press 0 or 8 than press Enter.

## Pin Setup

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Pin Setup "	<b>Scroll till "Pin Setup"</b>
• Press Enter	<ul style="list-style-type: none"> <li>"Pin Entry No "</li> <li>"Card+Pin Mode "</li> <li>"Change User Pin"</li> <li>"Set Master Pin "</li> </ul>	To scroll , Press 0 or 8 than press Enter.

## Controller Setup

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Controller Setup "	<b>Scroll till "Controller Setup"</b>
• Press Enter	<ul style="list-style-type: none"> <li>"Permanent Open "</li> <li>"Ena. Change Pin "</li> <li>"Lock Release TM"</li> <li>"Keypad Lock "</li> <li>"Antipassback "</li> <li>"Alarm TM "</li> </ul>	To scroll , Press 0 or 8 than press Enter.

#####

## Card Menu

### • Add Card

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press Enter	"Add Card "	
• Press Enter	"Time Zone : 09 "	
• Key in 01 to 09	"Time Zone : xx "	Time zone is between 01 to 08 Time zone <b>09</b> is <b>Free access</b>
• Press Enter	"..Install Card.."	
• Flash card	" "	<ul style="list-style-type: none"> <li>Short Blank screen</li> <li>Continue to flash if got more cards</li> </ul>

• **Delete Card**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press Enter	"Add Card "	
• Press 0 or 8	"Delete Card "	<b>Scroll till "Delete Card"</b>
• Press Enter	"...Delete Card... "	
• Flash Card		<ul style="list-style-type: none"> <li>• Short Blank screen</li> <li>• Continue to flash if got more cards</li> </ul>

• **Add Card By Key**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press Enter	"Add Card "	
• Press 0 or 8	"Add Card by Key "	<b>Scroll till "Add Card by Key"</b>
• Press Enter	"Time Zone : 09 "	
• Key in 01 to 09	"Time Zone : xx "	Time zone is between 01 to 08 Time zone <b>09</b> is <b>Free access</b>
• Press Enter	"Card : "	
• Key in 8 Digit Card No.	"Card : xxxxxxxx"	
• Press Enter	".. Install Card .."	Successfully installed

• **Delete Card By Key**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press Enter	"Add Card "	
• Press 0 or 8	"Delete Card by K "	<b>Scroll till "Delete Card by K"</b>
• Press Enter	"Card : "	
• Key in 8 Digit Card No.	"Card : xxxxxxxx"	
• Press Enter	".. Delete Card .."	Successfully installed

#####

## Time Zone

- **Access TZ**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Time Zone "	<b>Programing Mode</b>
• Press Enter	"Access TZ "	
• Press Enter	"TZ SET : 01 "	
• Key in (01 - 08)	"TZ SET : xx "	Time Zone 01 to 08
• Press Enter	"Sunday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Sunday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Monday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Monday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Tuesday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Tuesday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Wednesday: 00 "	<b>00 is no access</b>
• Key in (00 - 24)	" Wednesday: xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Thursday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Thursady : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Friday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Friday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Saturday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Saturday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Holiday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Holiday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	" .... Saving .... "	Successfully Saved

- **Pin Disable TZ**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Time Zone "	<b>Programing Mode</b>
• Press Enter	"Access TZ "	
• Press 0 or 8	"Pin Disable TZ "	
• Press Enter	"Sunday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Sunday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Monday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Monday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Tuesday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Tuesday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Wednesday: 00 "	<b>00 is no access</b>
• Key in (00 - 24)	" Wednesday: xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Thursday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Thursady : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Friday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Friday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Saturday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Saturday : xx "	<b>01 to 24 are the timers</b>

• Press Enter	"Holiday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Holiday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	" .... Saving .... "	Successfully Saved

• **Lock Release TZ**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Time Zone "	<b>Programing Mode</b>
• Press Enter	"Access TZ "	
• Press 0 or 8	"Lock Release TZ"	
• Press Enter	"Sunday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Sunday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Monday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Monday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Tuesday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Tuesday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Wednesday: 00 "	<b>00 is no access</b>
• Key in (00 - 24)	" Wednesday: xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Thursday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Thursady : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Friday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Friday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Saturday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Saturday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	"Holiday : 00 "	<b>00 is no access</b>
• Key in (00 - 24)	"Holiday : xx "	<b>01 to 24 are the timers</b>
• Press Enter	" .... Saving .... "	Successfully Saved

#####

**Date & Time**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Date & Time "	<b>Scroll till "Date &amp; Time"</b>
• Press Enter	"ddmmyy....xxxxxx"	ddmmyy = date/month/year
• key in ddmmyy		
• Press Enter	"hhmmss....xxxxxx"	hhmmss = hour/min/sec
• key in hhmmss		
• Press Enter	".... Saving ...."	Successfully Saved

#####

**Timer**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Timer "	<b>Scroll till "Timer"</b>

• Press Enter	"Timer SET : 01 "	24 timer
• key in timer (01-24)	"Timer SET : xx "	
• Press Enter	"S1:0000 E1:0000"	0000 means disable
• Key in start time 1 and end time 1	"S1:xxxx E1:xxxx"	S1:HHMM E1:hhmm S1:0001 E1:2359 (24hours)
• Press Enter	"S2:0000 E2:0000"	0000 means disable
• Key in start time 1 and end time 1	"S2:xxxx E2:xxxx"	S2:HHMM E2:hhmm
• Press Enter	".... Saving ...."	Successfully Saved

#####

### Holiday

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Holiday "	<b>Scroll till "Holiday"</b>
• Press Enter	"Holiday Set : 01"	20 holidays
• Key in (01 to 20)	"Holiday Set : xx"	
• Press Enter	"ddmmyy....000000"	000000 means empty date
• Key in date	"ddmmyy....xxxxxx"	ddmmyy = day/month/year
• Press Enter	".... Saving ...."	Successfully Saved
•		"HOLIDAY" will be displayed in LCD, if the date is been set for Holiday

#####

### Pin Setup

#### • Pin Entry No. (Common Pin)

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Pin Setup "	<b>Programing Mode</b>
• Press Enter	"Pin Entry No "	
• Press Enter	"Pin Set : 1 "	4 Common Pin
• Key in (1 to 4)	"Pin Set : x "	
• Press Enter	"Time Zone : 09"	Time zone is between 01 to 08 Time zone <b>09</b> is <b>Free access</b>
• Key in (01 to 09)	"Time Zone : xx"	
• Press Enter	"Pin No:000000"	000000 is empty
• key in 1 to 6 digit	"Pin No:xxxxxx"	
• Press Enter	".... Saving ...."	Successfully Saved

#### • Card+Pin Mode

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Pin Setup "	<b>Programing Mode</b>

• Press Enter	"Pin Entry No "	
• Press 0 or 8	"Card + Pin Mode "	<b>Scroll till "Card+Pin Mode"</b>
• Press Enter	"Pin Mode: OFF "	
• Select On or OFF		Press 0 or 8
• Press Enter	".... Saving ...."	Successfully Saved

• **Change User Pin**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Pin Setup "	<b>Programing Mode</b>
• Press Enter	"Pin Entry No "	
• Press 0 or 8	"Change User Pin "	<b>Scroll till " Change User Pin "</b>
• Press Enter	"... Flash Card ... "	
• Flash Existing Card	"New Pin : "	
• Key in 1 to 6 digit	"New Pin :xxxxxx"	Key in 0 for empty (No pin)
• Press Enter	" .... Saving .... "	Successfully Saved

• **Set Master Pin**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Pin Setup "	<b>Programing Mode</b>
• Press Enter	"Pin Entry No "	
• Press 0 or 8	"Set Master Pin "	<b>Scroll till "Set Master Pin"</b>
• Press Enter	"Master : 001234 "	Default Pin 1234
• Key in Pin 1 to 6 digit	" Master : xxxxxx "	
• Press Enter	" .... Saving .... "	Successfully Saved

#####

**Controller Setup**

• **Permanent Open**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Controller Setup "	<b>Programing Mode</b>
• Press Enter	"Permanent Open "	
• Press Enter	"PLR : OFF "	
• Press 0 or 8		Select On or OFF
• Press Enter	" .... Saving .... "	Successfully Saved

• **Enable Change Pin** (to allow user to change own pin)

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>

• Press 0 or 8	"Controller Setup "	<b>Programing Mode</b>
• Press Enter	"Permanent Open "	
• Press 0 or 8	"Ena. Change Pin "	<b>Scroll till "Ena. Change Pin"</b>
• Press Enter	"Change : OFF "	
• Press 0 or 8		Select On or OFF
• Press Enter	" .... Saving .... "	Successfully Saved

• **Lock Release Timer** ( EM lock release time )

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Controller Setup "	<b>Programing Mode</b>
• Press Enter	"Permanent Open "	
• Press 0 or 8	"Lock Release TM "	<b>Scroll till "Lock Release TM"</b>
• Press Enter	"Release Time : 05 "	Default time 05 sec
• key in sec		01 to 99 sec (1min39sec)
• Press Enter	" .... Saving .... "	Successfully Saved

• **Keypad Lock**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Controller Setup "	<b>Programing Mode</b>
• Press Enter	"Permanent Open "	
• Press 0 or 8	"Keypad Lock "	<b>Scroll till "Keypad Lock"</b>
• Press Enter	"Keypad IN : ON "	IN Reader or Reader 1
• Press 0 or 8		Select ON or OFF
• Press Enter	"Keypad OUT : ON"	OUT Reader or Reader 2
• Press 0 or 8		Select ON or OFF
• Press Enter	" .... Saving .... "	Successfully Saved

• **Antipassback**

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Controller Setup "	<b>Programing Mode</b>
• Press Enter	"Permanent Open "	
• Press 0 or 8	"Antipassback "	<b>Scroll till "Antipassback"</b>
• Press Enter	"Antipassback: OFF"	
• Select ON or OFF		Press 0 or 8
• Press Enter	" .... Saving .... "	Successfully Saved

• **Alarm TM** (Alarm timer or Door Sensor Alarm)

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Controller Setup "	<b>Programing Mode</b>



• Press Enter	"Permanent Open "	
• Press 0 or 8	"Alarm TM "	<b>Scroll till "Alarm TM"</b>
• Press Enter	"Alarm Time : 00 "	Default 00s ( Disable alarm)
• Key in (01 - 99)		<ul style="list-style-type: none"> <li>• 01 to 99 sec (1min39sec)</li> <li>• 00 sec Disable Alarm</li> </ul>
• Press Enter	" .... Saving .... "	Successfully Saved

#####

• **Read Card No.** (to read the 8Digit EMcard number)

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Option "	<b>Programing Mode</b>
• Press Enter	"Read Card No. "	
• Press Enter	"..... Flash Card ....."	<b>Flash Card</b> Once you flash card the LCD will Display "Card : 098,12345" *continue to flash if got more card to read

• **Restore** (restore back to factory settings)

Action	LCD Display	Note
	"Card Menu "	<b>Programing Mode</b>
• Press 0 or 8	"Option "	<b>Programing Mode</b>
• Press Enter	"Read Card No. "	
• Press 0 or 8	" Restore "	<b>Scroll to "Restore "</b>
• Press Enter	"You Sure : No "	
• Press 0 or 8	"You Sure : Yes "	<b>Scroll to select</b>
• Press Enter	"... Deleting ... "	<b>It will start deleting</b>
	"... Success ..."	<b>Once it completes Deleting LCD will Display</b>
	".... Reboot ...."	<b>When the system reboots LCD will Display</b>