

## Installation guide

### Shut-off ball valve

#### Type GBC 6s to GBC 79s

009R9518

##### Refrigerants:

R134a, R22/R407C, R404A/R507, R410A.

GBC 6s - GBC 25s can also be used for: R32

For other refrigerants, please contact Danfoss.

Applicable to all common non-flammable refrigerants, excluding R717 and to noncorrosive gases/liquids dependent on sealing material compatibility.

The design pressure shall not be less than the value outlined in Section 9.2 of ANSI/ASHRAE 15 for the refrigerant used in the system.

##### Temperature range:

GBC 6s - GBC 42s: -40 °C - 150 °C / -40 °F - 300 °F


GBC 54s - GBC 79s: -40 °C - 121 °C / -40 °F - 250 °F

##### Max. working pressure:

PS/MWP = 45 bar / 650 psig


009R9518

- 1 Remove cap and access cap (if present)

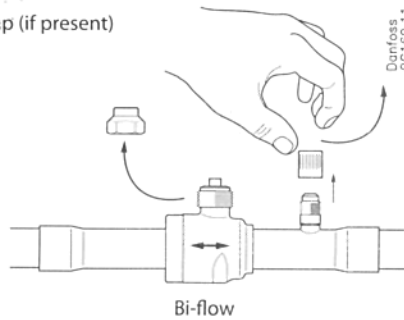

- 2 Opening valve

Danfoss  
9G162.13

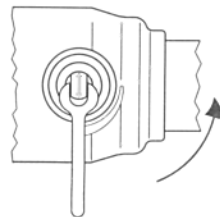

##### Max. Torque

Valve size	Nm	ft-lbs
6 - 22 s	7	5.2
25 - 28 s	17	12.6
32 - 35 s	20	14.8
38 - 54 s	34	25.2
67 - 79 s RP	34	25.2
67 - 79 s	60	44.2




OPEN position




CLOSED position

**3** Brazing

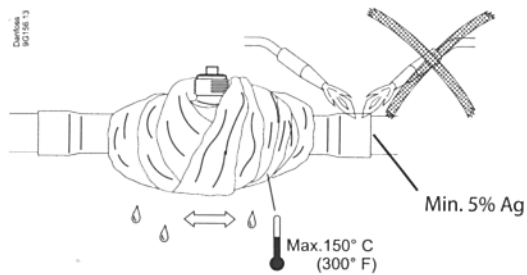


**4** Install Schrader valve and cap (if present)

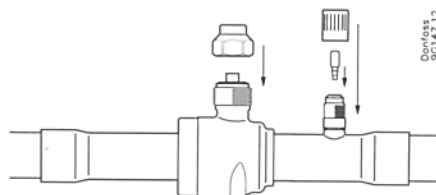

Install Schrader valve with approx. torque:  
0.3 Nm / 0.2 ft-lbs


**5** Tighten cap

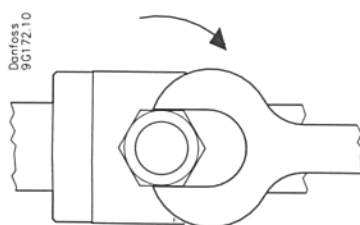

Tighten the cap with approx. torque

Max. Torque

Valve size	Nm	ft-lbs
6 - 22 s	15	11.0
25 - 35 s	20	14.8
42 - 79 s	32	23.6

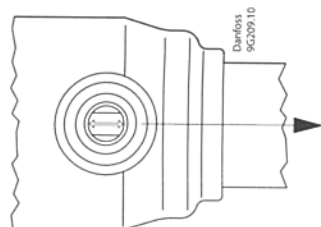

Fully closed

Fully open



Ball valve must always be in either FULLY OPEN or FULLY CLOSED position