



- Supply voltage 230 V AC
- 230 V AC output, thermal or 3-position actuator
- Built-in relays for a 3-speed fan, 230 V AC

RCF-230TD is a controller for controlling heating and/or cooling in a room. It is intended for control of thermal actuators or an actuator with 3-position function (increase-decrease), and also has a function for three-speed fan control (for fan-coil).

The controller has supply voltage 230 V AC. It has triac outputs for 230 V AC heating/cooling and built-in 230 V AC fan relays, which means that a separate relay module is not required for the fan and actuators.

#### Applications

The controller is suitable in buildings where you want optimal comfort and reduced energy consumption, for example offices, schools, shopping centres, airports, hotels and hospitals etc.

#### Design

The controller has a modern design, inspired by the award-winning design of Regin's Regio controllers.

#### Simple installation

The modular design with a separate bottom plate for wiring makes the controller easy to install and commission. The bottom plate can be put into place before the electronics are installed. Mounting is directly on the wall or on a wall socket.

# RCF-230TD

Room controller for fan-coil applications with outputs for two thermal or one 3-position actuator

RCF-230TD is a room controller intended to control heating and/or cooling in 2- or 4-pipe installations. Setpoint and fan speed are set using the buttons on the front.

- Backlit display
- Input for occupancy detector or window contact
- Input for automatic change-over cooling/heating

#### Control function

The controller controls heating and/or cooling in a room. Control parameters like P-band and I-time can be set in the parameter list via the display. The setpoint can be changed using the INCREASE (↗) and DECREASE (↘) buttons on the front.

See also the section "Display information and handling" on page 2.

#### Built-in or external sensor

The controller has a built-in sensor. Alternatively, the input for an external PT1000-sensor can be used.

#### Output function for thermal actuators

This function is activated on delivery. When using thermal actuators, the controller works with time-proportional output, which gives continuous setting of the opening position for the valve. Actuators which can be used are RTAM-230 or RTAOM-230 from Regin together with a suitable valve. Using thermal actuators, the controller can control heating and cooling in sequence with one actuator for heating and one for cooling.


#### Output function for 3-position actuators

This function can be configured to be used instead of the above factory setting, in the parameter list via the display. When using an actuator with 3-position function, RCF-230TD will control it using an increase-decrease signal, in order to achieve continuous opening of the valve that varies with the temperature requirement. For optimal function, the correct running time for the actuator should be set in the controller (factory setting = 120 s). An actuator with 3-position function can only be used in 2-pipe systems or when only controlling a cooling or a heating valve.


## 2- and 4-pipe installations

In 2-pipe installations, the same water system is used for heating and cooling, depending on the season. Chilled water is distributed in the system during summer and heated water during winter.

When RCF-230TD is configured for a 2-pipe system, output DO4 is used with two thermal actuators for controlling heating or cooling (depending on the season (fluid temperature)) via an actuator, a valve or similar (change-over function). When using an actuator with 3-position function, the actuator is connected to DO4 and DO5 for increase-decrease function.

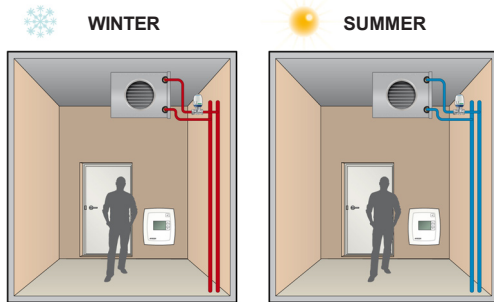

In 4-pipe installations, there are two separate water systems for heating and cooling with separate valves. The controller uses two outputs for control of heating and cooling in sequence with two thermal actuators.

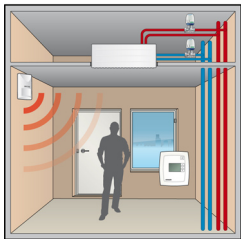

### Automatic change-over cooling/heating (so-called change-over function)

RCF-230TD has an input for change-over which is used when the controller is configured for 2-pipe installations. It sets output DO4 to operate with heating or cooling function depending on the fluid temperature (season).

The change-over input can be connected to a potential-free relay contact or a PT1000-sensor.

The input function for the relay contact can be set to normally open (NO) or normally closed (NC). If the change-over input is not used, we recommend that it is left disconnected and set to NO (factory setting).

When using a sensor, it must be mounted so that it can measure the temperature on the supply pipe to the coil. To ensure satisfactory function, the system must also have continuous primary circuit circulation. Using a sensor, the output function is set to heating when the fluid temperature exceeds 28°C and to cooling when the temperature falls below 16°C.

At heating function "HEAT" is shown in the display and at cooling function "COOL" is shown.

## Occupancy detection for saving energy


By connecting an occupancy detector or a keycard switch (in hotels) to a digital input, it is possible to change between Comfort and Economy mode. This way you can control the temperature according to requirement, which saves energy and keeps the temperature at a comfortable level.

Using occupancy detection, it is possible to delay activation and/or inactivation of Comfort mode, to avoid switching mode if a person temporarily enters or leaves the room.

Alternatively, a window contact can be connected to the input. This sets the thermostat to Off if a window is open with the purpose of minimising energy consumption.


## Operating mode

There are four different operating modes, Comfort, Economy (Standby), Off and Window. Switch-over between these modes is performed locally.

**Comfort:**  is shown in the display and the room is in use. The temperature is held at the comfort level with a smaller neutral zone (NZC) between activation of heating and cooling (factory setting for NZC = 2 K (°C)).

**Economy (Standby):** "Standby" is shown in display. The room is in energy save mode and is not used at the moment. This can for example be during nights, weekends, evenings etc. or during daytime when there is no one in the room. The controller is prepared to change operating mode to Comfort if someone enters the room. The neutral zone (NZE) between activation of heating and cooling is larger which saves energy.

**Off:** "Off" is shown in the display and the backlight is switched off. The controller does not heat or cool and the fan is inactive, unless mould protection function has been configured, in which case the fan will continue to run. There is also a frost protection function for this operating mode, which will activate the heating output if the room temperature falls below +8°C. Off mode is selected by pressing the On/Off button.

**Window:**  is shown in the display. The controller is in Off mode but the display is lit.

## Automatic fan speed control

The current fan speed is shown in the display and can be set manually to Low, Medium or High speed. It can also be set to Auto, which means that the fan speed is controlled by the heating and/or cooling demand, depending on the configuration.

The fan speed is set to Low → Medium → High → Auto by pressing the fan button.

The factory setting in the Auto position is that the fan speed is controlled at both heating and cooling demand. The first step starts when the output signal from the controller internally exceeds 20 %. The second step starts at 60 % and the third at 100 %. When the fan speed decreases, each fan step has a hysteresis of 5 % for changing over to the next step. For example, the fan will change from the third to the second step when the output signal falls below 95 %.

The values of the fan start points, the hysteresis and the choice of control based on the heating and/or cooling demand can be changed in the parameter list via the display. The number of fan steps can also be changed if the fan has less than three steps.

When there is no heating or cooling demand in the Auto position, the fan is stopped. The fan is also inactive in the Off and Window modes. However, it will continue to run if mould protection has been configured.

### Mould protection


When this function has been configured, the fan will always run at the lowest speed and circulate air in the room to minimise the risk of mould growth in the fan-coil unit. The function is deactivated on delivery.

### Automatic exercise of valves


The controller has a function for exercising the valves, even during periods when they are not being used, to ensure proper function. Every 23 hours (factory setting), the output is overridden to close for a moment in order to open and close the valves. The exercise interval can be set individually for heating and cooling. The exercise function can also be inactivated if desired.

### Display information and handling

The display has the following indications:

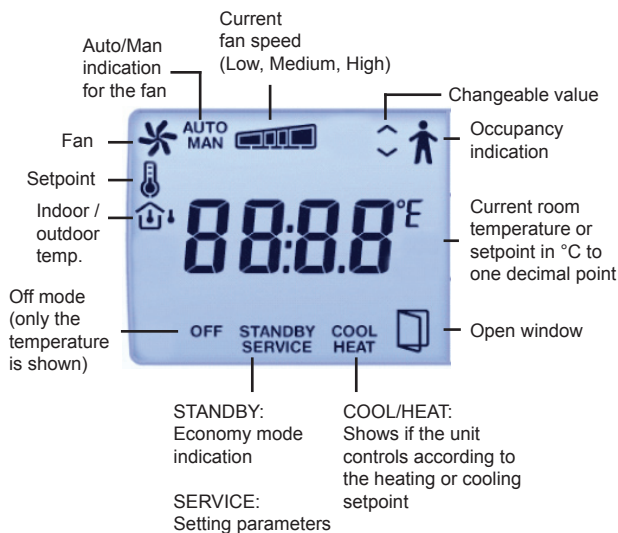

The display is handled using the buttons on the controller:

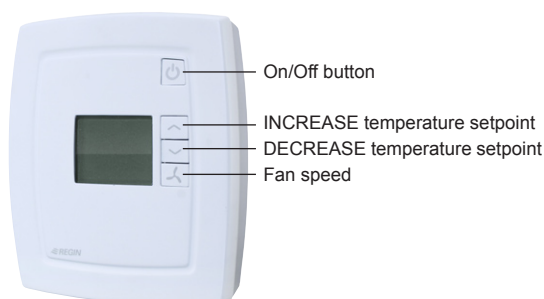

### On/Off button

By pressing the On/Off button, RCF-230TD will switch between Off mode and Comfort/Economy mode.

### Setpoint buttons

The INCREASE and DECREASE buttons are used for changing the setpoint value. What is shown in the display can be configured via the parameter list. There are four alternatives:

1. The actual value is shown, or, when the setpoint has been changed via the INCREASE and DECREASE buttons, the setpoint value is shown in the display (together with the setpoint (thermometer) symbol).
2. The actual value is shown, or, when the setpoint has been changed via the INCREASE and DECREASE buttons, the setpoint adjustment value is shown in the display (together with the setpoint (thermometer) symbol).
3. The setpoint value is shown (factory setting).
4. The setpoint adjustment is shown.

When the setpoint adjustment is displayed (alternatives 2 and 4), the basic setpoint is 22°C.

The minimum limitation of the setpoint value is settable 5...22°C and the maximum limitation is settable 22...35°C.

### Fan button

By pressing the fan button, you set the fan speed to Low, Medium, High and Auto.

### Configuration via the parameter list

The factory settings are changed in the parameter list shown in the display using the buttons on the controller.

The parameter values are changed with the INCREASE and DECREASE buttons and changes are confirmed with the On/Off button.

The parameter list can be found in the instruction for RCF-230TD.


### Control principles

#### Control principle at cooling function, 2-pipe installations

At Comfort mode, the output starts to increase when the temperature rises above the setpoint value.

At Economy mode (Standby), the value for activation of the output is increased by the set NZE value divided by two.

**Example:** The factory setting for NZE is 8 K. This means that the temperature for activation of cooling is 4 degrees higher at Economy mode than at Comfort mode. See the figure below.

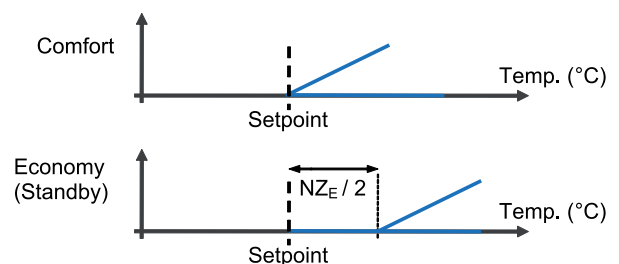


### Control principle at heating function, 2-pipe installations

At Comfort mode, the output starts to increase when the temperature falls below the setpoint value.

At Economy mode (Standby), the value for activation of the output is decreased by the set NZE value divided by two.

**Example:** The factory setting for NZE is 8 K. This means that the temperature for activation of heating is 4 degrees lower at Economy mode than at Comfort mode. See the figure below.

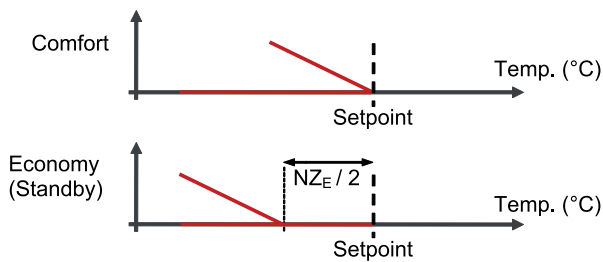


### Control principle at 4-pipe installations

At Comfort mode, neither heating nor cooling is used when the temperature is in the neutral zone, in order to minimise the energy consumption. The heating output is activated when the temperature falls below the set value for the neutral zone. The cooling output is activated when the temperature exceeds the set value for the neutral zone. The neutral zone is divided into two equal parts with one part below and one part above the setpoint. See the figure below. The factory setting for NZC is 2 K.

At Economy mode (Standby), the neutral zone is increased to reduce the energy consumption. The value is the setting for NZE.

**Example:** The factory setting for NZE is 8 K. This means that the temperature for activation of heating at Economy mode is 4 degrees lower than the setpoint. In this operating mode, cooling is activated when the temperature is 4 degrees higher than the setpoint. See the figure below.

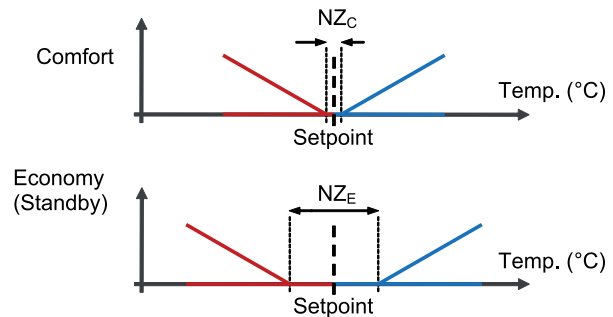

The above schematic drawings of the control principle show the corresponding requirement of the controller function. This requirement is recalculated by the controller to a value for the actuator output, depending on the selected output function.

**Technical data**

Supply voltage	230 V AC $\pm$ 10 %, 50/60 Hz
Power consumption	3 W, class II construction
Ambient temperature	0...50°C
Storage temperature	-20...+70°C
Ambient humidity	Max. 90 % RH
Protection class	IP20
Pollution degree	2
Overvoltage category	3
Display	LCD with backlight
Built-in temperature sensor	NTC type, measuring range 0...50°C
Terminal blocks	Lift type for maximum cable area 2.1 mm <sup>2</sup>
Material, casing	Polycarbonate, PC
Colour	
Cover	Polar white RAL9010
Bottom plate	Light gray
Mounting	Indoor, wall mounting, fits on a standard wall socket
Dimensions (HxWxD)	120 x 102 x 29 mm
Weight	0.18 kg



This product conforms to the EMC and LVD requirements in the European harmonised standards EN 60730-1:2000 and EN 60730-2-9:2002 and carries the CE mark.

**Inputs**

External sensor, AI1	PT1000-sensor. Suitable sensors are TG-R5/PT1000, TG-UH/PT1000 and TG-A1/PT1000 from Regin. The setpoint range is 5...35°C.
Change-over, UI1	Potential-free contact or PT1000-sensor. A suitable sensor is TG-A1/PT1000 from Regin.
Occupancy/window contact, DII	Potential-free contact. A suitable occupancy detector is IR24-P from Regin.

**Outputs**

Fan control, DO1, 2, 3	3 outputs for speed I, II and III, 230 V AC, max. 3 A fan-coil
Valve, DO4, DO5	2 outputs, 230 V AC, 300 mA max. (20 A max. 20 ms)


**Settings**

		Factory setting (FS)
Setpoint	5...35°C	22°C
Setpoint, min. limit	5...22°C	22°C
Setpoint, max. limit	22...35°C	22°C
Internal sensor calibration	-10 K...10 K	0 K
External sensor calibration	-10 K...10 K	0 K
Hysteresis	0.5...50 K	1 K
NZC, neutral zone at Comfort	0.1...10 K	2 K
NZE, neutral zone at Economy	0.1...10 K	8 K
Installation type	2- or 4-pipe	2-pipe
Input DII	Normally open (NO) or normally closed (NC)	NO
Input UI1	NO or NC, when used as a relay contact input	NO
Output DO4	NO or NC	NC
Output DO5	NO or NC	NC
Valve exercise	Individually settable for heating and cooling outputs	23 hours interval

## Wiring

10	L	230 V AC Line	Supply voltage
11	NC	Not connected	
12	N	230 V AC Neutral	Power supply (internally connected to terminal 13)
13	N	Fan-coil common / 230 V AC Neutral	Common fan-coil connector (internally connected to terminal 12)
20	DO1	Fan-coil output 1 for fan control	Relay, 230 V AC*, 3 A
21	DO2	Fan-coil output 2 for fan control	Relay, 230 V AC*, 3 A
22	DO3	Fan-coil output 3 for fan control	Relay, 230 V AC*, 3 A
30	NC	Not connected	
31	DO4	Digital output 4 for heating/cooling or opening with 3-point actuator	Digital output. 230 V AC, max. 300 mA. Max. 2 A during 20 ms.
32	CDO45	Common DO4 & 5	Common connection for digital outputs 4 and 5
33	DO5	Digital output 5 for cooling or closing with 3-point actuator	Digital output. 230 V AC, max. 300 mA. Max. 2 A during 20 ms.
40	DI	Digital input	Floating (potential-free) window contact or occupancy contact. Configurable for NO/NC.
41	0 V	Analogue ground	
42	AI	Analogue input	External PT1000 instead of the internal NTC
43	UI	Universal input	Change-over input. Potential-free switch (configurable for NO/NC) or PT1000.
44	0 V	Analogue ground	
50-52	NC	Not connected	
53-54	NC	Reserved for future use	

\*The sum of the current through DO1-DO3 is protected by a fuse

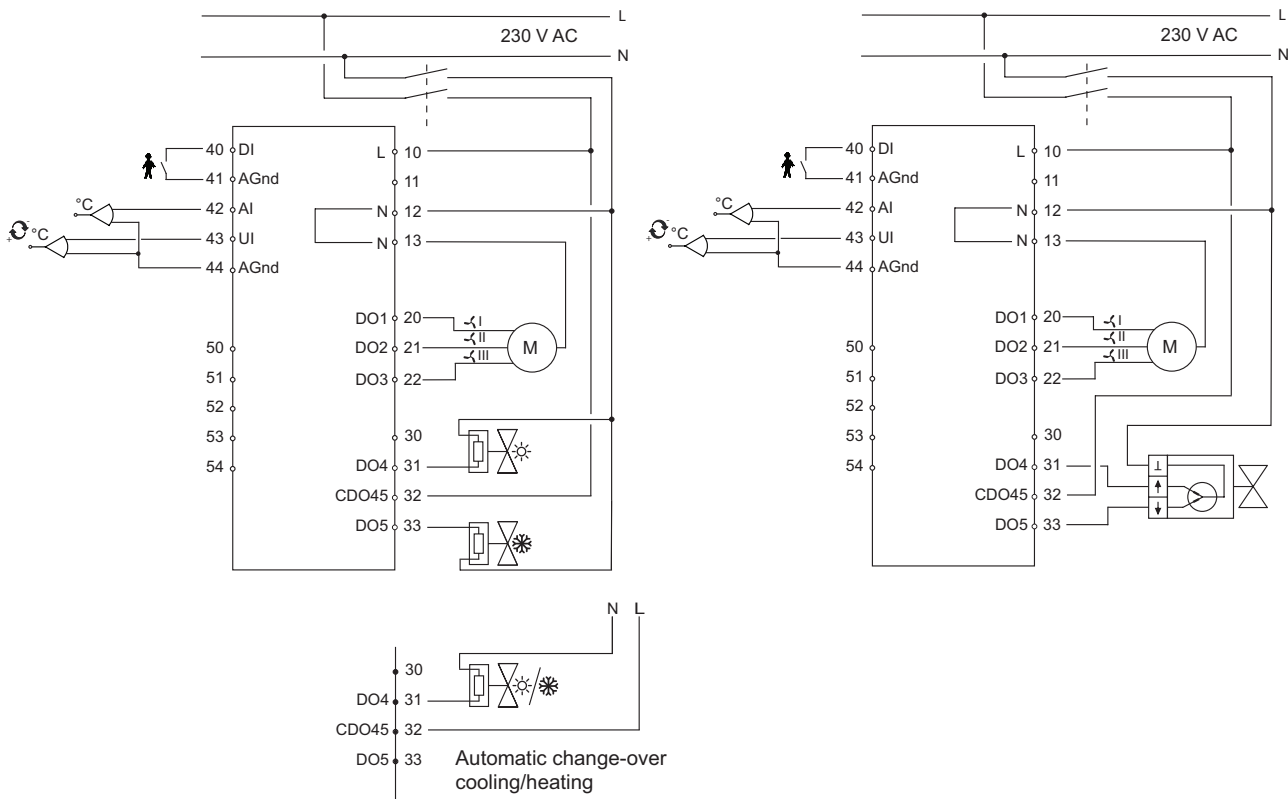

## Dimensions



## Product documentation

Document	Type
RCF-230TD_inst_en_sv	Instruction for RCF-230TD

The product documentation is available for download from Regin's homepage, [www.regin.se](http://www.regin.se).

**Head Office Sweden**  
 Phone: +46 31 720 02 00  
 Web: [www.regin.se](http://www.regin.se)  
 Mail: [info@regin.se](mailto:info@regin.se)

**Sales Offices**  
 France: +33 14 171 46 46  
 Germany: +49 30 77 99 40  
 Spain: +34 91 473 27 65  
 Hong Kong: +852 24 07 02 81  
 Singapore: +65 67 47 82 33