Remote Control Setting: Blinds Non-WiFi

Up Button
Stop Button
Down Button
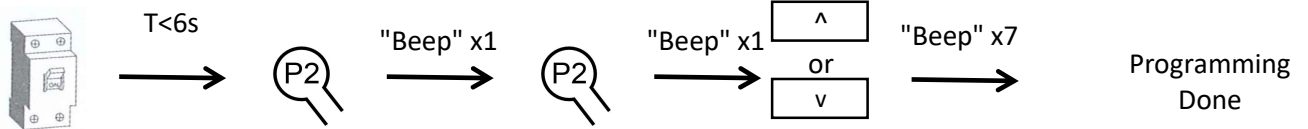
Setting Button (P2)

Front   **Back**
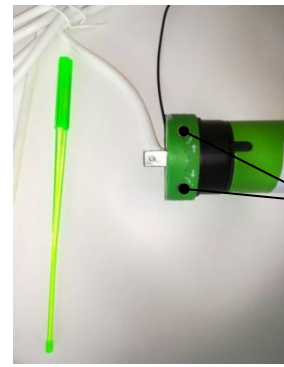
To adjust up limit & down limit of motor

---

1) Programming, Based on The Direction of Rotation

T<6s → (P2) "Beep" x1 → (P2) "Beep" x1 → [∧ or ∨] "Beep" x7 → Programming Done

"Beep" x1 Power On   Press 1 sec   Press 1 sec   *Press 1 sec
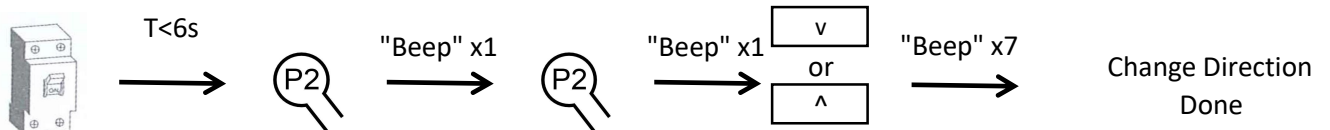
Note:

a) Once power on, long "beep" & motor will be in programming status, please finish the above steps within 6 sec

*For normal roll, press "Up" if motor at Right ; Press "Down" if motor at Left

---

## 2) Change Direction of Rotation

T<6s → (P2) "Beep" x1 → (P2) "Beep" x1 → [∨ or ∧] "Beep" x7 → Change Direction Done

"Beep" x1 Power On   Press 1 sec   Press 1 sec   Press 1 sec

Note: Power off before reset and change the direction of rotation

---

3) Add Extra Remote Control

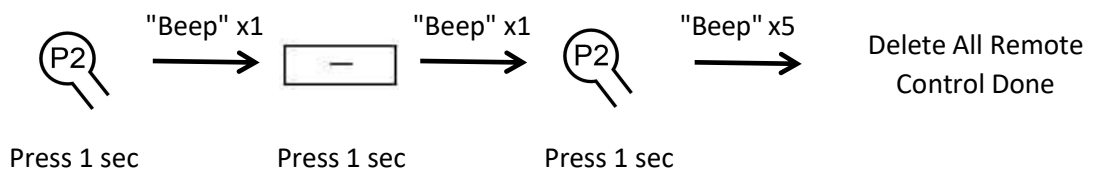(P2)A "Beep" x1 → (P2)A "Beep" x1 → (P2)B "Beep" x5 → Add Remote Control Done

Press 1 sec   Press 1 sec   Press 1 sec

Note: A is existing programmed remote control, B is new remote control that need to be added
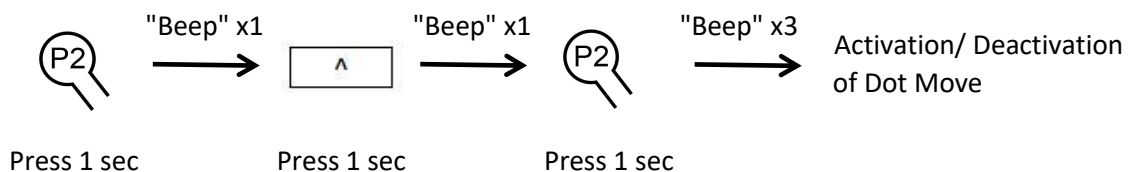
---

4) Delete All Remote Control

(P2) "Beep" x1 → [—] "Beep" x1 → (P2) "Beep" x5 → Delete All Remote Control Done

Press 1 sec   Press 1 sec   Press 1 sec

---

5) Dot Move

(P2) "Beep" x1 → [∧] "Beep" x1 → (P2) "Beep" x3 → Activation/ Deactivation of Dot Move

Press 1 sec   Press 1 sec   Press 1 sec