

CULMI AIR-COND & REFRIGERATION PARTS SUPPLY SDN BHD

Date : 27-3-2012

Release Of Nitrogen and To Perform Vacuuming For Refrigerant Recovery Tank



Step 1:

- 1) To open up Vapor (Blue) and Liquid (Red) valves on the Recovery Tank and let the nitrogen free flow until the flowing sound is disappeared.
- 2) Close the Liquid (Red) valve and the Vapor (Blue) valve remain open position.


Prepared by,
Beh (CULMI)



Step 2:

- 1) To connect the Manifold Set and Vacuum Pump in accordance to the illustration and perform the vacuuming until the Manifold Set Blue (Low Side) gauge shows -30 H.g

Any Manifold Set

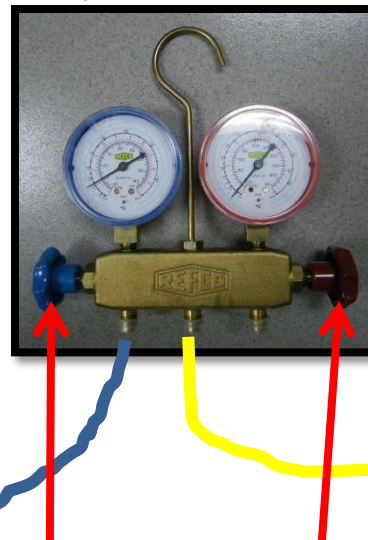

Open

Close

Any Vacuum Pump Of 5 CFM and above



Note:

For removing of oil use M2 Methylene Chloride