


1. Valve body installation:


Use two M2.5 X 19 screws to mount the valve by 0.4~0.45N.

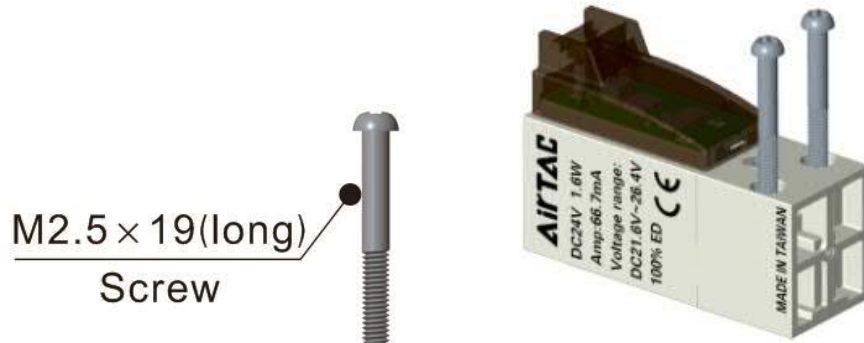

2. Wiring instruction:

Vertical and horizontal insertion share the same terminal port for different practical applications.

Note: There is no polarity for terminal wire.

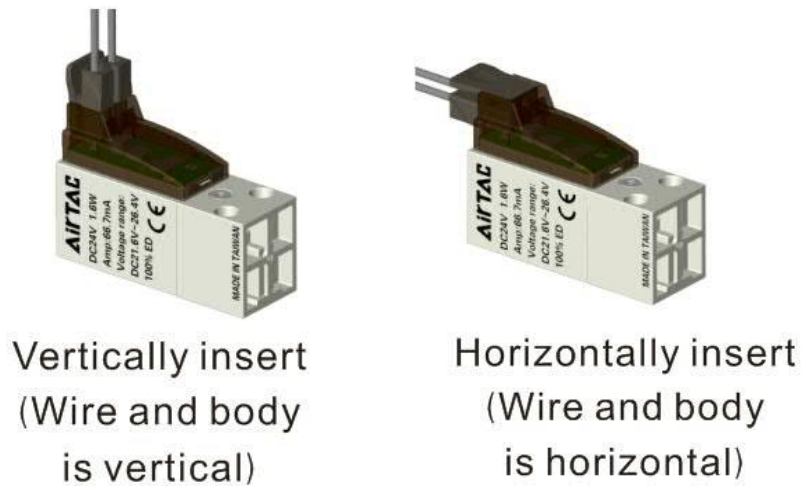

3. AC coil is forbidden to connect with other devices.