



# **BioMonitor**

**BOD-ANALYSIS** 

The online short-time measurement of BOD and ASR. Monitoring biological treatment processes.

Fast. Simple. Accurate.



# MONITORING BIOLOGICAL TREATMENT PROCESSES.

The efficient and economical control of the aeration systems can only be ensured by determining the total BOD.



As our populations and industries grow there is an increasing demand for more effective monitoring and treatment of waste water. Understanding the test methods available is the first step for maintaining the most economical and efficient waste treatment process.

#### In brief: The history of the BOD.

Already in the middle of the 19th century the importance of waste water analysis as such rose – especially, as the usability of sewage as fertilizer has been recognized. The interrelationships between the ability of putrefaction of organic matter and oxygen demand as well oxidation potential of sewage followed. In the1920ies, in order to find a measure for organic pollution the parameter Biochemical Oxygen Demand BOD<sub>5</sub> was defined.

Until the 1970ies this  $\mathrm{BOD}_5$  remained unchanged, measuring the oxygen needed for the degradation of carbon and nitrogen compounds. Then merely the addition of the nitrification inhibitor was complemented. The nitrification process is the degradation of nitrogen compounds by micro organisms. Thus, finally the measurement results in the long-desired carbonaceous BOD (cBOD).

#### Importance of monitoring treatment processes.

Generally, the aim of the monitoring is the economical control of the treatment processes including aeration, activated sludge concentration and gradual inlet of incoming load peaks in order to reach the optimal treatment performance.

Nowadays, the  $\mathsf{BOD}_5$  is commonly used as a gauge of the effectiveness of sewage treatment.

Rapid monitoring of BOD is of great importance for the effectivness of biological treatment processes.

As increasing and fluctuating waste water volumes as well as unforeseen load concentrations may for example disturb biological degradation in a way that the treatment performance is significantly reduced, three questions arise:

- How much is the sludge able to decompose?
- · How high is the oxygen demand for this?
- How can an effective and efficient treatment be achieved?

#### Common BOD method and its limitations.

With the  $\mathrm{BOD}_5$  measurement, in the first step the water sample is diluted with high oxygen water in order to ensure that there is enough oxygen. Then, for five days, the sample is incubated at 20°C (68°F) in the dark. The decomposition of nitrogen compounds is suppressed by adding allylthiourea (ATU).

The conditions of the  $\mathrm{BOD}_5$  measurement are internationally standardized and the method is commonly used at laboratories. Due to its long duration, the timely control and monitoring of waste water is hardly realizable. Additionally, once a toxin appears, the whole measurement system may be impaired making the complete replacement of the test organisms necessary.

As a consequence, the method is not suitable for continuous online monitoring.

#### **Total BOD and Sludge Activity.**

The total BOD is the sum of cBOD and the oxygen demand of the nitrification. As the nitrification is an important part of the biological sewage treatment, it has to be provided with sufficient oxygen in the aeration tank. Its monitoring cannot be neglected.

Hence, the efficient and economical control of the aeration systems can only be ensured by determining the oxygen demand for the nitrification as well - that is by monitoring the total BOD.

The sludge activity indicates the degradation potential of the plant's activated sludge. It can be disturbed significantly resulting in an insufficient treatment performance. Thus, its monitoring is essential for the effective treatment of waste water.

#### BioMonitor: The short-time measurement method.

The BioMonitor helps operators to maintain maximum performance of their treatment processes with an automated, online method that provides the most useful data as quickly as possible. Using the plant's own activated sludge it delivers direct information on the treatment processes.

Its design allows the reproduction of the processes within the sewage plant, guaranteeing the direct applicability of the gained results on the waste water treatment plant's real process stages.

BioMonitor is the online respirometer that most closely reproduces the biological treatment processes. On the following pages, you will learn more about the many advantages of the BioMonitor and its simple operation.

#### AT A GLANCE

- Monitoring of BOD and Sludge Activity allows to maintain a maximum treatment performance.
- BOD<sub>5</sub> refers to the carbonaceous BOD (cBOD) and indicates the degradation of organic carbon compounds only.
- The degradation of nitrogen compounds (nitrification) is an important treatment process and has to be monitored as well.
- BioMonitor reproduces most closely the treatment processes and delivers results within minutes.

The short-time monitoring of BOD and Sludge Activity (ASR).

#### BioMonitor warns you in good time.

The analyser detects even rapid changes in oxygen demand and with a response time of 3 - 4 minutes it warns you very fast. BioMonitor measures the total BOD including the oxygen demand for the nitrification as well as the activated sludge respiration (ASR) in order to monitor the sludge activity.

The results allow a most consistent correlation (r > 0.95) to the standard methods for  $BOD_5$  (DIN 38409-H51, APHA-AWWA-WPCF 5210 B, EPA).

# The short-time monitoring of the degradation processes at WWTP.

With the BioMonitor the biological degradation processes take place at conditions quite similar to those of the waste water treatment plant. The measured oxygen consumption delivers direct information for the oxygen demand of the plant's activated sludge. By optionally adding the nitrification inhibitor it may measure the BOD<sub>5</sub>. However, as the BioMonitor determines the total BOD, it monitors the complete treatment processes.

With BioMonitor, the electrics are isolated from the analysis area.

All areas are easily accessible.



#### Multi-Step-Respiration measurement.

Compared to systems with just one reaction vessel the BioMonitor is a flexible 2-stream respirometer with a fast degradation. With the multi-step construction even hard degradable substances are decomposed without any extra dilution - exactly like in the original treatment plant. The benefit of this unique measuring principle is the precise and fully continuous determination of the BOD in 3 - 4 minutes.


#### Simultaneous measurement of ASR and BOD.

The measurement of the activated sludge respiration (ASR) ensures not only the exact calculation of the BOD. The ASR provides also important information on the condition of the plant's own biomass (activated sludge) which is especially of importance for controlling and supervision. For Example: If the ASR is falling slowly, it may be an indication of a slow but definite poisoning of the activated sludge by toxic substances.

# With its sensitive touch screen BioMonitor responds to your needs.

The BioMonitor is equipped with a 10.4" touch screen display that allows clear graphical surveys of measured values. All graphics and results may be printed out through the printer interface. Of course, they can also be transferred to a PC. Moreover, the preparation for teleprocessing and remote control is optionally available



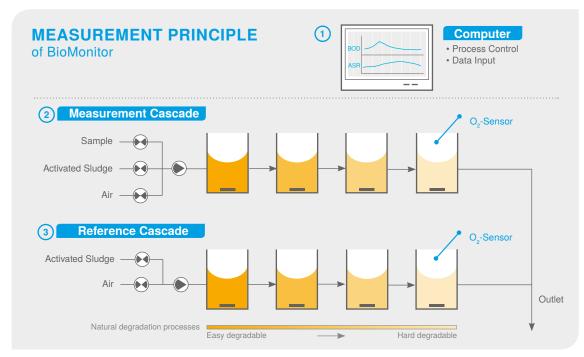

#### Fig. 1

- Process control, measurement results display, interface diagram of periphery analysers
- The aerated mixture of activated sludge and sample is pumped through the four reactors.
  - The O<sub>2</sub>-sensor determines the oxygen consumed during decomposition.
- 3) The activated sludge is aerated and its respiration is determined (ASR).

#### THE PRINCIPLE.

The miniature WWTP.

#### Imitating the natural processes of a WWTP.

BioMonitor's measurement principle ( $\nearrow$  Fig. 1) allows the reproduction of the processes within the sewage plant. The activated sludge, either supplied directly from the plant or circulating with the sludge recycling system, degrades the substances present in the waste water. The oxygen required for this process is measured by a  $O_2$ -sensor. This process takes place in the measurement cascade which works exactly like an aeration tank.

#### 2 reactor cascades. 4-Step degradation.

The two reactor cascades -measurement cascade and reference cascade - with four reactors each, ensure the extensive decomposition of the organic load as well as the monitoring of the activated sludge respiration (ASR). Both cascades are maintained by predefined conditions ensuring high reproducibility.

#### Imitating the natural degradation processes.

The four reactors allow the imitation of the natural degradation processes, whereby the easily de-

gradable substances are decomposed first. The increasingly difficult to decompose substances will be gradually converted within the following reactors. At the end of the fourth reactor the degradation rate allows to draw conclusions about the biodegradability of the activated sludge.

#### **Detecting the oxygen consumption.**

Within the measurement cascade both the activated sludge and the sample are aerated continuously. Simultaneously, within the reference cascade only the activated sludge is aerated. At the last reactor of each cascade the oxygen consumption is detected during the gas phase by use of  $\rm O_2$ -sensors with exceptionally wide measurement ranges. In addition, having no contact to the waste water these sensors are maintenance-free.

#### The results.

The measurement cascade delivers the total biochemical oxygen consumption (mg/l) and the reference cascade delivers the activated sludge respiration (ASR in mg/l/min). Subtracting the result of the total biochemical oxygen consumption from the ASR, the oxygen consumed for the biological degradation of the ingredients is determined. This measurement parameter is called Biological Oxygen Consumption (BOC in mg/l).

## **BioMonitor** AN OVERVIEW

#### Online BOD analyser for the optimization of the biological waste water treatment.

BioMonitor simultaneously measures BOD and ASR. Thus, it helps to optimize the treatment processes waste water treatment plants. It can be operated with the plants own activated sludge and depending on the application delivers results within 3 - 4 minutes.



Highly sensitive bacteria in a robust analyser.

#### **ADVANTAGES AND FEATURES**

- ✓ short-time monitoring of total BOD and Sludge Activity (ASR)
- √ minimum response time 3 4 minutes
- ✓ original Activated Sludge for direct WWTP reference
- ✓ fast and effective monitoring for the efficient process control
- ✓ high reproducibility
- ✓ low operational costs and maintenance efforts
- ✓ excellent correlation to common BOD<sub>5</sub>
   if required

### TECHNICAL DATA

#### **Measurement Technique and Sample Preparation**

Measurement Method	Continuous 2-Stream respiration measurement
Bacteria Culture	Original Activated Sludge
Measurement Range	BOD: 1 - 50 mg/l, 1 - 200,000 mg/l ASR: 0 - 5 mg/l/min
Response Time	min. 3 - 4 minutes (application dependent)
Accessories	<ul><li>Maintenance-free particle separator</li><li>Sludge recycling unit</li></ul>

#### **Dimensions and Weight**

Housing	IP 54
Dimensions	W 600 x H 862/ 962 x D 558 mm
Weight	70 kg approx.

#### **Electric and Hydraulic Specifications**

Inflow and Outflow	30 mm ID tube or threaded, 32 mm OD or as specified
Power Supply	230 / 115 V~, 50 / 60 Hz, 100 VA
Analogue Output	0/4-20 mA
Serial Interface	RS 232, Combined alarms, Life-Zero, USB 2.0
Remote Control	Through TCP/IP Protocol (Internet)

#### **Equipment Devices and Data Output**

High resolution and back-lit TFT touch screen graphic display, 10,4"

Autostart function

Self-explanatory software and service checklist

Standard data interfaces, e. g. office PC

## ALL cleAR?

LAR Process Analysers AG: Water is our Element. We do everything for its protection.

We are one of the leading manufacturers of water analysers in industrial and communal waste water technology, process monitoring, as well as in pure water analysis. Further products in the areas of industrial processing and environmental technology complete our range.

#### Unique and state of the art. LAR's Ultra High Temperature Method goes up to 1,200°C!

The LAR Process Analysers AG, formed in 1986, gained prominence through their TOC and COD analysers. LAR is the only company worldwide that, using a high temperature method of 1,200°C, can completely oxidise a sample to accurately determine sum parameters. Particularly when measuring the TRUE TOC with differing of concentrations.

#### LAR is only satisfied once the customer is.

We offer application specific analysers developed by our own research and development team. Additionally, we maintain close contact with our clients and continually analyse the exact problem areas of every application. Because the availability of our machines is a deciding criteria, they are constructed in a very user-friendly way. All

important areas require little effort to be accessed and the protective housing offers additional safety.

#### After Sales. A familiar word to us.

Servicing is carried out by our qualified partners worldwide. Technical support, via telephone or e-mail is available at all times. Additionally, we offer practically orientated seminars and trainings, operator meetings and workshops, that leave no questions unanswered.

#### We always take a closer look.

LAR has established its own system for guaranteeing its standards of quality. Not only do we fulfill the requirements of the ISO 9001 Norm, but we also work continually on improving our standards of quality. To enable this, we collect information about all incidents in our database, that are subsequently analysed and evaluated. Regular meetings are held to address every issue.

Setting ourselves the highest quality standards, we naturally expect our distributors to fulfill these as well. Thus, we regularly evaluate our distributors and when necessary, introduce measures to improve our collaboration with them.

#### **TOC-ANALYSIS**



From complex industry waster water to phamaceutical pure water, our TOC analysers determine the parameter quickly and precisely.

#### **COD-ANALYSIS**



With our analysers, the chemical oxygen demand is cleanly and safely determined online, without using hazardous chemicals.

#### **BOD/ TOXICITY**



We detect the BOD with the plant's own biomass and determine the BOD-Analysis with highly sensitive bacteria, fast and reliably.

#### TN<sub>b</sub>/ TP-ANALYSIS



TN<sub>b</sub> and TP are important parameters for waste water treatment. We are the only ones who offer a combination of these with TOC and COD in one system.

#### **FURTHER PRODUCTS**



LAR offers a specific solution for nearly all applications. With our protective housings, you are always on the safer side. Learn more about our product range at www.lar.com.

#### **LAR Process Analysers AG**

Neukoellnische Allee 134 D-12057 Berlin www.lar.com Phone +49 30 278 958-43 Fax +49 30 278 958-703 E-Mail export@lar.com



...

#### **BOD-ANALYSIS**

## **BioMonitor**

AREAS OF APPLICATION

**ENVIRONMENT / MUNICIPAL FACILITIES / INDUSTRY** 

**INDUSTRIES** 

ENVIRONMENTAL MONITORING / WASTE WATER TREATMENT / WASTE PROCESSING / PHARMACEUTICAL / LABORATORY / PET-ROCHEMICAL / REFINERIES / CHEMICAL / COAL AND STEEL / POWER /AIRPORTS / AUTOMOBILE / BREWERIES / PAPER MANUFACTURE / BEVERAGE / MILK PROCESSING

TYPES OF WATER

GROUNDWATER / SURFACE WATER / DRINKING WATER /
WATER INFLUENT / WATER EFFLUENT / DISCHARGE CONTROL /
INDUSTRIAL WASTE WATER / DE-ICING WATER / PROCESS
WATER / HIGH SALT CONCENTRATION / OIL-IN-WATER / COOLING
WATER / PURE WATER / BOILER FEED WATER / CONDENSATE
RETURN / PHARMA HPW / PHARMA WFI

The information and the illustrations in this brochure regarding appearance, specifications, service, measure, weight, consumption, maintenance times and so forth are approximate, in no way binding and subject to change. All information is correct at the time of publication. We reserve the right to deviate in construction, design, colour, as well as make changes in our delivery options. Pictures: ©Bigstock/AntiKsu. Version BioMonitor-1 E 3615.