





SHERA Floor Plank Color Through

- Beautiful as natural wood
- Water and fire resistant
- Not warping, Have dimensional stability
- Ready and easy for installation

Product Information

Profile	Texture	Color	Size (cm.) (Thickness*Width*Length)	Weight (kg./pc.)	Quantity (pc./sq.m.)
V-Cut Edge	Cassia	Cheznut Brown	2.5 x 15 x 300	17.75	2.22
		Wenge Brown			
	Straight Grain	Tropical Oak	2.5 x 20 x 300	23.67	1.67
		Golden Sand Teak			

Installation Steps

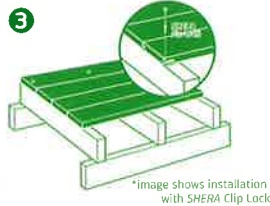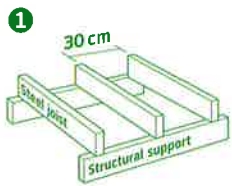


- 1 Install structural supports perpendicular with SHERA Floor Plank's direction spacing not more than 30 cm apart.
- 2 Fasten SHERA Floor Plank with screw at at 1.2 cm, from the long-side edges and 2 cm, from both wide-side edges.
- 3 Cover any mark with touch-up paints and screw head with SHERA Plug.
- 4 For Clip-lock SHERA Floor Plank series, fasten the first plank to steel stud with screw at 5 cm, from the edge. Align SHERA Clip-Lock to the other side of the plank with one of its wing slotted into the plank's groove. Screw the clip-lock to the steel studs holding the plank in place.



SHERA Fence


- Thicker, stronger, more durable
- Pre painted, beautiful in all respects (2-layered coating, painted on all sides)
- Fast, ready to install

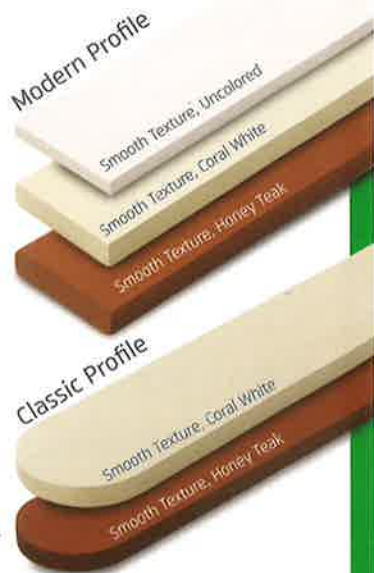

Product Information

Profile	Texture	Color	Size (cm.) (Thickness*Width*Length)	Weight (kg./pc.)
Modern	Smooth	Uncolored	1.2 x 10 x 300	5.33
		Coral White / Honey Teak	1.6 x 10 x 150	3.74
		Coral White	1.6 x 10 x 150	3.71
Classic		Honey Teak	1.6 x 10 x 100	2.46

Installation Steps

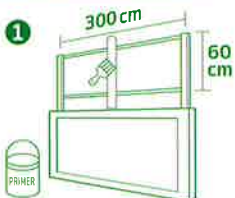

- 1 For vertical fences, install steel studs spacing not more than 60 cm apart and span length should not be more than 300 cm.
- 2 Prime uncolored SHERA Fence prior to installation.
- 3 Fasten SHERA Fence to steel frame with screw at the middle from long-side edges, every 50 cm.
- 4 Touch up all screw heads.
For Uncolored SHERA Fence : Clean up before painting.
For Colored SHERA Fence : Touch up the screw head after installed.